

Table Of Contents

Button Description	3
Battery Installation	3
Programming Your Universal Remote	
TV	4
TV Codes	4-5
VCR.....	5
VCR Codes.....	6
DBS	7
DBS Codes	7
Cable Box	8
Cable Box Codes	8
DVD•AUX.....	9
DVD Codes	9
Programming With Code Search	10
Retrieving Codes	10
TV Menu	11
DBS Menu	12
DVD Menu	13
Sleep Feature	14
Trouble Shooting.....	15
Warranty	16

**This RCA Universal Remote Is Compatible With
Most Models Of The Following Brands**
(Of Infrared Remote Controlled Components manufactured after 1990):



Button Description

INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

ON•OFF

The ON•OFF button operates the same as your original remote. Note: Some RCA, GE and ProScan models require you to press the device button to turn the device on and the ON•OFF button to turn the device off.

CODE SEARCH

Used to program the remote or to search through codes.

TV, VCR, DVD•AUX, DBS•CABLE

The TV, VCR, DBS•CABLE, and DVD•AUX buttons are used to select the device you want to control.

REVERSE, PLAY, FORWARD, RECORD, STOP, PAUSE

The REVERSE, PLAY, FORWARD, RECORD, STOP, and PAUSE buttons operate the same as on your original VCR or DVD remote. You must press the RECORD button **twice** to begin recording.

TV•VCR

When in VCR mode, the TV•VCR button operates the TV•VCR function of your VCR.

ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process, finally, it is used in Menu Mode as a Select or OK.

VOL & CH

The VOL (Volume) and CH (Channel) buttons increase or decrease the channel numbers or volume.

MUTE

To MUTE the volume on the TV.

PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back or Recall button on your original remote.

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes or channel numbers.

MENU

The MENU button calls up the TV, DBS and DVD set up menus.

SLEEP

The SLEEP button allows you to set a time to turn off the TV automatically.

Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries.

To install the batteries:

1. On the back of the remote, push and slide the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.
3. Press and slide the battery cover back into place.

Note: Reprogramming may be required after batteries are removed.

Programming For TV

1. Manually turn on the TV.

Find the three-digit code for your TV in the code list below.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

CODE
SEARCH



INDICATOR
LIGHT



3. Press and release the **TV** button (The **INDICATOR LIGHT** will blink then remain lit).




TV

(BLINK)



4. Enter the code using the Number Buttons. After your code is entered, the **INDICATOR LIGHT** will turn off.

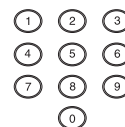

(OFF)



5. Aim the remote at your TV and press the **ON•OFF** button. Your TV should turn off.

ON•OFF

 


Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.

6. With your TV on, press **CH+**. If the TV responds, no further programming is required.



7. Enter your code here for easy reference.



TV Code List

Abex	172	Gibraltar	004, 151
Admiral	001, 173	Grundy	038, 046, 171
Advertura	174	Hallmark	004, 006
Aiko	016	Harvard	038
Aikai	042	Hitachi	004, 006, 012, 013, 059, 060
Alleron	046061, 135, 136, 137, 138, 139, 140, 141	
Amtron	038142, 143, 144, 145, 146, 148, 150, 179	
Anam National	003, 038	IMA	038
AOC	004, 005, 006, 007	Infinity	062
Audiovox	038	Janeil	174
Belcor	004	JBL	062
Bell & Howell	001, 083, 162	JCB	002
Bradford	038	JC Penney	000, 004, 005, 006, 008, 022
Brokwood	004052, 054, 058, 063, 064, 072	
Candle	004, 006, 008, 174087, 105, 171, 172, 181	
Celebrity	002	Jensen	004, 006
Citizen	004, 006, 008, 016	JVC	013, 012, 054, 060, 065, 066
.....038, 105, 171, 174, 177	067, 123, 157, 158, 159, 182	
Colortyme	004, 006	Kawasho	002, 004, 006
Concerto	004, 006	Kenwood	004, 006, 019
Contec / Cony	012, 013, 038	Kloss Novabeam	068, 069, 174, 183
Craig	038	KTV	038, 070, 171, 177
Crown	038, 171	LG (Goldstar)	004, 005, 006, 012, 019
Curtis Mathes	000, 004, 006056, 057, 058, 155, 156, 171, 172	
.....015, 105, 162, 171		Loewe	062
CXC	038	Logik	083
Daewoo	004, 006, 005, 016	Luxman	004, 006
.....017, 127, 171, 190		LXI	000, 006, 049, 062
Daytron	004, 006, 171072, 073, 162, 181	
Dimensia	000	Magnavox	004, 006, 008, 019, 062
Dumont	004, 151068, 069, 075, 076, 077, 088, 130	
Dynatech	004131, 132, 133, 134, 183, 219, 235	
Electroband	002	Majestic	083
Electrohome	002, 003, 004, 006, 019, 022	Marantz	004, 006, 062
Emerson	004, 006, 012, 023, 024, 025	Megatron	006, 059
.....026, 027, 028, 029, 030, 031, 032		Memorex	001, 006, 082, 083, 162
.....033, 034, 035, 036, 037, 038, 039		MGA	004, 005, 006, 019
.....041, 042, 043, 044, 046, 047, 123	022, 051, 079, 080, 082	
.....124, 162, 179, 171, 177, 191		Midland	054, 151, 171, 172, 181
Envision	004, 006	Minutz	052
Fisher	048, 049, 051, 162, 180	Mitsubishi	004, 005, 006, 019, 022
Fujitsu	046051, 079, 080, 081, 082, 125, 135	
Funai	038, 046	Montgomery Ward	003, 173
Futuretec	038	Motorola	003, 173
GE	000, 003, 004, 006, 022	MTC	004, 005, 006, 105
.....052, 054, 055, 087, 164, 165		Multitech	038
.....166, 167, 168, 181		NAD	006, 072, 185

TV Code List Continued

NEC003, 004, 005, 006
Nikko006, 016
NTC016
Onwa038
Optimus185
Optonica095, 173
Orion035, 191
Panasonic003, 054, 062, 170
Philco003, 004, 005, 006, 008, 012
Philips019, 062, 068, 069, 075, 077, 183
Philips003, 004, 008, 012, 019, 062
Pilot068, 069, 075, 076, 086, 087, 088
Pioneer004, 171
Pioneer004, 006, 090, 091
Portland092, 136, 179, 185
Price Club004, 005, 006, 016, 171
Prism105
Proscan054
Proscan000, 181
Proton004, 006, 012, 093
Pulsar151
Pulsar004
Quasar003, 054, 070
Radio Shack / Realistic000, 004, 006
Radio Shack / Realistic012, 038, 049, 095, 162, 171
RCA000, 003, 004, 005, 006, 007
RCA019, 096, 098, 099, 100, 101, 102, 103
RCA129, 179, 181, 188, 190, 203, 212, 233
Runco151
Sampo004, 006, 171, 172
Samsung004, 005, 006, 012, 015, 017
Samsung019, 104, 105, 106, 171, 172
Sansui191
Sanyo004, 048, 049, 080, 162, 169, 180
Scotch006
Scott004, 006, 012, 024, 035, 038, 046
Sears000, 004, 006, 013, 019, 046, 048
Sears049, 051, 066, 072, 162, 180, 181, 189

Sharp004, 006, 012, 029, 095
Sharp111, 112, 113, 122, 171, 173
Shogun004
Signature001, 083
Simpson008
Sony002, 218
Soundesign004, 006, 008, 038, 046
Squareview189
SSS004, 038
Starlite038
Supre-Macy174
Supreme002
Sylvania004, 006, 008, 019, 062, 068, 069
Sylvania075, 076, 077, 088, 116, 161, 183
Symphonic033, 038, 189
Tandy173
Tatung003
Technics054
Techwood004, 006, 054
Teknika004, 005, 006, 008, 012, 013, 016
Teknika038, 046, 076, 082, 083, 105, 170, 171
Tera004, 012, 093
TMK004, 006
Toshiba049, 072, 105, 118, 160, 161, 162
Totevision171
Universal052, 087
Victor066, 182
Vidtech004, 005, 006
Viking174
Wards000, 001, 004, 005, 006, 019, 024
Wards033, 046, 052, 062, 068, 069, 075
Wards076, 083, 095, 087, 088, 119, 120
Yamaha004, 005, 006, 019
Zenith004, 051, 083, 152
Zenith151, 153, 154, 217

VCR Code List

Admiral001
Adventura026
Aiko027
Alwa026
Akai003, 005, 007, 008, 113, 112, 111
American High021
Asha013
Audio Dynamics009, 010
Audiovox014
Bell & Howell011
Beaumarck013
Broksonic012, 025
Calix014
Candle013, 014, 015, 016, 017, 018, 019
Canon021, 022
Capehart020, 110
Carver062
CCE027, 061
Citizen013, 014, 015, 016
Citizen027, 017, 018, 019
Colortyme009
Colt061
Craig013, 014, 023, 061
Curtis-Mathes000, 009, 013, 016
Curtis-Mathes018, 021, 022, 024, 115
Cybernet013
Daewoo015, 017, 019, 025
Daewoo026, 027, 028, 110
Daytron110
DBX009, 010
Dimensia000
Dynatech026
Electrohome014, 029
Electrohome014
Emerson012, 014, 015, 021, 024, 025
Emerson026, 029, 030, 031, 032, 033, 034, 036
Emerson037, 038, 039, 040, 041, 042, 044, 045
Fisher046, 047, 065, 105, 113, 116, 117, 130
Fisher011, 023, 048, 049
Fisher050, 051, 052, 118
Fuji021, 119
Funai026
Garrard026
GE000, 013, 021, 022, 053, 115, 120
Grandiente026
Harley Davidson026
Harman Kardon009
Harwood061
Headquarter011
Hitachi055, 056, 057, 107, 111, 120
Hi-Q023
Instant Replay021
JCL021
JC Penney009, 010, 011, 013, 014
JC Penney021, 022, 060, 107, 118
Jensen055, 056, 111
JVC009, 010, 011, 018, 111, 123
Kenwood009, 010, 011, 016, 018, 123, 111
KLH061
Kodak014, 021
LG (Goldstar)009, 014, 018, 054
Lloyd026
Logik061
LXI014
Magnavox021, 022, 062, 063, 104, 108, 124
Magnin013
Marantz009, 010, 011, 016, 018
Marantz021, 022, 062, 064
Marta014
Matsushita021
MEI021
Memorex001, 011, 013, 014
Memorex021, 022, 023, 026, 104
MGA029, 065, 113
MGN Tech013
Midland053

Minolta055, 056, 107
Mitsubishi029, 055, 056, 065, 066
Mitsubishi067, 068, 069, 070, 071
Montgomery Ward001, 075
Motorola001, 021
MTC013, 026
Multitech013, 016, 026, 053, 061
NEC009, 010, 011, 018, 064
NEC076, 078, 079, 111, 123
Nikko014
Noblex013
Olympus021
Optimus001, 014
Optonica096
Orion031
Panasonic021, 022, 109, 125, 126, 127
Pentax016, 055, 056, 107, 120
Pentax Research018
Philco021, 022, 062, 063
Philips021, 022, 062, 096, 124
Pilot014
Pioneer010, 055, 080, 081, 123
Portland016, 017, 019, 110
ProScan000
Protec061
Pulsar104
Quarter011
Quartz011
Quasar021, 022, 125
RCA000, 003, 013, 021, 022, 055, 056
RCA082, 083, 084, 085, 086, 087, 088
RCA089, 090, 091, 107, 115, 120, 125
Radio Shack / Realistic001, 011, 013, 014
Radio Shack / Realistic021, 022, 023, 026
Radio Shack / Realistic029, 049, 050, 096
Radix014
Randex014
Ricoh128
Runco104
Samsung013, 015, 033, 053, 055, 112
Sanyo001, 104
Sansui010, 092, 111, 123
Sanyo011, 013, 023
Scott012, 015, 025, 032, 038, 065, 116
Sears011, 014, 021, 023, 028, 048
Sears049, 050, 051, 055, 056, 107, 118
Sharp001, 017, 029, 094, 095, 096, 097
Shintom056, 061, 098
Shogun013
Signature001
Singer021, 061, 128
Sony098, 099, 119
STS021, 107
Sylvania021, 022, 026, 062, 063, 065, 124
Symphonic026
Tandy011
Tashiko014
Tatung111
Teac026, 085, 111
Technics021, 026, 100, 129
Teknika014, 021, 022, 026, 100, 129
Toshiba015, 049, 051, 055, 065, 116
Totevision013, 014
TMK013, 024, 047
Unitech013
Vector Research009, 010, 015, 016
Victor010
Video Concepts009, 010, 015, 016, 113
Videosonic013
Wards001, 013, 014, 015, 021, 022
Wards023, 029, 055, 056, 026, 061
XR-1000096, 101, 102, 103, 107, 116
Yamaha009, 010, 011, 018, 111
Zenith098, 104, 119, 128

Programming For VCR


1. Manually turn on the VCR.

Find the three-digit code for your VCR in the code list below.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.




3. Press and release the **VCR** button (The **INDICATOR LIGHT** will blink then remain lit).

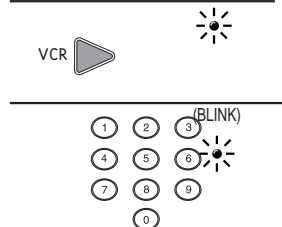


After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your VCR and press the **ON•OFF** button. Your VCR should turn off.

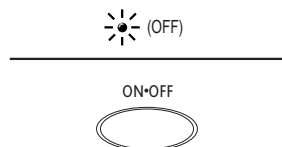


Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.

 6. With your VCR on, press **CH+**. If the VCR responds, no further programming is required.



 7. Enter your code here for easy reference.



Programming For DBS

1. Manually turn on the DBS.

Find the three-digit code for your DBS in the code list below.

 
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **DBS•CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).



4. Enter the code using the Number Buttons.



After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your DBS and press the **ON•OFF** button. Your DBS should turn off.




Note: If your DBS does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.

6. With your DBS on, press **CH+**. If the DBS responds, no further programming is required.



7. Enter your code here for easy reference.

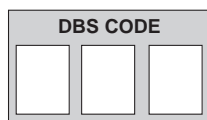

DBS Code List

Alphastar	079	Panasonic	075
Echostar (Dish System)	089	Philips	085
Echosphere (Dish Net)	078	Primostar	076
GE	071, 080, 081	Proscan	071, 080, 081
Hitachi SYS I	084	RCA	071, 080, 081
Hitachi SYS II	083	Sony	072
Hughes	077, 083, 090	Toshiba	073
Magnavox	085	Uniden	086
JVC	082		

Programming For Cable Box

1. Manually turn on the Cable Box.

Find the three-digit code for your Cable Box in the code list below.

 
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **DBS•CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).




4. Enter the code using the Number Buttons.




After your code is entered, the **INDICATOR LIGHT** will turn off.

 5. Aim the remote at your Cable Box and press the **ON•OFF** button. Your Cable Box should turn off.




Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.

 6. With your Cable Box on, press **CH+**. If the Cable Box responds, no further programming is required.



7. Enter your code here for easy reference.

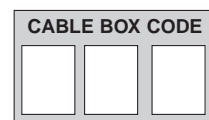

Cable Box Code List

ABC	001, 003, 004, 005, 006, 007	Philips	011, 012, 013, 019
Antronix	008, 009	025, 030, 031, 032
Archer	008, 009, 010, 011	Pioneer	033, 034
Cabletenna	008	RCA	000, 047, 049
Cableview	008	Realistic	009
Century	011	Regal	022, 035
Citizen	011	Regency	017
Colour Voice	012, 013	Rembrandt	003
Comtronics	015	Samsung	034
Contec	016	Scientific Atlanta	006, 036, 037, 038
Eastern	017	Signal	018
Garrard	011	Signature	003
GC Electronics	009	Sprucer	000
Gemini	018, 019	Standard Component	039
General Instrument	001, 003, 049	Starcom	001, 007, 018
Hamlin	035	Stargate	018
Hitachi	003	Starquest	018
Jasco	011	Tocom	004, 023
Jerrold	001, 003, 005, 007	Tusa	018
.....	018, 023, 024, 046, 049	TV86	027
Magnavox	025	Unika	008, 009, 011
Movie Time	027, 028	United Cable	001
NSC	027, 028	Universal	008, 009, 010, 011
OAK	029, 016	View Star	015, 016, 025, 027
Panasonic	000, 048	Zenith	050, 051

The DVD•AUX Button


The DVD•AUX Button allows you to assign another TV, VCR, DBS, Cable Box or DVD. The DVD•AUX Button is defaulted to RCA/DVD systems. To assign another device to the DVD•AUX button:

1. Manually turn on the the device you wish to assign to the **DVD•AUX** button (TV, VCR, Cable Box, DVD or DBS System).

Find the three digit code for the device you wish to program in the code list

Device	Page
TV	4-5
VCR	6
DBS	7
Cable Box	8
DVD	9

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.
3. Press and release the **DVD•AUX** button. The **INDICATOR LIGHT** will blink.
4. Press **TV**, **VCR** or **DBS•CABLE** for the device you want to program.
For DVD press **VCR**.
For DBS press **DBS•CABLE**.
For Cable Box press **DBS•CABLE**.
The **INDICATOR LIGHT** will blink again then remain lit.

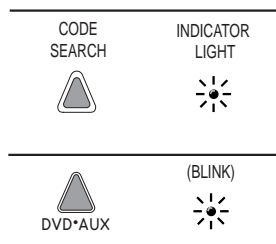

5. Enter the code using the Number Buttons.


After your code is entered, the **INDICATOR LIGHT** will turn off.

6. Aim the remote at your device and press the **ON•OFF** button. Your device should turn off.

Note: If your device does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.

7. With your device on, press **CH+**. If the device responds, no further programming is required.


8. Enter your code here for easy reference.

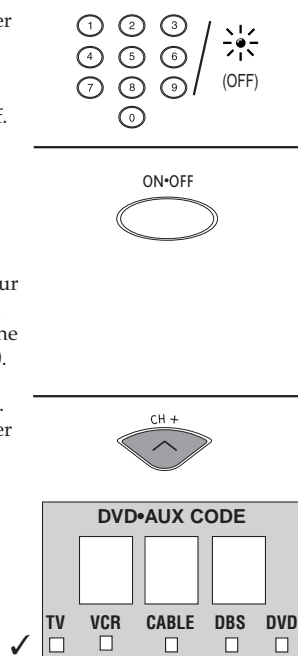

Programming With Code Search

If your TV, VCR, DVD, DBS or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.


1. Turn on the device you wish to program.
2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
3. Press and release the device button for the device you are programming (**TV**, **VCR** or **DBS•CABLE**). The **INDICATOR LIGHT** will blink once then remain lit. DVD codes are programmed under the VCR button.
Note: For AUX, press **DVD•AUX** then the device button you are assigning to DVD•AUX.
4. Press and release **ON•OFF** until your device turns off.
Important: You may have to press **ON•OFF** up to 200 times.
5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.

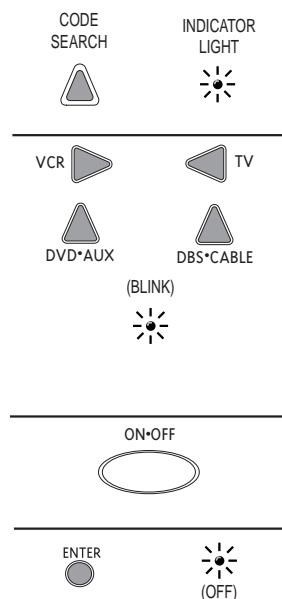

Retrieving Codes

If you need to find the three-digit code for your TV, VCR, DBS, DVD or Cable Box after your device is set-up using Code Search, use this procedure.

1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
2. Press and release the device button for the device's code you are retrieving (**TV**, **VCR** or **DBS•CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.
Note: For AUX, press **DVD•AUX** then the device button for the code you are retrieving.
3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.
4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.
5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers in the code.

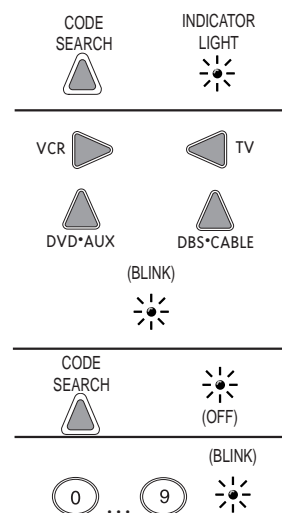

DVD Code List

Aiwa	350	Pioneer	165
Hitachi	351	ProScan	160
JVC	161, 352	RCA	160
Konka	353, 354	Sanyo	359
Magnavox	162, 356, 357	Sony	166, 360, 361
Mitsubishi	163	Toshiba	167, 362, 363
Panasonic	355	Zenith	364
Philips	162, 356, 357		

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.

1. Push the **TV** button on the remote.
2. Push the **MENU** button.

This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in TV Menu Mode.


While in **TV MENU** these buttons will function as follows:

VOL UP/DOWN buttons will operate as **CURSOR RIGHT/LEFT**.

CH+/- keys will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan TVs pushing the **MENU** button will select the high lighted item. The numeric buttons may also be used to select the **MENU** choice. The **ENTER** key may also be used to select all menu choices.

Note: Not all functions in competitive models and brands of televisions may be fully supported.

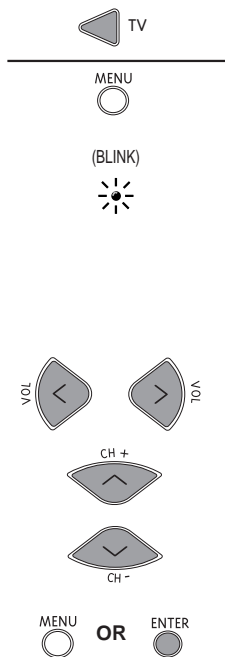

To exit the Menu Mode and clear the **TV** screen push the **TV** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of TV Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.
3. ZENITH: Push the menu button a second time to move from the **SET-UP MENU** to the **VIDEO MENU**.



The DBS Menu is used to navigate thru the Guide screens, to make changes in the DBS settings such as channel lists, passwords, etc.

1. Push the **DBS•CABLE** button on the remote.
2. Push the **MENU** key.

This puts the remote in DBS Menu Mode. The DBS Menu should now be visible on the television. The **INDIC TOR LIGHT** will blink continuously to indicate the remote is now in DBS Menu Mode.


While in DBS MENU MODE these buttons will function as follows:

VOLUME UP/DOWN button will operate as **CURSOR RIGHT/LEFT**.

CH+/- button will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan DBS systems pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice. The **ENTER** key may also be used to select all menu choices.

Note: Not all functions in competitive models and brands of DBS systems may be fully supported.

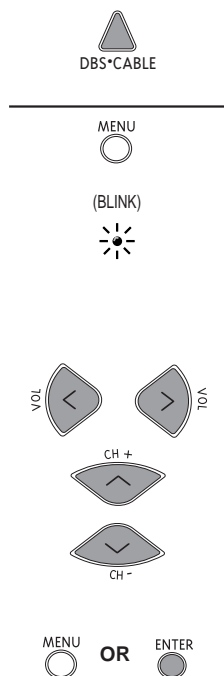

Push the **DBS•CABLE** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DBS Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the DBS•CABLE Menu Mode after 10 seconds of inactivity with no keys being pushed.

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.



DVD Menu Function

The DVD Menu is used to navigate thru the Navigation screens, to change settings such as language, sub-titles, etc.

Entering the DVD Menu Mode:

1. Push the **DVD•AUX** button on the remote.
2. Push the **MENU** key.

This puts the remote in DVD Menu Mode. The DVD Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DVD Menu Mode.

While in DVD MENU MODE these buttons will function as follows:

VOLUME UP/DOWN button will operate as **CURSOR RIGHT/LEFT**.

CH+/- button will operate as **CURSOR UP/DOWN**.

Pushing the **ENTER** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice.

Note: Not all functions in competitive models and brands of DVD systems may be fully supported.


Exiting the DVD Menu Mode:

Push the **DVD•AUX** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DVD Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the DVD•CABLE Menu Mode after 15 seconds of inactivity with no keys being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.

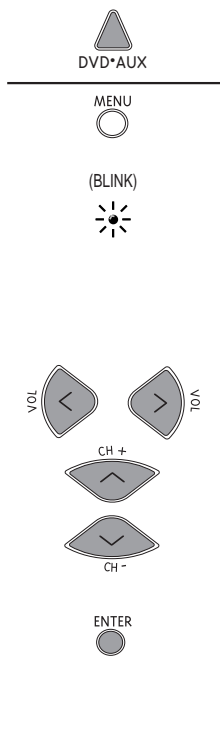


Sleep Feature

This feature will turn off your TV at the time you choose from 1 to 99 minutes.

To Program Sleep Feature:


1. Press and hold the **SLEEP** button. **INDICATOR LIGHT** will stay lit. Release the **SLEEP** button.
2. Enter time in minutes using the numerical key pad. Indicator light should go off. (Minutes 1 thru 9: press **0** before the actual number Maximum: 99 minutes)
3. Leave remote aimed at television. (Sleep Feature will not work unless remote is left aimed at television.)

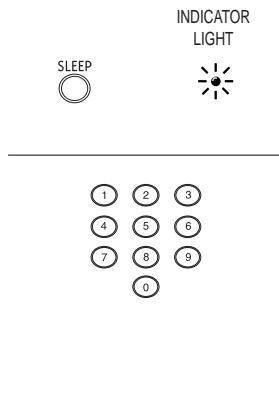

To Turn Off The Sleep Timer:

Sleep timer program will be cancelled and reset to zero by either of the following:

1. Press and hold **SLEEP** button until **INDICATOR LIGHT** blinks or press **ON•OFF** button, turning TV OFF.

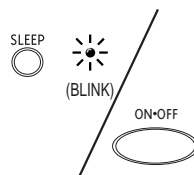

Trouble Shooting

Problem	Solution
Indicator light not blinking when you press any button	A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed.
The Remote does not operate your device	A) Try all the codes listed for your brand. B) Try the Code Search method (page 10).
Not performing commands properly	Start Code Search over again to locate the proper code.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCA TV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a button	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed (See page 3).
Sleep feature does not work	Remote must remain aimed at television after sleep is set in order for it to work.

Note: Reprogramming may be required after batteries are removed.

Help Line (USA Only)

If you need additional set-up help, call our toll-free Help Line at 1-800-420-7729, or contact the RCA Help Center at: www.rca.com

Limited 90 Day Warranty

Thomson multimedia Inc. warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage prepaid to the Product Exchange Center address for prompt, no charge replacement with a current equivalent. This replacement is Thomson multimedia Inc.'s sole obligation under this warranty. Thomson multimedia Inc. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

© 2001 Thomson multimedia Inc.

Product Exchange Center

11721 Alameda Ave.

Socorro, TX 79927

PRCU410MS Rev0701

Trademark(s) ©Registered Marca(s) Registrada(s)

Made in Indonesia

www.rca.com



First Class
Postage
Required

Thomson multimedia Inc.
2000 Clements Bridge Road
Deptford, NJ 08096-2011

Attn: Remote Control
Purchase Registration

RCU410MS Product Registration

Please complete and return this Purchase Registration Card right away. This information will help us get to know and service our customers better.

1. ☐ Mr. ☐ Mrs. ☐ Ms. Name: _____

Address: _____

2. Model: **RCU410MS**

3. Date of Purchase/Receipt as Gift: _____ 4. Price: \$ _____

5. Age of Purchaser/Gift Recipient:

☐ 16-25 ☐ 26-35 ☐ 36-45 ☐ 46-55 ☐ 56+

6. What specific need did the Universal Remote help you resolve?

☐ A. Replacing A Lost Remote ☐ B. Replacing A Broken Remote
☐ C. Consolidating Remotes ☐ D. Adding an Extra Remote

7. Where will this remote primarily be used?

and with what brand? TV: _____

VCR: _____ Cable Box: _____

☐ A. Kitchen ☐ B. Bedroom ☐ C. Family Room/Living Room

☐ D. Other _____

8. How did you become aware of this remote?

☐ A. Advertisement ☐ B. Salesperson ☐ C. Store Display

☐ D. Received as a Gift ☐ E. Friend or Relative _____

☐ F. Other _____

9. What other brands did you consider buying?

☐ A. None

☐ B. RCA ☐ C. One For All ☐ D. Zenith

☐ E. Magnavox ☐ F. Sony ☐ G. Other _____

10. What factors most influenced this purchase? (Check up to 3)

☐ A. Brand ☐ B. Features ☐ C. Recommendation

☐ D. Price ☐ E. Received as a Gift ☐ F. Other _____

Thank you for filling out this card. This information will help us better serve you and others who purchase RCA Consumer Electronics Products. We will not share your information with any other companies.

Inside Card

Inside Card