

Universal RCU

Remote Key functions

Registry # 17490 (4452h)



1. **SETUP:** Used to enter program mode, when you can enter a code for another piece of electrical equipment such as your TV or VCR. A complete set of codes is supplied with this RCU.
2. **STANDBY:** Press to switch the converter box on and off. When not in use it is recommended that you switch the converter box off to save your power bill and the environment. An automatic power down function is also available in the on-screen menu.
3. **STB:** This puts the RCU in STB operation mode if you have been in TV or AUX mode.
4. **AUX:** This puts the RCU in AUX operation mode if you have been in TV or STB mode. AUX can be used for another piece of equipment such as a Satellite receiver.
5. **TV/STB:** Toggles between TV and set top box mode.
6. **INFO:** Press to display information about the current channel.
7. **MENU:** Press to display the on-screen menus, or to revert to the previous menu.
8. **EXIT:** Press to exit from the set-up menus.
9. **▲:** Used to navigate up in the on-screen menus.
10. **CH+:** Press to view the next channel. This will not work if you are in any of the on-screen menus.
11. **OK:** Used to select or confirm an item when using the on-screen menus.
12. **▶:** Used to navigate right in the on-screen menus.
13. **CH-:** Press to view the previous channel. This will not work if you are in any of the on-screen menus.
14. **▼:** Used to navigate down in the on-screen menus.
15. **RECALL:** Press to return to the last channel you were watching.
16. **PAUSE:** Used when operating a VCR, DVD or DVR.
17. **FAST FORWARD:** Used when operating a VCR, DVD or DVR.
18. **PLAY:** Used when operating a VCR, DVD or DVR.
19. **JUMP FORWARD:** Used when operating a DVD or DVR.
20. **RECORD:** Used when operating a VCR or DVR.
21. **CAPTION:** Press to view closed captions when broadcast with the channel. Press to select services 1-6.
22. **AUDIO:** Often more than one audio track is broadcast with the picture, such as other languages. Press to toggle between different audio tracks.
23. **NUMBER KEYS:** Press to directly select a particular channel instead of using the UP and DOWN button.
24. **ENTER:** Used when entering a PIN number. Press to input a dash into your channel selection eg. 23-1.
25. **MUTE:** Press to mute the sound. Pressing again will restore the sound.
26. **TV:** This puts the RCU in TV operation mode if you have been in STB or AUX mode.
27. **GUIDE (CH 3/4):** Press this key to show the on-screen electronic program guide (EPG) on Model 1010 only. (Press and hold for 3 seconds to select NTSC Channel 3 or Channel 4 on Models 1020, 1020A, 1030, 1050, and 1080).
28. **MACRO:** Patented Macro capability for one-touch access to multiple key commands for quick activity switching.
29. **REPEAT:** Used when operating a DVD player.
30. **VOL+:** Press to increase the audio volume. (Models 1020A-1080, only adjustable through RCA audio out jacks)
31. **◀:** Used to navigate left in the on-screen menus.
32. **VOL-:** Press to decrease the audio volume. (Models 1020A-1080, only adjustable through RCA audio out jacks)
33. **PIP:** Picture in Picture. Available on some TVs and DVRs.
34. **JUMP BACKWARDS:** Used when operating a DVD or DVR.
35. **SKIP BACKWARDS:** Used when operating a DVD or DVR.
36. **STOP:** Used when operating a VCR, DVD or DVR.
37. **ASPECT:** Press to change the picture output between NORMAL (4:3), Zoom (4:3 from 16:9), Wide (for 16:9 TV set) and Cinema (4:3 from 16:9).
38. **SIGNAL:** Press to show the signal strength from your antenna.
39. **INPUT:** Used to select the input on your DVR.