

BOSE

SOUNDTOUCH® 300 SOUNDBAR



OWNER'S GUIDE • BRUGERVEJLEDNING
BEDIENUNGSANLEITUNG • GEBRUIKERSHANDLEIDING
GUÍA DEL USUARIO • KÄYTTÖOHJE • NOTICE D'UTILISATION
MANUALE DI ISTRUZIONI • KEZELÉSI ÚTMUTATÓ
BRUKERVEILEDNING • PODRĘCZNIK UŻYTKOWNIKA
MANUAL DO PROPRIETÁRIO • BRUKSANVISNING
កម្រិតដ៏ស្រស់ • 사용자 안내서 • 用户指南 • 使用者指南 • 取扱説明書 • دليل المالك

Universal remote control buttons

Use the remote control to control sources connected to your TV or soundbar, adjust the volume and bass, change channels, use dialogue mode, use playback functions and enable cable/satellite box functions.

Powers on/off the soundbar and controls auto-wake (see page 33)

Source selection

Function buttons (see page 33)

Displays the Internet TV home page or the current source's home menu

Lists recorded DVR programs

Numeric keypad. Numbers 1 - 6 can play SoundTouch® presets

Adjusts bass setting (see page 32)

Dialogue mode (see page 33)

Powers on/off a selected source

Selects a source connected to your TV

Navigation pad

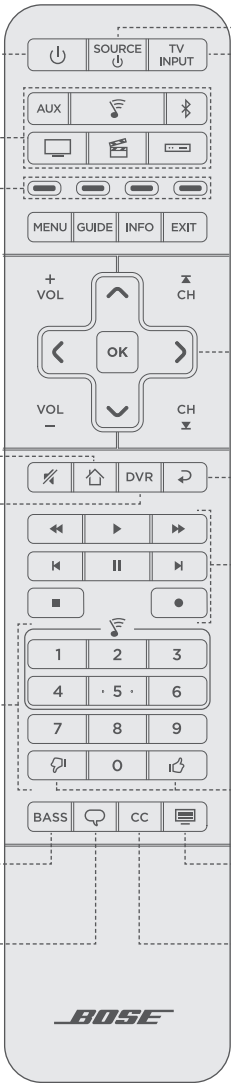 
Previous channel, chapter or track

Playback controls

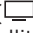
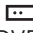

Press to like/dislike currently playing selection (for use with participating music services)

Teletext mode

Closed captioning







Programming the universal remote control

The universal remote control has four programmable source buttons (, **AUX**, , and ). You can program these buttons to control your TV, cable/satellite box, DVD or Blu-ray Disc™ player, game system, DVR or other auxiliary source by entering the code for your source's brand. There may be several codes for your source. You may need to perform this procedure multiple times to locate the correct code.

Locate the code

1. Power on your source.
2. Locate the code for your source's brand in the Universal Remote Control Setup Guide (provided).

Enter the code


1. On the remote control, press and hold the appropriate source button (, **AUX**, , or ) until all six source buttons glow, then release. For example, to program your TV, press and hold  until all six source buttons glow, then release. The appropriate source button continues to glow.
2. On the number keypad, enter the code for your source's brand and press **vol** ⁺.


Test the code

1. Test the source for basic functions by following the instructions for your source:
 - **TV:** press the channel buttons. Press **MENU**. The settings menu appears. Press **◀** and **▶** to navigate.
 - **Cable/satellite box:** press **GUIDE**. The programming guide appears. Press **◀** and **▶** to navigate.
 - **DVD or Blu-ray Disc™ player:** press **GUIDE**. The settings menu appears. Press **◀** and **▶** to navigate.
 - **Game system:** press **◀** and **▶** to navigate through your menu.
2. Based on your source's response to basic functions:
 - **Remote responds accurately:** press **EXIT** to exit programming and save your settings.
 - **Remote does not respond or does not respond accurately:**
 - **If your source button glows:** press **vol** ⁺ to move to the next code. Repeat steps 1 - 2 in "Test the code." You may need to repeat this procedure 30 or more times. If all six buttons blink three times, you have cycled through all codes for your source.
 - **If your source button is off:** your remote exited programming mode. Repeat steps 1 - 2 in "Enter the code" and steps 1 - 2 in "Test the code."

Note: Your source may not be compatible with universal remote controls or may not accept IR (infrared) signals. Refer to your source owner's guide for more information.


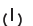
Customizing the power button

You can customize the power button  on your remote control to power on/off your soundbar, TV and another source simultaneously.

1. Program your remote control to control your TV and source (see page 25).
2. Press and hold  and the appropriate source button simultaneously for 10 seconds until both buttons flash three times.

Resyncing your source and TV

After customizing the power button, your source and TV may become out of sync and not power on/off simultaneously. Use the following steps to resync the system.

1. Press the source button for the source that is out of sync.
2. Press  to power on/off the source.
3. Press .

Your sources power on/off simultaneously.

Programming a non-Bose remote control

You can program a non-Bose remote control, such as your cable/satellite box remote, to control the soundbar. Refer to your non-Bose remote control owner's guide or cable/satellite website for instructions.

Once programmed, the non-Bose remote controls basic functions such as power on/off and volume.

Note: The non-Bose remote must be able to send IR (infrared) signals to control the soundbar.