



## **OARUSB04 User's Guide**

4-Device Universal Remote with  
One For All SmartControl


Introduction.....	1
Installing Batteries.....	1
Programming Your Remote.....	2
Direct Code Setup.....	3
Auto Code Search.....	4
Auto Code Search Troubleshooting.....	4
Tour of the Remote .....	5
One For All SmartControl .....	8
To customize Watch TV settings: .....	8
To customize Watch Movie settings: .....	9
Using One For All SmartControl .....	10
Using the TV and AUDIO INPUT Keys.....	11
Advanced Features.....	12
Learning .....	12
Activities.....	14
Checking the Programmed Codes .....	16
Resetting the Remote.....	16
Troubleshooting .....	17
Additional Information.....	18
FCC Statement .....	18
Care and Maintenance .....	19
Battery Precautions .....	19
12 Month Limited Warranty .....	20



# Introduction

The One For All SmartControl Universal Remote revolutionizes home entertainment by making it easier than ever to control everything in your home theater. This remote controls 2 activities—watch TV and watch movie—involving multiple devices in your home theater. The One For All SmartControl Remote automatically puts you in control of the right devices to change channels, control volume... virtually everything you need to do when you're watching TV or watching a movie. The One For All SmartControl Remote also lets you power the devices you need for each activity in a few simple steps.

And with One For All SimpleSet setup, programming the remote is as easy as 1-2-3 (see the One For All SimpleSet guide that came with this remote for more information).

## Installing Batteries

1. On the remote control's back, push the  symbol on the battery compartment cover to slide the cover off.
2. Insert 2 new AAA alkaline batteries (not included). Match the + and – marks on the batteries to the + and – marks in the battery case, then insert the new batteries.

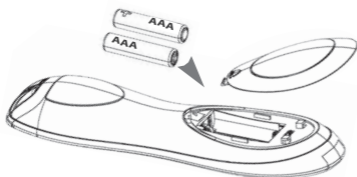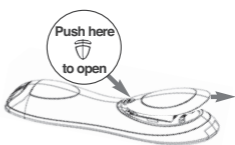

3. Slide the battery cover back into place. The tab should click when the cover is locked.

### **Battery Precautions:**

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

# Programming Your Remote

The One For All SmartControl Universal Remote makes programming your remote as easy as 1-2-3 with One For All SimpleSet setup. The One For All SimpleSet Guide that came with this remote tells you how to use One For All SimpleSet setup to get started.

If you have problems using One For All SimpleSet setup to program the remote for one or more of your devices, you can use one of the other programming methods described in the following sections: Direct Code Setup or Code Search.

## What Mode Should I Use For My Device?

You can set up the following devices within the 4 device modes (TV, STB, DVD, and AUDIO).


Just press the corresponding device key.

MODE	CODE LISTING	DEVICE TYPE
TV	TV	Television / HDTV / LCD / Plasma / Projector / Rear Projector
	Satellite	Satellite Receiver / Set-Top Box / IPTV / DVB-S / DVB-T / SAT-HDD
STB	Cable	Cable Converter / Set-Top Box / IPTV / DVB-C
	Video Accessory	Media Centers / AV Accessories / AV Selectors / Game Consoles (Xbox, Playstation, etc.)
	Digital Media Receiver	Streaming Players (AppleTV, Roku, etc.)
DVD	DVD	DVD Player / DVD-R / Blu-ray / DVD Home Cinema / DVD Combo / DVD-HDD
	VCR	VCR
AUDIO	Audio Amplifier	Audio / Amplifier / Active Speaker System
	Audio Accessory	Audio / Miscellaneous Audio
	Audio Receiver	Audio / Audio Receiver-Tuner-Amplifier / (DVD) Home Cinema


*continues on next page...*

## Direct Code Setup

1. Manually turn on your device (your TV, DVD player, etc.).

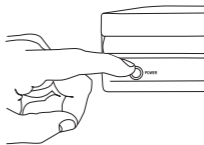

2. Find the code for your device in the Code List. Codes are listed by device type and brand name. The most popular code is listed first. Make sure your device is switched on (not on standby).

3. Press and hold the **SETUP** /  key until the TV key flashes twice.




4. Press the device key for the device you want to program (for example, for a TV, press **TV**).



**Important:** If you're programming a DVD player, Blu-ray player, or MP3 player/dock, make sure there's something playing before you start programming the remote.

5. Enter the first code listed for your device type and brand (for an Hitachi TV, for example, you'd press **1 6 4 3**)



6. Point the remote at the front of the device and press .

**If your device turns off:**

That's it! You've programmed the remote for this device. Test other functions with the remote to make sure they work (for example, the play/pause/reverse/forward keys with a DVD player). If they don't, try the next code listed for your brand.


**If your device does NOT turn off:**


Repeat steps 1 - 6 trying the next code listed for your brand.

If you can't find a code that operates your device, try the code search method described next or go to [SimpleSet.com](http://SimpleSet.com).

## Auto Code Search

1. Manually turn on your device (your TV, DVD player, etc.).

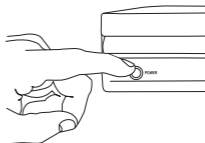

2. Press and hold the **SETUP** /  key until the TV key flashes twice.




3. Press the device key for the device you want to program (for example, for a TV, press **TV**).



**Important:** If you're programming a DVD player, Blu-ray player, or MP3 player/dock, make sure there's something playing before you start programming the remote.

4. Press **OK/ENTER**.
5. Point the remote at your device and watch for your device to turn off. When your device turns off, press **OK/ENTER** on the remote immediately.

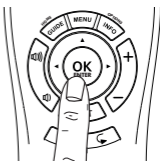

During the code search, the remote sends a different power off signal automatically every 3 seconds, going through all the brands stored in its memory.

6. Test your device with the stored code to make sure it performs the commands you want it to perform. If it doesn't, see the Code Search Troubleshooting section below.

## Auto Code Search Troubleshooting


### ***Your device switched off but you still cannot control your device?***


Switch your device back on manually (or using the original remote) and repeat the Code Search making sure to press and release **OK/ENTER** as soon as your device switches off.



 



### ***Your ONE FOR ALL controls your device but some keys don't work properly?***

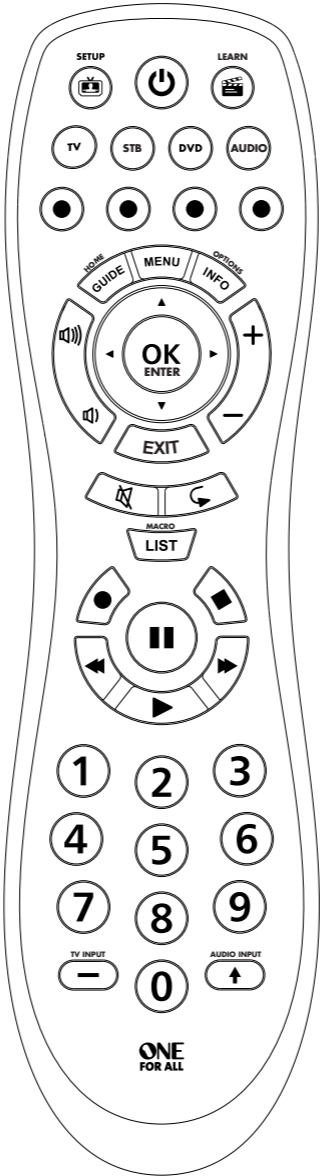There may be a better configuration for your brand. Go to [www.simpleset.com](http://www.simpleset.com) to set up this remote for your device.

# Tour of the Remote



**SETUP / ** This One For All SmartControl key automatically puts you in control of the right devices to change channels and control volume when you're WATCHING TV (see the section on One For All SmartControl for more information). When you press and hold this key, it puts the remote into programming mode, to set up the remote to control your devices or to customize other remote capabilities to your home theater.

	Switches on / off your home entertainment device. Using One For All SmartControl, this key switches on/off all devices within the activated combination – simply by pressing it for 2 seconds.
<b>LEARN</b> / 	This One For All SmartControl key automatically puts you in control of the right devices to change channels and control volume and playback when you're WATCHING A MOVIE (see the section on One For All SmartControl for more information). When you press and hold this key, it puts the remote into learning mode, to copy a function from another remote control to this one.
<b>TV, STB, DVD, AUDIO</b>	The device keys let you switch the device you're controlling with the remote. Just press the key for the device you want to operate. Then use the other remote keys to control that device.
<b>Red, Yellow, Green, and Blue keys</b>	The color keys access advanced functions available on some satellite receivers, cable boxes, and Blu-ray disc players.
<b>HOME / GUIDE</b>	Displays the active device's home screen, program guide, or setup menu.
<b>MENU</b>	Displays the active device's main menu.
<b>OPTIONS / INFO</b>	Displays the active device's options screen, current channel, or program/disc information.
	The volume keys raise and lower volume.
<b>+</b> / <b>–</b>	Use the channel up and down keys to select the next higher (or lower) channel.
	The arrow keys move the cursor in program guides and menu screens. Use <b>OK/ENTER</b> to choose options from your selected device's menu or guide or to confirm channel entry.
<b>EXIT</b>	This key works differently depending which mode you're in. In STB or DVD mode, it takes you back a screen or exits a menu. In TV or STB mode, it turns captioning text off.
	The mute key turns the sound off or on.
	The go back key works differently depending which mode you're in. In TV, STB, or DVD mode, it takes you to the previous channel. In AUDIO mode, it repeats a track.

---

**MACRO / LIST** The list key works differently depending which mode you're in. In TV, STB, or DVD mode, it works as a program / list key. In AUDIO mode, it works as a shuffle / random key. When you press and hold this key, it puts the remote into macro/activity mode, to set up or perform multi-step activities.

---



These transport keys control your PVR/ DVR, VCR, DVD, or CD player. They can also control Video On Demand (if available from your cable or satellite provider).

**Note:** Press the record key (●) twice to start recording a DVD, PVR/DVR, or VCR program.

---

**1-9, 0** The number keys enter channels directly. In audio mode, use the number keys to select audio sources 1 through 10.

---

**TV INPUT / -** Use this key to change inputs on your TV. During channel entry, this key also inserts a dash, to access digital sub-channels.

---

**AUDIO INPUT / ↑** Use this key to change inputs on your audio device. This key can also store a learned function from another remote.

---

# One For All SmartControl

Once you’ve set up the remote to operate your devices, you’re ready to change the way you experience home theater forever. The One For All SmartControl Universal Remote makes it so easy to control everything in your home theater that you’ll almost forget you’re using a remote at all.

This remote controls 2 activities—watch TV and watch movie—involving multiple devices in your home theater. One For All SmartControl simplifies your home theater experience in two ways:

- One For All SmartControl Device Control automatically puts you in control of the right devices to change channels, control volume...virtually everything you need to do when you’re watching TV or watching a movie.
- One For All SmartControl Master Power lets you power the devices you need for each activity in a few simple steps.

As soon as you’ve programmed the TV, STB, and DVD keys to control your devices, this remote is ready to use One For All SmartControl to operate the right devices automatically whenever you want to watch TV or watch movies. All you have to do is press the Watch TV or Watch Movies key!

Here’s how the Activities are set up to control your devices when you’ve first programmed the remote:



	Volume up/down and mute goes to...	Channel or Playback Control, Menus, and Guides go to...
Watch TV	TV	STB (your satellite receiver, cable box, etc.)
Watch Movie	TV	DVD (your DVD player, Blu-ray, etc.)

If your home theater setup is different—for example, if you control volume through an Audio receiver, or if you change channels on the TV itself—you can customize the Activities to fit your setup.

## To customize Watch TV settings:

1. Find the combination below that matches the devices you use when you watch TV in your home theater.
- |   |   |
|---|---|
| 1 | TV and STB (this is the default; if you haven’t already changed your Watch TV settings, you can just leave the remote as it is) |
| 2 | TV and DVD  |
| 3 | TV and AUDIO  |
| 4 | TV  |
| 5 | TV, STB, and AUDIO  |

For example, if you use a satellite receiver to change channels and your TV to control volume, you should use combination 2. If you use a TV to change channels and an audio receiver to control volume, use combination 3.

2. Press and hold the **SETUP** /  key until a remote indicator light blinks twice.
3. Press the **SETUP** /  key. The indicator light flashes twice.
4. Press the number key for the combination that matches your home theater (see step 1). The indicator light flashes twice.



That's it! You've customized Watch TV to match your home theater setup.

## To customize Watch Movie settings:

1. Find the combination below that matches the devices you use when you watch movies in your home theater.

<b>1</b>	<b>TV and DVD (this is the default; if you haven't already changed your Watch Movie settings, you can just leave the remote as it is)</b>
<b>2</b>	TV and STB
<b>3</b>	TV and AUDIO
<b>4</b>	TV
<b>5</b>	TV, STB, and AUDIO

For example, if you use a Blu-ray player to play discs and your TV to control volume, you should use combination 1. If you use a streaming player to play movies or other streaming media and your TV to control volume, use combination 2.

2. Press and hold the **SETUP** /  key until a remote indicator light blinks twice.
3. Press the **LEARN** /  key. The indicator light flashes twice.
4. Press the number key for the combination that matches your home theater (see step 1). The indicator light flashes twice.

That's it! You've customized Watch Movie to match your home theater setup.

# Using One For All SmartControl

One For All SmartControl operates the right devices automatically whenever you want to watch TV or watch movies. All you have to do is press a key!

 
**To use One For All SmartControl:** Press the key for the activity you want to do with your home theater.

Press **SETUP** /  to watch TV.


Press **LEARN** /  to watch movies.

The keys to control different parts of your home theater automatically control the right devices for what you're doing right now. For example, if you're watching TV and you use the satellite receiver to change channels and the TV to change volume, the channel keys are "locked" to your satellite receiver and the volume keys are "locked" to your TV—you don't have to do anything to switch between them. They automatically operate the right device. You won't mistakenly change channels on the TV!

## One For All SmartControl Master Power

One For All SmartControl also lets you turn all the devices you use in an activity on and off with a single key press. For example, if you use your TV and satellite receiver to watch TV, all you have to do is press and hold the  key for 2 seconds to turn these devices on or off once you've pressed the key for the watch TV activity.

**To use One For All SmartControl Master Power:**


1. Make sure you're in the right One For All SmartControl mode—press the One For All SmartControl key corresponding to the activity you're using (watch TV or watch movie).
2. Point the remote control at the devices and press the  key for at least 2 seconds.



### NOTES

*Your devices turn on or off in the order of the combination listed in the One For All SmartControl setup. After the master power sequence has been completed, the remote control will be able to send other commands.*




*If one or more devices does not have a POWER key, the power off/on sequence may be slightly delayed when the remote control signals the device(s). This action is normal.*

*If you need to individually power devices on or off, select that device (by pressing the device key) and press the  key.*

## Excluding a device from Master Power

You can keep devices separate from the One For All SmartControl Master Power command—for example, if you want to turn your TV on and off by itself, independently of your watch TV or watch movie activity.

### To exclude a device from master power

1. Press and hold the **SETUP**/ key until a device key flashes twice.
2. Press the key for the activity you want to modify. For example, if you want to turn a device on and off independently when you're watching TV, press the **SETUP**/ key.
3. Press the device key for the device you want to turn on/off independently.
4. Press .

This device will no longer be turned on or off by the master power command in this activity.

If you want to include the device in One For All SmartControl Master Power again, just repeat steps 1–4.

## Using the TV and AUDIO INPUT Keys

This remote also makes it easy to adjust your home theater devices so that you're watching and listening to the right signal. The **TV INPUT** and **AUDIO INPUT** keys at the bottom of the remote automatically switch the inputs on your TV or audio receiver if you're in Watch TV or Watch Movie mode.

So, for example, if you have a DVD playing that you want to watch, but you don't see the picture on your TV, just press the **TV INPUT** key repeatedly until you see the signal you want. Likewise, if you don't hear the correct audio over your audio receiver, simply press the **AUDIO INPUT** key on this remote repeatedly until you hear the audio you want.

**Note:** If the INPUT keys are going to the wrong A/V input(s) (or if they're doing something other than changing inputs) you may be using the wrong code. Repeat the One For All SimpleSet procedure or try the next code within the Direct Code Set Up procedure.

---

# Advanced Features


This One For All Remote is customizable to almost any home theater setup. It can learn new commands from your original remote controls and condense multi-step actions to a single key press. This section tells you how to customize the following features of the remote:

- Learning
- Macros
- Code verification
- Operational reset

## Learning


Learning lets you copy one or more functions from your original remote control to this remote. For example, if your audio receiver remote has a key that this remote doesn't have, you can copy (or learn) that key from the original remote to this one.


### Before You Start


- Your original remote controls must be in working order for learning to work properly.
- Learned keys are mode specific, so each key can store a unique function for each mode.
- Learned keys can be used in macros/activities (see "Using Macros/Activities").
- Do not use the following keys for learning: **TV, STB, DVD, AUDIO, SETUP/** , **MACRO/LIST** or Record (•).
- Learning capacity is approximately 100 keys, depending on the individual functions being learned.
- Not all keys can be learned. Some remotes have keys that use commands that are incompatible with this remote.
- For optimum learning, avoid high levels of ambient light such as natural sunlight or energy-efficient fluorescent lights.

**NOTE:** Please have your original remote controls handy before programming learning. Be sure to press each teaching key within 5 seconds of the previous entry. Otherwise, this remote exits the learning mode.



### To learn function(s) from your original remote(s):

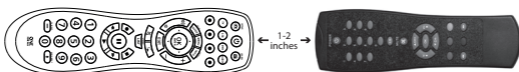1. Press and hold the **LEARN** /  key until the TV key flashes twice.
2. Press the device key for the kind of device you want to use with the learned function. For example, if you want learn a function to use with your audio receiver, press **AUDIO**.
3. Place both remote controls on a flat surface. Make sure that the ends you normally point at your device are facing each other. The remotes should be 1–2 inches from each other.



4. Press the key on the One For All remote you want to use for the learned function. The indicator for the device you chose in step 3 flashes rapidly.  
For example, if you want to use the red key for the new function, press the red key.
5. Press the key on the original remote you want to learn. The indicator light on the One For All remote flashes twice to confirm that you've learned the function.  
To copy other functions within the same mode, repeat steps 4 and 5, using a different key on the One For All remote.
6. Press and hold the **LEARN** /  key to save your settings. The indicator light flashes twice.

### To delete a learned function and restore a key's original function:




1. Press and hold the **LEARN** /  key until a device key flashes twice.
2. Press the device key that has the learned function you want to delete.
3. Find the key with the learned function. Press and hold it for 3 seconds, until the device key blinks twice.
4. Press and hold the **LEARN** /  key until the device key blinks twice again. The key returns to its original function.

## Activities

The One For All remote can condense multistep activities to a single keypress. These are called “Activities” or “Macros.” You can assign up to 6 activities to number keys on this remote. For example, you could make the **1** key perform a series of steps when you’re finished watching a DVD: (1) stop the DVD, (2) turn the DVD player off, and (3) turn your TV off.

**Note:** A macro/activity can contain up to 15 steps.

### To set up a Macro:

1. Press the device key where you want to store the macro/activity (TV, STB, DVD, or AUDIO).
2. Press and hold the **MACRO/LIST** key for 5 seconds, until a device key stays illuminated. (You can release the key now.)
3. Press the number key you want to use to execute the macro/activity.  
For example, if you want the 1 key to trigger the steps to stop a DVD, turn the DVD player off, and turn off the TV, press the 1 key in this step.
4. Press the device key for the first step in the macro/activity.  
For example, if the first step is to stop a DVD, press **DVD**.
5. Press the key for the first command in the sequence.  
For example, if the first step is to stop a DVD, press the  key.
6. If there are more commands for this device, press the keys for the next commands. (If there aren’t, go to step 6.)  
For example, if you want to turn the DVD player off after you stop the disc, press the  key.  
When you’re finished with commands for this device, go to step 6.
7. Press the device key for the next device you want to use in the macro/activity.  
For example, if the next step in the macro/activity is to turn off the TV, press TV.
8. Press the key for the next command in the sequence.  
For example, if the next step is to turn off the TV, press the  key.
9. If there are more commands for this device, press the keys for the next commands.  
If you’re finished with this macro/activity, go to step 9.  
If you want to use another device in this activity, repeat steps 6 and 7.
10. When you’ve finished entering the steps for this macro/activity, press the **MACRO/LIST** key. The indicator light turns off.

Congratulations! You have successfully programmed a macro/activity. Now when you press the **MACRO/LIST** key and the number key you designated for this macro/activity, the remote will send the steps you programmed.

**To use a macro/activity:**

1. Press the device key where you stored the macro/activity (TV, STB, DVD, or AUDIO).
2. Make sure the remote is pointed at the devices this macro/activity uses.
3. Press and hold the **MACRO/LIST** key for 3 seconds until a device key blinks for second time.
4. Press the number key you designated for the macro/activity.

Leave the remote pointed at the devices for several seconds. The macro/activity may take a few seconds to finish.


**To clear a macro/activity:**

1. Press the device key where you stored the macro/activity (TV, STB, DVD, or AUDIO).
2. Press and hold the **MACRO/LIST** key for 5 seconds, until a device key stays illuminated. (You can release the key now.)
3. Press the **EXIT** key.
4. Press the number key with the macro/activity you want to erase.
5. Press **OK/ENTER**.

The macro/activity you programmed to this key is now cleared.

## Checking the Programmed Codes

The One For All remote uses different codes to control different devices. You can set up those codes by using One For All SimpleSet, Direct code setup, or the Code search. If you ever need to find out what code you're using to control a different device, follow the steps below.


1. Press and hold the **SETUP** /  key until a device key flashes twice.
2. Press the device key for the device whose code you want to check. For example, to find the TV code, press TV.
3. Press **9 9 0**. The indicator light flashes twice.
4. Press **1** and count how many times the device key flashes. This is the first digit of your code—write it down in the space below. **Note:** If the device key does not flash at all, the digit is "0".
5. Press **2** and count how many times the device key flashes. This is the second digit of your code—write it down in the space below. **Note:** If the device key does not flash at all, the digit is "0".
6. Press **3** and count how many times the indicator flashes. This is the third digit of your code—write it down in the space below. **Note:** If the indicator does not flash at all, the digit is "0".
7. Press **4** and count how many times the indicator flashes. This is the fourth digit of your code—write it down in the space below. **Note:** If the indicator does not flash at all, the digit is "0".
8. To check the codes of other devices, repeat steps 1–7 and press a different device key in step 2.

TV				
STB				
DVD				
AUDIO				

## Resetting the Remote

Resetting the remote erases all macros/activities, volume lock, One For All SmartControl setup information, and learned functions.

### To reset the remote:

1. Press and hold the **SETUP** /  key until a device key flashes twice.
2. Press **9 8 0**. The indicator light flashes twice.

# Troubleshooting

***The ONE FOR ALL remote is not performing commands properly.***

You may be using the wrong code.

- If you used One For All SimpleSet: Repeat One For All SimpleSet (see the 1-2-3 Programming guide).
- If you used Direct Code Setup: Try the next code listed for your brand (see page 4).
- If you used the Code Search method: Start the search again to locate the proper code (see page 5).

***My brand is not listed in the Code List.***

Try the Auto Code Search or go to SimpleSet.com and follow the directions there.

***The device indicator is dim or doesn't light up at all.***

Replace batteries with two new AAA alkaline batteries.

***The device indicator blinks when I press a key, but my home entertainment device does not respond.***

Make sure the remote control is aimed at your home entertainment device and is not farther than 15 feet away.

***The unit does not control home entertainment devices or commands are not working properly.***

Try One For All SimpleSet programming again. If the remote still doesn't control your device the way you expect, try the Direct Code Setup. Keep trying codes from the code list until you find the one the controls your device the way you want it to.

***The One For All SmartControl keys aren't working with my home theater.***

You must set up the One For All SmartControl remote to work with your home theater before you can use these keys. See page 10 for more information.

***The AUDIO INPUT and TV INPUT keys don't work with my home theater.***

Make sure you have programmed your TV and AUDIO keys correctly and that other functions on those devices work with this remote. If they do, you might need to try another code to get the proper input functionality for these devices. Follow the Direct Code Entry directions on page 5 to re-program the remote for those devices.

***The channel, volume, or playback keys are controlling the wrong device in One For All SmartControl mode.***

You might need to reconfigure One For All SmartControl. See page 10 for more information.

***Changing channels does not work properly.***

If the original remote control required pressing **ENTER** to change channels, then press **OK/ENTER** on this remote control after entering the channel number.

***During learning, the device key emits a long blink after pressing and holding key to be learned.***

Memory is full or a bad capture has occurred. Avoid high ambient light sources, such as direct daylight and fluorescent bulbs. Try readjusting positions of remote controls before performing the procedure again.

***For more information, please visit: [www.oneforall.com](http://www.oneforall.com)***

***Consumer Help Line: 1 (800) 315-0990***

---

## **Additional Information**

As you update your home entertainment system, One For All® has a universal remote control that will fit your needs. Please visit our Website at [www.Oneforall.com](http://www.Oneforall.com) to see our full product lineup.

ONE FOR ALL® is the registered trademark of Universal Electronics Inc. Voxx Accessories Corporation is the Licensee of the ONE FOR ALL® brand for North America.

Copyright 2013 by Universal Electronics Inc.

No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

## **FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Manufacturer/Responsible Party  
VOXX Accessories Corporation  
3502 Woodview Trace, Suite 220,  
Indianapolis, IN 46268  
1-317-810-4880 ( No technical /product support is available  
via this number. This phone number is for regulatory matters  
only.)

### **Industry Canada Regulatory Information**

CAN ICES-3 (B)/NMB-3 (B)

### **Avis d'Industrie Canada**

CAN ICES-3 (B)/NMB-3 (B)

## **Care and Maintenance**

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the remote's internal components can cause malfunction and invalidate its warranty.

## **Battery Precautions**

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

---

# 12 Month Limited Warranty

Voxx Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with a new or refurbished product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product along with any accessories included in the original packaging is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the Retailer.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static or noise, to costs incurred for the installation, removal or reinstallation of the product. The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

**U.S.A.:** Audiovox Return Center, 150 Marcus Blvd.,  
Hauppauge, NY 11788

**CANADA:** Audiovox Return Center, c/o Genco, 6685 Kennedy  
Road, Unit 3, Door 14, Mississauga, Ontario L5T 3A5