

Setting the remote control for TV operation

You can use the remote control to operate your satellite receiver as well as your TV. Simply configure your remote control as described below:

Enter the code

1. Turn on your TV.
2. Press the OK and TV buttons simultaneously until the TV button flashes twice.
3. Use numbers to enter a code. Use a code appropriate for your TV brand. The codes are on the back of this folder. When you have entered the code, the TV button will flash twice
4. Press the TV button to check that you have the option to switch on and turn off the TV. If this does not work, repeat the operation using another code.

Search for the code

1. Turn on your TV.
2. Press the **OK** and **TV** buttons simultaneously until the **TV** button flashes twice.
3. Use numbers to enter **9 9 1**
4. Press the **TV** button
5. Point the remote control at the TV and repeatedly press **CH+** until the TV turns off. You may need to press the **CH+ button up to 150 times**. By pressing the **CH-** button you can try using the previous codes.
6. As soon as the TV turns off, press the **OK button**. The **TV** button will flash twice.

Once you have configured the appropriate code, you can operate by pressing the **TV button**. If you want to use your satellite receiver, press the **STB** button

The **TV** and **AV** buttons are programmed by default for TV operation. The **VOL +/-** and **MUTE** buttons can also be used to operate the TV. To do this, press the **OK** and **VOL+** buttons simultaneously until the TV button flashes twice. To configure these buttons to operate your satellite receiver, press the **OK** and **VOL-** buttons simultaneously until the TV button flashes twice.

Manual Manuel

Universal remote control

Universal Remote Control



CanalDigitaal, TV VLAANDEREN and TéléSAT are registered trademarks of M7 Group SA | RC Luxemburg B 148.073 | AEC 124134



Setting up the remote control for use with your TV

You can use the supplied remote control to operate both your digital satellite receiver and your TV. You can set up your remote control on one of the following ways.

Enter code

1. Turn on the TV.
2. Press and hold **OK** and **TV** together until the **TV** button flashes twice.
3. Use the **numbers** to enter a code. Use a code that matches the brand of your TV. The codes are on the back of this leaflet. After entering, the **TV** button will flash twice.
4. Press **TV** to check if you can turn the TV on and off. If this does not work repeat the steps with a different code.

Code search function

1. Turn on the TV.
2. Press and hold **OK** and **TV** together until the **TV** button flashes twice.
3. Use the numbers to enter **9 9 1**.
4. Press on **TV**
5. Point the remote control at the TV and press **CH+** repeatedly until your TV turns off. You may have to press **CH+** up to 150 times . Pressing **CH-** allows you to retry previous codes.
6. Once the TV turns off, press **OK**. The **TV** button will flash twice.

After you have set the correct code, you can operate the TV by first pressing the **TV button** . If you then want to operate the satellite receiver again, press the **STB** button .

The **TV** and **AV** buttons are set to control the TV by default. The buttons **VOL +/-** and **MUTE** can also be set for this. To do this, hold the **OK** and **VOL+** buttons until the button flashes twice. To set these buttons to operate the digital satellite receiver again, press and hold **OK** and **VOL-** until the button flashes twice.



TV codes

Brand	Codes		
Acer	1339 1509 0701		1644
No	1913 1908 1505		1916
Akai	0361 1326 1208 0371 0037 0433 0195 0508 0009 0072 0218 0714 0163 0516 0715 0602 0056 0548 0480 0217 0631 0216 0264 0178 0377 1037 0606 1908 0473 0648 0812 1248 1259 1935 1865		
Aristona	0556 0037		
Audiosonic	0009 0037 0374 0556 1800 0109 2050 0714 0715 0602 0556 0548 0480 0217 0631 0216 0264 0178 0377 0606 1037 1908 0648 0473 0812 1259 1248 1932 1865		
Bang & Olufsen	0621	0087 0275	
Beko	0714	0508 0486	
	0715 0037 0418 0428 0370 1800 0556 0606 0808 1652		
BenQ	1212	1562	1574
	1032		
Blaupunkt	0195 0535 0200 0327 0455 0170 0036		
Daewoo	0634 1849 2098 1203 0661 0037 0451 0374 1909 0556 0009 0216 0218 0217 1902 1908 0880 0178 0876 1612 0865 0698 0714 0706 2275 2037		

Brand	Codes		
Denver	1324 0037 0556 0606 1189 0587 1988 1634 1820 2050 1709 2139 2172 2197 2245		
D-Vision	0037	1982	0556
Finlux	0105 0104 0037 0556 0714 0346 1163 0217 0072 0361 0163 0516 0715 0070 0087 0630 0631 0492 0480 1556 0629 0473 0418 0606 0621 1202 0808 1248		
Fujitsu	1666 1298 1248		1259
Siemens	1373 0808 2174		1163
Funai	1817 1394 1037 1666 0668 0264 0294 0412 1505 1913 0714		
Thorough	0195 0508 1223 0535 0645 1582 0070 1037 0037 0443 0706 0422 0556 0587 0009 0036 0370 1935 1908 0630 1916 0178 1376 1800 1981 0343 1163 1869 2053 2239 2195 1259 2125		0487
Hannspree	1351 1613 1776 2027 2214		
Hisense	1363 1556 2098 2037		
Hitachi	1576 1772 0576 0578 0719 0225 0349 0744 0556 0361 1037 1484 0441 1645 0044 1163 0634 0473 0036 0563 0163		

Brand	Codes		
	0343 2214 1194 0037 0480 0777 0109 0072 0514 0178 0105 0629 0548 0512 0217 2279 0492 0877		
Hyundai	0037 0556 0706 0876 1326 2139 2058 1556 1294 1468 1281 1612 1376 1694 1532 0778 1606		
JVC	0653 1818 0606 1153 1653 0683 0731 0371 0192 0218 0036 0093 0650 0417		
Lenco	0009 0037 1812 0163 0556 0374 0104 0587 1037 1983 1376		
LG	1423 0037 0178 0370 0377 1768 0009 0556 0714 0001 0217 0163 0216 0290 0606 0715 0698 0109 0823 0829 1556 1991 0247 1681 0361 1539		
Loewe	0512 0633 1884 0556 1836 0790 0037 0370 0362 0292 0087 2056 0516		
Highlighting environment	0714 0808 0037 0668 0556 0698 0512 1908 1437 1900 1037 1259 0245 0631 1248 0880 1916 1202 1166 1556 1163 2001 2279 1645		
Metz	1533 0746 0388 0447 0367 0087 1163 0195 0535 0037 0556 1208 1037 0868		
Mitsubishi	0108 0512 0087 0037 0036 0535		

Brand	Codes		
	0556 1208 1037 0868		
MTlogic	0714	0037	2050
Nokia	0361 0163 0480 0349 0548 0492 0473 1208 0374 0631 0606 0346 0320 0610 0109		
Nordmende	0109 0501 0287 0196 0560 0343 0195 0037 0556 0335 0163 1259 1248 0714 2001 1413 0443 2007 1163		
Orion	2007 2032 2005 0037 0443 0355 0714 0235 2108 0556 0294 0320 0011 0009 0321 0264 0412 0544 0516 1916 0880 2001 1908		
Panasonic	0650 1636 0226 1650 1310 0853 0361 0367 0556 0037 0516 0001 0548 0163 0556 0037 1246 1335		
Philips	0772 0087 0195 1744 0595 0343 1304 1521 0009 0200 0760 0374 0361		
Pioneer	1260 0760 0556 1457 0370 0037 0428 0343 0163 0109 0361 0512 0486 0287		
Proline	0037 0178 1545 0556 0625 0634 2104 0630 0621 0072 0321 1037 1513 1376 0556 0037 1865 1531		
Prosonic	0371 0374 0370 0668 1376 0880 2137 0714 0451 1820 0216 1890 2001 1324 1770 0217 1556 2104		

Brand	Codes		
	1709 1614 2090 0606 1507 2245 2197 2032 1787 2125		
Protech	0037 0556 0009 0217 0247 0264 0418 0349 0282 0361 0486 0668 1037 0163		
Provision	0037 1037 0556 0714 1324 1531		
Always	0625 1166 0109 0560 0343 0287 0087 0163 0501 0516 0361 0498 0196 0548 0335 0650 0714 1588		
Salora	0290 0348 0163 0361 0516 0547 1208 0480 0621 0037 0631 1166 1556 0778 2125 1202		
Samsung	0812 0618 0587 0556 0060 1235 0009 0037 0217 0370 0072 0766 0814 0264 0216 0290 0163		
Sanyo	1208 0036 0292 0011 0370 0072 0216 0217 0104 0009 0544 0163 0037 0108 0556 0486 0735 0170 1649 1163 1037		
Schneider	0037 0556 0544 0349 0394 0352 0550 0343 0217 0247 0371 0218 0361 0668 1037 0163 0648 0714 0451 1909 1908 1982 1916 0070 1617 1556 1324 2128		
SAY	1037 0037 1163 0556 1437 0668 0217 0487 0009 0349 0163 0264 0634 0036 0247		

Brand	Codes		
	0362 0216 0361 0218 1909 0451 2061		
Sharp	0093 1393 2214 0036 0491 0818 1819 0294 0653 0256 0516 0200		
Siemens	0195 0535 0200 0327 0036 0037 0556 0361		
Sony	1505 1825 1651 1010 0011 1685 0036 0036 0556 0093 0170 0074		
The Tatum	1720 0621 0037 1248 1556 1056 0556 0072 0516 0217 0011 0629 1908 1259 1191 1719 1324		
Telefunken	0625 0560 0074 0109 0343 0287 0109 0501 0335 0196 0037 0556 0486 0714 1556 0346 0821		
Thomson	0625 0560 0343 0287 0109 0501 0335 0196 0037 0556 0320 0349 0216 0361 1588 2128		
Toshiba	1508 0508 0714 1656 2060 1935 0070 1164 1582 1704 0217 0109 0195 0618 1916 1908 0009 0698 0037 0736 1556 0650 1037		
Vestel	1037 1163 0556 0037 0668 0361 0163 0217		