

**ONE
FOR ALL®**

6

URC-4300

ONE FOR ALL® 6

Universal Remote

USER GUIDE & CODE BOOK



Retain For Future Reference



Table of Contents

About Your ONE FOR ALL 6	2
Features and Functions.....	4
Installing the Batteries	6
Setting Up Your Television.....	7
Setting Up Your Video Recorder	8
Setting Up Your Other Devices	9
The Search Method	11
Getting Codes from the ONE FOR ALL 6.....	12
Changing the Device Keys.....	13
Punch-Through (Control Across Device Types).....	15
Scan	16
Colour & Brightness	18
More on Teletext and Fastext	19
Key Sequence	20
Key Magic®	22
Preventing Accidental Code Changes.....	23
Trouble-Shooting	24
Consumer Help-Line.....	25
Telephone Upgradable Technology	26
Set-Up Codes	27
Set-Up Codes for Televisions.....	28
Set-Up Codes for Video Recorders	30
Set-Up Codes for Satellite Receivers.....	32
Set-Up Codes for Cable Converters	34
Set-Up Codes for CD Players and Mini Disk Players. ..	34
Set-Up Codes for Audio Amplifiers	35
Set-Up Codes for Audio Amplifier/Tuners.....	35
Set-Up Codes for Record Players.....	35
Set-Up Codes for Miscellaneous Audio.....	36
Set-Up Codes for Audio Cassette Players.....	36
Set-Up Codes for DAT and DCC.....	36
Set-Up Codes for Laser Disc Players.....	36
Set-Up Home Automation	36

Note: If you're having problems operating all the functions of your device, don't worry, your ONE FOR ALL may just need customising for your model type. Just call our consumer help-line and we'll get you on the right track.





About Your ONE FOR ALL 6

Your ONE FOR ALL 6 Package contains:


Your ONE FOR ALL 6 Universal Remote Control
Your ONE FOR ALL 6 User Guide & Code Book

Your User Guide & Code Book is divided into two parts: set-up instructions and device codes. You will need this guide to set up your new ONE FOR ALL 6 so please be sure to keep it.

Your ONE FOR ALL 6 needs four new AAA/LR03 alkaline batteries.


Your ONE FOR ALL 6 is designed to let you use one remote to operate your Video and Audio Equipment; any device designed to be operated by an infrared signal. You can choose any combination of 6 devices you would like to operate with your ONE FOR ALL 6. For example, 2-TVs, 1-VCR, 1-Satellite Receiver, 1-CD Player and 1-Amplifier; the choice is yours.



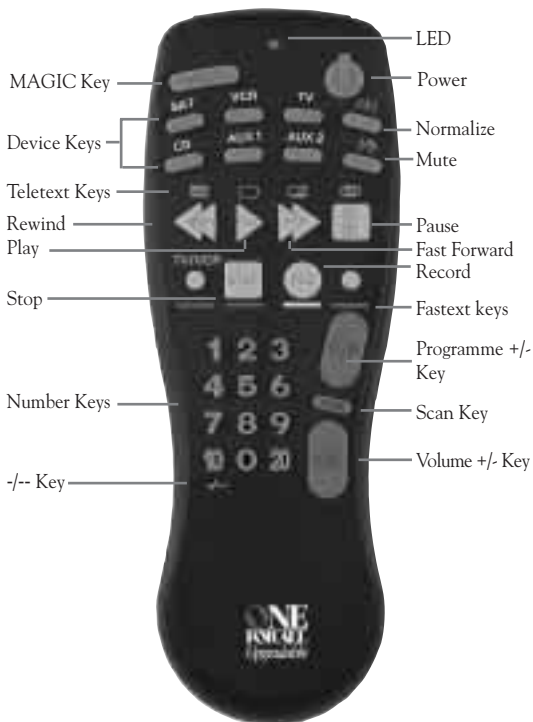




Features and Functions

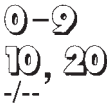Key	Function
LED	LED The LED (Light Emitting Diode) flashes red to show the remote is working.
	Power The Power key controls the same function as your original remote.
	MAGIC Key The MAGIC key is used to set up your ONE FOR ALL 6 and to access special functions.
 	Device Keys The TV, VCR, SAT, CD, AUX1 and AUX2 keys select the home entertainment device to be controlled. For example pressing the TV key allows the remote to control the functions of your Television, after pressing VCR you can operate your Video Cassette Recorder, etc. For more detailed information, please see page 9.
 	
 	
	Normalize Key The Normalize key returns all settings of your television to their standard levels.
	Mute The Mute key operates the same functions it did on your original remote.
	Number Keys The Number keys (0-9, 10, 20) provide functions just like your original remote, such as direct access programme selection. If your original remote uses one/two digit input switching (-/-- symbol), this function can be obtained by pressing the -/-- key, which is the same as the 10 key.



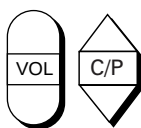


Volume, Programme

The Volume and Programme keys control the two most frequently used functions of your audio and video devices. They operate just as those on your original remote.



Scan

The Scan key allows you to easily browse through the programmes on your Television, Video Recorder, Satellite Receiver and Cable Converter. See page 16 for more information.

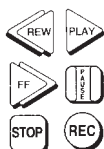

Video Recorder Keys

After pressing the VCR key, the Video Recorder keys operate the functions of your Video Recorder. To prevent accidental recordings, the Record key must be pressed **twice** to start recording.



Teletext/Fasttext Keys

After pressing the TV key, the top row of the Video Recorder keys are used to operate the main teletext functions. The symbols above the keys are for teletext. The Text keys are used to access the teletext functions of your Television. Of course, your Television must be teletext capable. For an explanation of the teletext symbols, please refer to page 19 of this manual.

TV/VCR



(RED)



(GREEN)



(YELLOW)



(BLUE)

After pressing the TV key, the bottom row of the Video Recorder keys marked red, green, yellow and blue allow you to access the fasttext functions of your television. Again, your television must be fasttext capable to operate these functions. For a more detailed explanation on how teletext and fasttext work, please refer to the manual of your Television set.






Installing the Batteries


Your ONE FOR ALL 6 needs four new AAA/LR03 alkaline batteries.

1

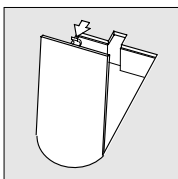


Remove the battery cover from the back of your ONE FOR ALL 6.

2

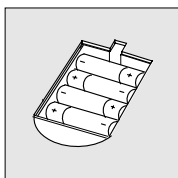

Match the batteries to the + and - marks inside the battery case, then insert the batteries.

3

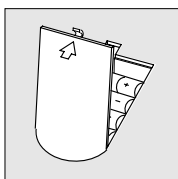

Press the battery cover back into place.

Note: In order to avoid having to reprogramme your ONE FOR ALL 6 after you remove the batteries, you will need to insert new batteries within 3 minutes. Also it is best that you do not use rechargeable batteries.





Setting Up Your Television

To set up the ONE FOR ALL 6 for your Television:

1

ONE FOR ALL	
Admiral	087 093 264
	163
Agaz	264
AGB	075
Aiko	216 009
Akai	208 351 037

Find your Television code in the Set-Up Code section (starting on page 28). Codes are listed by brand name.

 
The most popular code is listed first. Make sure your Television is switched on; any programme is fine.

2



Press and release the ONE FOR ALL 6's TV key, then **press and hold down the MAGIC key** until the red light blinks twice. (The light will blink once and then twice.)

3



Enter your **three-digit TV code** using the number keys. The red light will blink twice.

4



Now, aim the ONE FOR ALL 6 at your Television and press **POWER**. If your Television switches off, your ONE FOR ALL 6 is ready to run your Television.

Write your code in the three boxes on page 27, for easy future reference.

To control your Television, press TV first.

If your Television does not respond, follow steps 1 through 4 with each code listed for your brand. If none of the codes listed for your brand operate your Television, then try the search method described on page 11, even if your brand is not listed at all.





Setting Up Your Video Recorder


To set up the ONE FOR ALL 6 for your Video Recorder:

1

ONE FOR ALL	
Admiral	087 093 264
Agazzi	163
AGB	264
Aiko	075
Akai	216 009
	208 351 037


Find your Video Recorder code in the Set-Up Code section (starting on page 28). Codes are listed by brand name. The most popular code is listed first. Switch on your Video Recorder and insert a blank tape.

 2



Press and release the ONE FOR ALL 6's **VCR** key, then **press and hold down the MAGIC** key until the ONE FOR ALL 6's red light blinks twice. (The light will blink once and then twice.)

 3



Enter your **three-digit VCR** code using the number keys. The red light will blink twice.

4



Now, aim the ONE FOR ALL 6 at your Video Recorder and then press **PLAY**. If your Video starts playing the tape, your ONE FOR ALL 6 is ready to run your Video Recorder.

Write your code in the three boxes on page 27, for easy future reference.

To control your Video Recorder, press the VCR key first.

If your Video Recorder does not respond, follow steps 1 through 4 with each code listed for your brand. If none of the codes listed for your brand operate your Video Recorder, then try the search method described on page 11, even if your brand isn't listed at all. If you change programmes on your Television through your Video Recorder, press VCR and not TV, before you use the programme keys.





Setting Up Your Other Devices

To set up the ONE FOR ALL 6 for your other devices:

1

ONE FOR ALL	
Admiral	087 093 264
	163
Agazzi	264
AGB	075
Aiko	216 009
Akai	208 351 037

Find the code for your device in the Set-Up Code section (starting on page 28). Codes are listed by device type and brand name. The most popular code is listed first. Make sure your device is turned on.

2

Press the device key on the ONE FOR ALL 6 for the device you wish to control. Devices can be found under the following key:


Device		Device Key
Television		
Video Recorder		
Satellite Receiver	}	
Cable Converter		
CD Player	}	
Mini Disk Player		
Audio Amplifier	}	
Audio Amplifier/Tuner		
Record Player		
Miscellaneous Audio		
Home Automation		
Audio Cassette Player	}	
Digital Audio Tape		
Laser Disc Player		

3



Press and hold down the **MAGIC** key until the red light blinks twice. (The light will blink once and then twice.)

 4



Enter your **three-digit device code** using the number keys. The red light will blink twice.





5



Now, aim the ONE FOR ALL 6 at your device and press **POWER**. If your device switches off, the ONE FOR ALL 6 is ready to operate your device.

Write the code for your device(s) in the boxes on page 27, for easy future reference.

Remember to press the correct device key before operating your device. Only one device (CD, amplifier, cassette, etc.) can be assigned to a device key. If your original remote operates more than one device (for example, a receiver, CD player and cassette player in one remote), you need to set up each device separately.

If your device does not respond, follow steps 1 through 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, then try the search method described on page 11, even if your brand is not listed at all.

Note: *If your device's original remote control does not have a power key, press PLAY instead of POWER when setting up your device.*



The Search Method

If your device does not respond to the ONE FOR ALL 6 after you have tried all the codes listed for your brand, try the Search Method. The Search Method may also work if your brand is not listed at all.

Let's say you cannot get your ONE FOR ALL 6 to control your Television:

1

Switch your Television on; any programme is fine.

2



Press the **TV** key on your ONE FOR ALL 6.

3



991

Aim the ONE FOR ALL 6 at your Television. **Press and hold down MAGIC** until the ONE FOR ALL 6's red light blinks twice. Then, press **9 9 1**. The red light will blink twice.

4



Now, alternate between **TV** and **POWER**, over and over, until your Television turns off. You may have to press these keys many times, so please be patient. It could take up to 5 minutes. Remember to keep pointing the ONE FOR ALL 6 at your Television when you press the POWER and TV keys.

5



When your Television turns off, press and release **MAGIC**. Don't forget, press **MAGIC** as soon as your Television turns off. Now your ONE FOR ALL 6 is ready to run your Television.

To search for the code for your other devices, follow steps 1 through 5, only substitute the appropriate device key during steps 2 and 4. For example, to search for the code for your Video, press the VCR key; for your Satellite or Cable Converter, press the SAT key; for your Amplifier, press the AUX1 key, etc. Use the chart on page 9 for a guide.

Note: If your device's original remote control does not have a power key, press **PLAY** instead of **POWER** when searching for your code.



Getting Codes from the ONE FOR ALL 6

Even if you have used the Search Method, it is handy to know the code for your device for future reference. It's easy to get your code after you have set up your device.

To get your Television code:

- 1  Press TV.
- 2 
 Press and hold down **MAGIC** until the ONE FOR ALL 6's red light blinks twice. Press **9 9 0**. The red light will blink twice.
- 3  For the first digit of your three-digit code, press **1** and count the red blinks. If there are no blinks, the digit is "0".
- 4  For the second digit, press **2** and count the red blinks.
- 5  For the third digit, press **3** and count the red blinks. Now you have your three-digit code.

Make sure you write your Television code in the three boxes on page 27.

To get the code for your other devices follow steps 1 through 5, only substitute the appropriate device key (VCR, SAT, CD, AUX1 or AUX2) during step 1. Write the code for your device(s) in the three boxes on page 27, for easy future reference.





Changing the Device Keys

If you want, you can change any of the device keys (TV, VCR, SAT, CD, AUX1 or AUX2) to operate another type of device. The chart below lists how to change the keys and to set up that device:

To Change:		Press:
TV	to	VCR
		
		MAGIC* 9 9 2 VCR TV, then TV MAGIC* Code
TV	to	SAT
		
		MAGIC* 9 9 2 SAT TV, then TV MAGIC* Code
TV	to	CD
		
		MAGIC* 9 9 2 CD TV, then TV MAGIC* Code
TV	to	AUX1
		
		MAGIC* 9 9 2 AUX1 TV, then TV MAGIC* Code
TV	to	AUX2
		
		MAGIC* 9 9 2 AUX2 TV, then TV MAGIC* Code
VCR	to	TV
		
		MAGIC* 9 9 2 TV VCR, then VCR MAGIC* Code
VCR	to	SAT
		
		MAGIC* 9 9 2 SAT VCR, then VCR MAGIC* Code
VCR	to	CD
		
		MAGIC* 9 9 2 CD VCR, then VCR MAGIC* Code
VCR	to	AUX1
		
		MAGIC* 9 9 2 AUX1 VCR, then VCR MAGIC* Code
VCR	to	AUX2
		
		MAGIC* 9 9 2 AUX2 VCR, then VCR MAGIC* Code
SAT	to	TV
		
		MAGIC* 9 9 2 TV SAT, then SAT MAGIC* Code
SAT	to	VCR
		
		MAGIC* 9 9 2 VCR SAT, then SAT MAGIC* Code
SAT	to	CD
		
		MAGIC* 9 9 2 CD SAT, then SAT MAGIC* Code
SAT	to	AUX1
		
		MAGIC* 9 9 2 AUX1 SAT, then SAT MAGIC* Code
SAT	to	AUX2
		
		MAGIC* 9 9 2 AUX2 SAT, then SAT MAGIC* Code

* Hold down the MAGIC key until the red light blinks twice. (The light will blink once and then twice.)

(continued)





To Change:

Press:

CD to TV

MAGIC* 9 9 2 TV CD,
then CD MAGIC* Code

CD to VCR

MAGIC* 9 9 2 VCR CD,
then CD MAGIC* Code

CD to SAT

MAGIC* 9 9 2 SAT CD,
then CD MAGIC* Code

CD to AUX1

MAGIC* 9 9 2 AUX1 CD,
then CD MAGIC* Code

CD to AUX2

MAGIC* 9 9 2 AUX2 CD,
then CD MAGIC* Code

AUX1 to TV

MAGIC* 9 9 2 TV AUX1,
then AUX1 MAGIC* Code

AUX1 to VCR

MAGIC* 9 9 2 VCR AUX1,
then AUX1 MAGIC* Code

AUX1 to SAT

MAGIC* 9 9 2 SAT AUX1,
then AUX1 MAGIC* Code

AUX1 to CD

MAGIC* 9 9 2 CD AUX1,
then AUX1 MAGIC* Code

AUX1 to AUX2

MAGIC* 9 9 2 AUX2 AUX1,
then AUX1 MAGIC* Code

AUX2 to TV

MAGIC* 9 9 2 TV AUX2,
then AUX2 MAGIC* Code

AUX2 to VCR

MAGIC* 9 9 2 VCR AUX2,
then AUX2 MAGIC* Code

AUX2 to SAT

MAGIC* 9 9 2 SAT AUX2,
then AUX2 MAGIC* Code

AUX2 to CD

MAGIC* 9 9 2 CD AUX2,
then AUX2 MAGIC* Code

AUX2 to AUX1

MAGIC* 9 9 2 AUX1 AUX2,
then AUX2 MAGIC* Code

* Hold down the MAGIC key until the red light blinks twice. (The light will blink once and then twice.)





To reset a device key to its original function, press:

TV key	 * 992	 
VCR key	 * 992	 
SAT key	 * 992	 
CD key	 * 992	 
AUX1 key	 * 992	 
AUX2 key	 * 992	 

* Hold down the MAGIC key until the red light blinks twice. (The light will blink once and then twice.)

Punch-Through (Control Across Device Types)

You may be able to use some features of your Television, Video Recorder, Satellite Receiver and Cable Converter at the same time. If you're watching a programme on your Video, you can adjust the volume (a TV function) without first pressing the TV key. The chart below lists some of the possibilities:

Last Key Pressed:	You Can Control:
	TV volume up and down, mute
	TV volume up and down, mute





Scan

Auto Scan

Your ONE FOR ALL 6 comes with a special Scan key which lets you go through every programme available on your Television, Video Recorder, Satellite Receiver or Cable Converter.

For example, to scan through the programmes on your Television:

- 
 Aim the ONE FOR ALL 6 at your Television and press **TV**, then **Scan**. You will automatically move through all the programmes available on your Television stopping at each programme for about three seconds. Remember, the ONE FOR ALL 6 must remain aimed at your Television the entire time you are using Scan.

- When you find a programme that you would like to watch, simply press the **Scan** key again to stop the Scan feature.

To use Scan with your Video Recorder, Satellite Receiver or Cable Converter, simply **press the appropriate device key** (VCR, SAT, AUX1 or AUX2) then **Scan**.

Favorite Programme Scan

Instead of Auto Scan, you can set your ONE FOR ALL 6 to scan through up to 10 of your favorite programmes. To set up your favorite programmes for your TV:

- 
 Press and release the ONE FOR ALL 6's **TV** key, then **hold down the MAGIC** key until the red light blinks twice.

-  Press **9 9 6**.

(continued)





3

05

MAGIC

Enter the number for the first programme you wish to be included as a “favorite programme”. Then press and release **MAGIC**. (You must

enter the programme number exactly as you would on your original remote. Example: If to get programme 5 you had to press 05 or if you used the 10, 20 or -/-- keys, you will need to do the same on the ONE FOR ALL 6.)

4

12

MAGIC

Enter the next programme number you wish to be included as a “favorite programme”. Then press and release **MAGIC**.

5

MAGIC

Continue entering each programme you wish to be included as your “favorite programmes”. After you have

entered the last programme number, **press and hold down MAGIC** until the red light blinks twice. Remember, the ONE FOR ALL 6 can hold a maximum of 10 of your favorite programmes.

6

TV



SCAN

When you want to scan through your “favorite programmes”, aim the ONE FOR ALL 6 at your TV and press **TV** then **Scan** and you will automatically move through your favorite programmes, stopping at each for about three

seconds. Remember the ONE FOR ALL 6 must be aimed at your TV the entire time you are using Scan.

7

When you find a programme you would like to watch, simply press the Scan key to stop the scan feature. To continue the favorite programme scan, press the Scan key again. The ONE FOR ALL 6 will stop automatically at the last favorite programme.

To set up your “favorite programmes” for your Video, Satellite or Cable Converter, follow steps 1 through 7, only substitute the appropriate device key (VCR, SAT AUX1 or AUX2) during steps 1 and 6.





To clear the favorite programmes you have set up:

- 1 
 Press the **device key** (TV, VCR, SAT, AUX1 or AUX2). Then **hold MAGIC** until the red light blinks twice.
- 2 
 Press **9 9 6**. Then **press the MAGIC key twice holding it down the second time** until the red light blinks twice. The **ONE FOR ALL 6** will now perform the Auto Scan function whenever the Scan key is pressed.

Notes: Favorite Programme Scan can only be set up for one device at a time. Once you have set up your “favorite programmes” for one device, you will not be able to use Scan with any other device. Auto Scan may not function with devices that did not have a programme +/- key on the original remote.

Colour & Brightness

Depending on the functions of your original remote control, the ONE FOR ALL 6 can operate the colour and brightness settings of your Television.

To adjust the colour:

-   Press **MAGIC** followed by **Volume+** (for colour up) or **Volume-** (for colour down).

To adjust the brightness:

-   Press **MAGIC** followed by **Programme+** (for brightness up) or **Programme -** (for brightness down).





More on Teletext and Fasttext

The ONE FOR ALL 6 is designed to operate the basic functions of teletext (text on, text off, mix and hold/stop).

<u>Symbol</u>	<u>Title</u>	<u>Description</u>
	TEXT	Puts the Television in the teletext mode.
	TV	Switches the Television back to regular viewing mode. On some Televisions, this may be done by pressing the TEXT key several times.
	MIX	Shows both teletext and regular Television simultaneously. Also used for subtitling. On some Televisions this function is accessed by pressing the TEXT key twice.
	HOLD/ STOP	Stops changing pages.

The keys marked red, green, yellow and blue are used to access the fasttext functions of your television

Note: For a more detailed explanation of teletext and fasttext, please refer to the manual of your Television. Remember, different Televisions control teletext and fasttext features in different ways. Not all of the teletext functions may be available for your particular model.






Key Sequence

You can program your ONE FOR ALL 6 to issue a sequence of commands at the press of a button. For example, you may want to turn on your Satellite and TV at the same time then set your TV to programme 5. Any sequence of commands you regularly use can be reduced to one key stroke for your convenience. You can install a sequence on any key, except for the device keys (TV, VCR, SAT, CD, AUX1 and AUX2), the Magic key and the Scan key.

To set up the sequence mentioned above on the Blue Fastext key of your ONE FOR ALL 6:

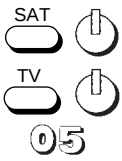- 1  Press and **hold down the MAGIC key** until the red light blinks twice.
- 2  Press **995**.
- 3  Then press the **Blue Fastext** key. (This is the key to which the sequence will be assigned.)
- 4  Next press **SAT, POWER, TV, POWER, 05** (Enter the programme number exactly as you would on your original remote.).
- 5  To end the sequence, **press and hold MAGIC** until the ONE FOR ALL 6's red light blinks twice.
- 6  Whenever you press the Blue Fastext key, the ONE FOR ALL 6 will turn on your Satellite, turn on your TV then set your TV to programme 5.

To install any sequence, press:

MAGIC* + 995 + Key to which sequence will be assigned + Sequence of commands + MAGIC*

*Here you must hold down MAGIC until the red light blinks twice.





Shifted Sequences

You can also program your ONE FOR ALL 6 to issue a sequence of commands by pressing the Magic key followed by another key. This allows you to maintain the original function of this key in every mode. A Shifted Sequence can be set up on the following keys: Power, 10, 20, Mute and the VCR/Fasttext keys.

Using the example from the previous page, you can programme the ONE FOR ALL 6 to turn on your Satellite and TV at the same time, then set your TV to programme 5 whenever you press Magic then the Blue Fastext key. This allows you to keep the Blue Fastext function.

To set up this shifted sequence:

- 1  Press and **hold down the MAGIC** key until the red light blinks twice.
- 2  Press **995**.
- 3 
 Press and release **MAGIC** then press the **Blue Fastext** key. (This is the key to which the sequence will be assigned.)
- 4 

 Next press **SAT, POWER, TV, POWER, 05**. (Enter the programme number exactly as you would on your original remote.)
- 5  To end the sequence, **press and hold MAGIC** until the ONE FOR ALL 6's red light blinks twice.
- 6 
 Whenever you press MAGIC then the Blue Fastext key, the ONE FOR ALL 6 will turn on your Satellite, turn on your TV then set your TV to programme 5.





To install any Shifted Sequence, press:

MAGIC* + 995 + MAGIC + Key to which sequence will be assigned + Sequence of commands + MAGIC*

Clearing a Sequence:

To erase any Sequence from a key, press:

MAGIC* + 995 + Key to be cleared + MAGIC*

To erase any Shifted Sequence, press:

MAGIC* + 995 + MAGIC + Key to be cleared + MAGIC*

*Here you must hold down MAGIC until the red light blinks twice.

Notes:

- Once you program a sequence on a specific key, the sequence will work regardless of the mode (TV, VCR, SAT, CD, AUX, AUX2) you are using. If you wish to obtain the original function of this key:
 - a) Use a Shifted Sequence.
 - b) Press the Magic key before the function key. This will give you the original function for any key which does not have a "double function". For example, the volume keys also control the color settings of your TV; therefore, if a Sequence is programmed on the volume keys, the volume function cannot be accessed.
- If you have placed an extended function on a key using "Key Magic" and then include this key in a Sequence, the extended function will be included in the Sequence NOT the original function of this key.
- As a Sequence is accessible from any mode (TV, VCR, SAT, CD, AUX1, AUX2), it is handy to always start your sequence with the correct mode key.
- To avoid accidental recordings with the ONE FOR ALL 6, you must press the Record key twice to begin recording. Because of this, you cannot assign a Sequence or Shifted Sequence to the Record key.

Key Magic®

Key Magic is an exclusive ONE FOR ALL feature. The design of the ONE FOR ALL 6 ensures that many functions of your original remote control can be operated by the ONE FOR ALL 6, even those that do not have their own key on the ONE FOR ALL 6 keyboard. And often used functions can be assigned to a key of your choice using the Key Magic features of your ONE FOR ALL 6.

If you have any questions about special functions, ring our consumer help-line and one of our customer service agents will be glad to assist you.





Preventing Accidental Code Changes

To prevent the accidental changing of codes in the ONE FOR ALL 6 (for instance by young children), it is possible to lock in the code you have set up:

Please remember, this is an optional feature and should only be used after you have found all the code(s) which operate your device(s) correctly and have set up your ONE FOR ALL 6 exactly the way you want it.

To lock in your:	Press:	
TV code		 * 9 8 2
VCR code		 * 9 8 2
SAT code		 * 9 8 2
CD code		 * 9 8 2
AUX1 code		 * 9 8 2
AUX2 code		 * 9 8 2

*** Hold down the MAGIC key until the red light blinks twice.**

To release the lock, simply repeat the same steps.

Note: Once you have locked in a code, you will not be able to enter a new code or reassign the device key until the lock is released.



Helpful Hints

Problem:

Solution:

Red light does not blink when you press a key?	Replace batteries with 4 fresh, new AAA alkaline batteries.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 11.
Your brand is not listed in the ONE FOR ALL code section?	Try the search method on page 11.
When following the set-up instructions, the red light on the ONE FOR ALL only blinks once instead of twice after you enter a three-digit code?	Did you use the Code Lock feature? You must first unlock the code before entering a new code. Follow the instructions on page 23 to do this.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Start the search method over again to locate the proper code.
Press a key but get the wrong result?	Hold MAGIC until the red light blinks twice, then press 992 and the device key twice. You will need to set up your device again. Try the codes for brand or the search method on page 11.
You cannot control the volume feature of your Satellite, Cable Converter or TV/Video combination?	Hold MAGIC until red light blinks twice. Then press 993 and VOL+. To set the volume control back to TV (Punch Through), hold MAGIC until the red light blinks twice then press 993 TV.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
Video not recording?	As a safety feature on your ONE FOR ALL, you must press the Record key twice .
Scan does not work on your device?	Make sure your original remote had a programme +/- key.



Consumer Help-Line

If you have any questions about the operation of your new ONE FOR ALL Universal Remote Control, you may call our consumer help-line on **0800 966 194** for assistance (our number in Ireland is 1-800 553 118; our number in Australia is 1-800 064 472). Before calling, please read this manual carefully to find an answer to your question. If you cannot find a solution in this manual, **please complete the information below on all your equipment before calling.** This way we can better serve you.

Your ONE FOR ALL remote model: URC-4300

Date of Purchase: _____ / _____ / _____
Day Month Year

Your devices:
(The first row is an example of how to complete this table)

<u>Type</u>	<u>Brand</u>	<u>Model No.</u>	<u>Remote Model No.</u>
TV	Sony	KVX-2950B	RMT-V131B
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____





ONE FOR ALL Telephone Upgradable Technology

Your ONE FOR ALL 6 contains a unique feature which allows new information to be added simply by holding it to your telephone. In a matter of seconds, our magnetic coupling technology quickly and reliably transfers information to the ONE FOR ALL 6 without complex plugs, adapters or attachments. This means, as you buy new products in the future, the ONE FOR ALL 6 will never become obsolete.

Simply ring our consumer help-line and one of our customer service representatives will assist you through the entire process of upgrading your ONE FOR ALL 6. To ensure the process goes smoothly, here are a few steps to follow:

- 1 Write down the brand name(s) and model number(s) of your device(s) in the space provided before you call.
- 2 Ring our consumer help-line and explain which device(s) you would like added to your ONE FOR ALL 6.
- 3 After our customer service agent records the brand name(s) and model number(s) of your device(s), he/she will ask that you hold the ONE FOR ALL 6 to the speaker portion of your telephone (see diagram below). In doing this, the information needed for your device is transferred through the telephone into your ONE FOR ALL 6 in a matter of seconds. **Please note, cordless telephones, speaker telephones and mobile telephones are not recommended.**
- 4 After your ONE FOR ALL 6 has been upgraded by telephone, stay on the line. Our customer service agent will ensure that your ONE FOR ALL 6 is working properly with your device(s) and answer any other questions you may have.





Set-Up Codes

The following pages list the codes for your equipment. The most popular codes for each brand are listed first.

If your device does not respond to the ONE FOR ALL 6 after you have tried all the codes for your brand, try the search method (page 11).

Write down the codes for your devices in the boxes below, easy future reference.

<u>Device Type</u>	<u>Code</u>
1. _____	
2. _____	
3. _____	
4. _____	
5. _____	
6. _____	



One For ALL 6 Code List

Televisions

Admiral 087 093 363 418
305 213 264 305
Adyson 217
AGB 075
Aiko 269 216 009
Aim 037 274
Akai 208 555 371 037
433 191 393 009
072 218
Akura 218 369 412 264
Alba 218 235 009 418
370 355 371 037
395 216
Allstar 037
Amstrad 177 009 264 354
218 371 369 354
433 362 412
Anitech 009 068 076 264
Ansonic 370 102 009
Aristona 037 012
ASA 105 346 070 104
087
Asberg 037 076
Atlantic 037 216 206 320
Atori 009
Audioton 217
Baird 109 193 343 378
325 190
Barco 416
Beko 370
Best 337 370 421
Bestar 037 370 374
Binatone 217
Blaupunkt 191 554 195 535
213 301 327 328
318 319
Bondstec 247
Boots 272 217
Britannia 216
BSR 294
BTC 218
Bush 218 235 543 036
282 037 272 355
371 374 311
Cathay 037
Centurion 037
Cimline 009 235
City 009
Clatronic 218 264 370 371
217 076 037 009
Contec 216 009 157 011
036
Crezar 213
Crosley 087 247 084 252
076 552 213
Crown 373 009 370 076
421 037
Crystal 431

CTC 247
Cybertron 218
Daewoo 009 037 216 374
217 009
Dainichi 218
Dansai 037 264
Dawa 037
Daytron 009 374
Decca 072 516 037 244
249 272 217
DeGraaf 208 044
Desmet 320 037
Domland 394
DTS 009
Dual 544 217 259 336
352 399
Dumont 087 104 102 213
217 070
Dynatron 037
Elekta 264 282
Elin 216 037 105 104
Elite 218 037
Elta 009
Erres 037 012
Etron 009 037
Fenner 374
Ferguson 073 287 190 335
238 325 193
Fidelity* 193 216 372 383
363 432
Finlandia 208 346 359
Finlux 105 104 037 346
076 070 087
Fisher 104 087 217 036
057 208 370 297
045 087 157
Forgestone 193
Fortress 093 087
Fraba 370
Frontech 247 264 543 414
431 217 009
Fujitsu 206 072 217
Funai 264 294
Galaxis 370 418
GBC 213 009 552
GEC 043 072 555 205
037 075 217 072
349
Geloso 213 009 363 552
General
Technic 009
Genexxa 218 037 412
Goldline 337
Goldstar 037 370 290 009
217 247 216 429
Goodmans 036 072 257 037
009 264 516 290
374 371
GPM 218
Granada 075 037 359 012
045 072 351 208
217 076 036 339

Grundig 195 535 191 554
 070 076 205 237
 417 422
 Halifax 264 216
 Hampton 216 217
 Hantarex 009 213
 HiLine 264
 Hinari 208 036 037 218
 406 009
 Hitachi 225 036 349 356
 552 043 044 519
 196 198 217
 306 194 276
 Hyper 009 216 217 247
 ICE 264 217 037 371
 218 216 009
 Indesit 237 311
 Indiana 037
 Inno Hit 009 072 037 218
 290 217 517 516
 ITC 217
 ITS 037 371 218 282
 ITT 163 349 555 378
 361 347 351 339
 JEC 035
 JVC 053 094 190 404
 405 036
 Kamp 216
 Kennedy 206 213 552
 Kingsley 216
 Kolster 037
 Konka 218
 Lloyd's 009
 Logik 193 011
 Luxor 194 237 290 357
 543 555 356
 Marantz 037
 Mark 037
 Matsui 235 177 009 011
 072 036 037 217
 354 294 355 371
 269 443 455
 McMichael 043
 Memorex 009
 Mercury 037
 Minoka 412 037
 Mitsubishi 108 150 512 354
 087 036 237
 Motion 076
 MTC 370
 Multimat 432
 Multitech 217 543 009 216
 247 102
 Murphy 104 216
 Naonis 363
 National 237 214
 NEC 170 036
 NEI 037 337 431
 Nesco 247
 Newtech 037 009
 Nicamagic 216
 Nikkai 072 218 037 264
 035 337 216
 Nobliko 102 076 070 216
 Nokia 163 349 555 378
 361 347 351 339

Nordmende 109 287 196 343
 085 501 519 198
 213 299 311
 Onwa 371
 Orbit 037
 Orion 235 294 177 320
 355 011 037 009
 321
 Osaki 072 218 257 217
 264 269
 Oso 218
 Osume 157 072
 Pael 216
 Panama 009 217 264 216
 Panasonic 226 250 126 274
 213 555 237 367
 368 347
 Pausa 009
 Perdio 269 072 320
 Philco 087 084 418 076
 213 247 252 552
 Philhar-
 monic 217
 Philips 037 012 323 554
 556 043 087 193
 332
 Phonola 037 012 087
 Pioneer 519 037 287
 Plantron 037 264
 Poppy 009
 Precision 217
 Prima 009
 Prinz 072 057 194
 Profex 009
 Profi-Tronic 037
 Proline 321 072 037 012
 Protech 037 217 009 247
 349 102 264 431
 337
 Pye 037 012
 Pymi 009
 Quasar 247
 Questa 036
 Radiotone 037 428
 Rank 070
 Revox 037 370
 Rex 305 206 363 411
 259
 Roadstar 009 264 218
 Saba* 287 213 075 087
 399 163 109 501
 516 519 555
 196 198 299 335
 205 343
 Saikou 257
 Saisho 235 516 177 009
 011 217 264
 Salora 290 194 349 356
 555 361 363 373
 Sambers 075 213 076 516
 517 102 314
 Samsung 037 009 217 370
 264 090 216 290
 072
 Sansui 037

Sanyo 208 157 036 011
 370 072 515 370
 104 213 045 378
 339 373 292
 216
 Seleco 305 206 363 259
 411
 Sencora 009
 Sentra 276 035
 Sharp 093 157 036
 Siarem 075 552 087 102
 213
 Siemens 191 535 554 157
 195 301 213 327
 328 378
 Sierra 037 012
 Siesta 370
 Silver 036
 Sinudyne 177 087 235 102
 213 294 296 334
 361
 Skantic 357 356
 Sogera 320
 Sontec 037 370
 Sony 010 011 315 036
 Soundwave 037 320
 Standard 218 009 217 320
 Stenway 282
 Sunwood 037 009
 Superla 216
 Supra 009 374
 Sutron 009
 Sydney 216 217
 Tandy 218 072 217 247
 276 093
 Tashiko 036 043 217 170
 Tatung 037 072 516 217
 272 249 011 244
 TEC 217 276 009 247
 Telefunken 109 501 471 399
 287 084 101 335
 252 262 306 073
 343
 Telemeister 320
 Teletech 009 247 337
 Teleton 217 275 206 349
 Televideon 320
 Texet 217
 Thomson 287 330 399 109
 501 333 335 196
 198 205 299 237
 343
 Thorn 193 104 190 084
 Tokyo 216
 Toshiba 035 553 243 036
 070
 Towada 349 102
 Trident 217
 Triumph 177 075 243
 Uher 076 037 057 206
 320
 Univox 337
 Vestel 037
 Vexa 009 037

Video
 System 037
 Visiola 216
 Vision 037 320
 Visorex 432
 Vistar 276
 Vortec 037
 Voxson 087 076 037 363
 Waltham 217 276 356
 Watt Radio 213 102 544 552
 216
 Wega 213 036 087
 Weltblick 037
 White
 Westing-
 house 320 216
 Yoko 217 037 218 264
 009 431
 Yorx 218
 Zanussi 206 305 363

Video Recorders

Aiwa 307 000 041 209
 Akai 106 315 053 281
 288 041 049 379
 Akiba 072
 Akura 271 072 041
 Alba 278 072 333 334
 209 352 192 020
 295
 Allorgan 240
 Amstrad 000 325 332
 Anitech 072 322
 ASA 037 081
 Asuka 072 037 081 000
 Baird 106 278 104 107
 Bestar 278 020
 Blaupunkt 226 227 162 081
 006 195
 Bondstec 020
 Brion Vega 344
 Bush 072 278 333 334
 209 352
 Catron 020
 CGE 041 000
 Cimline 072 209
 Clatronic 020
 Combitech 352
 Condor 020 278
 Crown 278 072 020
 Daewoo 278 020 045
 Dansai 072
 Daytron 278
 Decca 000 041 081
 DeGraaf 042 081
 Dual 041 081
 Dumont 000 081 104 105
 ESC 278
 Elcotech 072
 Elin 240
 Elta 072
 Etzuko 072
 Ferguson* 107 041 320 321

Fidelity	000
Finlandia	104 081 042
Finlux	000 081 104 042
	105
Fisher	047 104 046
Flint	209
Frontech	020
Fujitsu	000
Funai	000
Galaxy	000
GBC	020
GEC	081
General	020
Goldhand	072
Goldstar	037 000
Goodmans	000 072 240 278
	062 037 020 343
Granada	104 046 048 081
	285
Grundig	007 195 081 226
	003 006 347 349
	357 358 420
Hanseatic	037
HCM	072
HiLine	037
Hinari	004 072 293 208
	209 352
Hitachi	042 105 235 041
	145 285
Impego	020
Imperial	000
Ingersol	004
Inno Hit	020 240 278
Interbuy	037
Interfunk	081 104
ITT	106 041 046 235
	344 345 384 104
ITV	278 037
JVC	041 067 008 206
	207 384
Kendo	106 209 315 053
Logik	004 240 072
Luxor	106 046 043
M Elec-	
tronic	000
Manesth	072 045
Marantz	081 038 006 062
Matsui	209 004 192 295
	036 037 208
Mediator	081
Memorex	104 000 046 037
	048 047
Memphis	072
Migros	000
Minerva	195
Mitsubishi	043 067 081
Multitech	000 072 020
Murphy	000
National	226 162
NEC	041 038 067
Necker-	
mann	041 208 006 081
	344
Nesco	072
Nikkai	020 356

Nokia	104 106 041 046
	344 345 240
Nordmende*	041 297 384 320
	321
Okano	315 209
Orion	209 004 036 088
	208 352 295 343
Orson	000
Osaki	000 037 072
Otto	
Versand	081
Palladium	072 315 037 041
	006
Panasonic	226 227 162 225
Perdio	000
Philips	081 006
Phonola	081
Pioneer	067 081
Prinz	000
Profex	322
Proline	000 293
Pye	081
Quelle	006 208 081 344
Rex	041 384
RFT	020
Roadstar	240 072 037 278
Saba*	041 187 297 206
	207 320 321 384
Saisho	004 209 208 192
	036 088 145
Salora	046 043 106 345
Samsung	240 432
Samurai	020
Sansui	041 067 271
Sanwa	004
Sanyo	104 046 047
Saville	352
SBR	081
Schaub	
Lorenz	041 344 106 000
	104
Schneider	072 000 037 081
SEI-	
Sinudyne	004 081
Seleco	041 008
Sentron	072
Sentra	020
Sharp	048 062
Shintom	072
Shivaki	037
Siemens	195 006 037 104
	007
Silva	037
Sinudyne	004 081
Sonolor	048
Sontec	037
Sony	033 034 032
Standard	278
Strong	271
Sunstar	000
Suntronic	000
Sunwood	072
Taisho	004 209
Tashiko	000 048
Tatung	000 041 081
TEC	020

Telefunken*	187 041 297 320 321 384
Tensai	000 322 037 072 004
Thomson*	041 384 405 320 206
Thorn	041 104
Tokai	072 037
Toshiba	045 041 384 043 081 403
Towada	322
Towika	072
Triumph	208
TVA	020
Ultravox	344
Unitech	240
Victor	008 067
Weltblick	037
White West- inghouse	344
Yamishi	072
Yokan	072
Yoko	037 072 020 240

Satellite Receivers

Akai	515
Alba	421 515 455 091 254 362 374 613
Aldes	288 362 520
Allantide	333
Allsat	067 200 364 183
Allsonic	288 369
Altai	396
Ampere	368
Amstrad	080 461 509 252 345 243 213 338
Ankaro	288 217 369 220
Apollo	421
Arcon	368 272 217 373
Armstrong	243
ASAT	373 200
AST	351 350 321
Astra	108 373 376 441 530 539 344
Astro	173 503 358 520 369
Audioton	364 613
Aura	539
Axis	530 369
Barcom	217
Best	217 369
Blaupunkt	173
Boca	243
Brain Wave	332
Broadcast	346
Brunor	409
BT Satellite	515
Bush	091 254 067 328
Cambridge	256 344 515
Camray	213
Channel Master	362
Citycom	394

Clatronic	332
CNT	520
CommLink	288
Comtec	366 266
Condor	369
Connexions	093 168 458 396
Contec	394
Crown	243
Daewoo	373
Dansat	067
DDC	362
Decca	145
Diamond	586
Diskxpress	168 217
Ditristrad	592
DNT	200 458 396
Drake	268 459
Dual	373
Dynasat	376
Echostar	170 218 280 396 454
EEC	333
Einhell	333 243 421 288
Elekta	520
Elta	364 374 421 200 369
Emanon	421
Emme Esse	376 369
EP Sat	455
Eurodec	524 526
Europa	376 220
Eurosat	243
Eurosky	243 369
Eurospace	353
Eurostar	243 374
Exator	421 515
Ferguson*	067 183 336 614 185 328
Fidelity	252 461
Finlux	455 514 344 108 414
Finnosat	524
Freecom	335 421
FTE	266 411 368
Fuba	297 217 227 369 396 421 173 297 298 441 414 172
G-Sat	183 333
Galaxis	366 288 364 530 592 369
Galaxisat	321
GMI	243
Goldstar	335
Goodmans	101 455
Grothusen	335 421
Grundig	173 328 571 463
Hanuri	520
Heliocom	368
High Per- formance	177
Hinari	362 183 374
Hirschmann	287 333 397 398 173 573 495
Hitachi	328 455
Houston	592 220

Huth	346 364 366 288 220 502 243	Panda	455 067
Imperial	254 485	Patriot	515
Intervision	592	Philips	200 292 455 463 328
ITT/Nokia	328 108 573 172 455 397 168	Phoenix	366 101 183
Johansson	332	Phonotrend	288 592 502
JSR	364	PK Sat	333
JVC	515	Polytron	394
Kathrein	331 358 173 394 442 504 480 200	Predki	332
Kosmos	331 442 335 502	Priesner	243
Kreisel- meyer	173	Profi	450
Kyostar	421	Promax	455
Lasat	424 464 513 520 369	Prosat	254 288 485 362
Lenco	335 411 220 373 450 421	Protek	586 333
Leyco	515	Proton	333
Lifesat	605	Provision	520
Lion	333 353	PTT Tele com	213 093
Lorenzen	220	Quadral	362 288 369
Lorraine	335	Quelle	252
Lupus	369	Radiola	200
Luxor	172 108	Radix	396 458
Macab	524	Rainbow	613
Manhattan	455 592 328 520	RE	226
Marantz	200	Redpoint	530
Mascom	520 442	Redstar	369
Maspro	092 336 328 495	Rediffusion	176
Matsui	344 571	RFT	541 288 220
Mega	200	Ruefach	450
Metronic	288 421	Saba	254 328 336 614 353
Micro Technology	333 539 353	Sabre	455
Mimtec	226	Sakura	101 366
Minerva	571	Salora	108 172 187 199
Morgans	348 243 200 513	Samsung	272 287 421
Multistar	331 464	SAT	351 350 321 461 501 362
Muratto	335 321	Satec	183 328
Navex	332	Satcom	213 346 605
NEC	178 176	Satford	346
Network	183	Satmaster	346
Neuhaus	530 501 220 592	Satpartner	332 502 421 335 520 613
Nimbus	226	Schwaiger	394 183 605 504
Nokia	328 108 573 172 455 397 168	Seemann	396 243 530 515
Nordmende	362 455 520 421	SEG	421 369 374 539 332 605
Novis	332	Seleco	592
Oceanic	586 333 353	Siemens	173
Octagon	373 421 220 366 613	Silva	335
Okano	243 502 331	Skardin	530
Optex	394 592	Skymaster	288 605
Orbit	350 351 373 333	Skymax	200 333
Orbitech	501 541	Skyvision	364
Origo	497	SR	243 513
Oxford	344 515	Starion	539
Pace	328 067 183 336 439 455 101	Starring	332
Palcom	223 227 297 298 441 362	Stella	093
Palladium	243 571	Strong	421 266 613 369
Paltec	227	Sumida	243
		Sunstar	513 243
		Syntrack	213
		Tandy	177
		Tantec	297 298 328 336 455

Tatung	145
Techniland	346
Technisat	261 262 320 409
	501 541 458
Teco	373 243 513
Telasat	605
Telecom	093
Telefunken	421 328
Teleka	243 272 442 613
	396
Telemaster	520
Televes	455
Telewire	592
Tensai	373
Thomson	455 614
Thorens	586
Thorn	328 455
Tioko	394
Tonna	346 455
Triad	351 350 335 321
	333 372
Triasat	414
Tristar	266
Uniden	151 194
Unisat	366
Unitor	217 332
Variosat	173
Vector	333 353
Ventana	200
Vortec	287 421 272
V-Tech	351 462 321 350
Wewasat	333 455
Winersat	332
Wisi	173 321 372 396
	406 407 415 455
	351
Wittenberg	080
Wolsey	177
Woorisat	520
Zehnder	321 331 426 520
	504 369
Zodiac	613

Cable Converters

Andover	
Cable-	
vision	544
BT Cable	105
Cabletime	161 271 377 448
Clyde	
Cablevision	086
Cryptovision	600
Filmnet	
Cablecrypt	443
GEC	086
Grundig	529
Jerrold	003 276 014
Movie Time	156
Oak	019
Pioneer	144 260 533
Salora	382
Samsung	144
Satbox	375

Scientific	
Atlanta	008 277 017
Tele+1	443
Teleservice	281
Tudi	286
United	
Cable	003
Videoway	250
Westminster	
Cable	105
Zenith	000 525

CD Players, Mini Disk Players

Adcom	155
Aiwa	124 249 419
Akai	108 198 199 156
Alba	334 536
Arcam	157
Asuka	581
Audiosonic	581
Audio-	
Technica	170
Bestar	164
Braun	243
BSR	134
Bush	388
California	
Audio Lab	029
Condor	134
Crown	122
Denon	034 003
Dual*	139 581
Emerson	155 164 305
Fisher	048 342
Genexxa	000 037 096 175
	426 032 164 305
Goldstar	383
Goodmans	305 280 561
Grundig	157 197
Harman	
Kardon	060 108 109 173
Hitachi	227 291 386 139
	155 386
Intersound	581
JVC	072
Kenwood	037 048 190 028
	523
Kodak	287
Linn	157
Luxman	328 019
M Elec-	
tronic	525
M-Net	443
Marantz	157 180 307
Matsui	288 307 157
McIntosh	256
Memorex	032 155 164 175
	180 305
Meridian	157
Micromega	157
Mission	157
NAD	019 000

Naim	157
Nakamichi	147
Nikko	170
Onkyo	101 102 138
Panasonic	029 303 388
Philips	157 527 274 287
Pioneer	032 096
Proton	157
Quad	157
Realistic	155 164 175 180
Revox	113
Roadstar	461 527 525
Rotel	157
Saba	139
SAE	157
Sansui	157 202 216 305 513
Schneider	134 581
Scott	164 305
Sharp	037 261 262 265 180
Sherwood	180
Siemens	516
Signature	108
Sony	000 185 397 490
Sunwood	581
Teac	180
Technics	029 207 303
Telefunken	139
Thomson	139
Toshiba	019 481 528
Universum	157
Victor	072
Yamaha	036 170 187 261
Yorx	461

Audio Amplifiers

Aiwa	406
Grundig	269
Linn	269
Marantz	269
Meridian	269
Naim	269
Panasonic	308
Pioneer	013 269
Philips	269
Quad	269
Technics	308
Yamaha	143

Audio Amplifier/ Tuners

ADS	375
Aiwa	411 405 158 301 361 121 480 544
Akai	151 346 115 440
Amstrad	023 424
Braun	375
Bush	448 389
Carver	042
Denon	004 273

Dual	512 538
Fisher	042
Genexxa	177 186
Goldstar	281
Goodmans	322
Grundig	189 281
Harman	
Kardon	110
Hitachi	228
Inkel	066
JVC	074 583 464
Kenwood	186 313 314 027
Linn	275
Luxman	166 267 329 330
Marantz	189 412
McIntosh	258
M Elec-	
tronic	112
Memorex	014 068 177
Meridian	275
Mitsubishi	370
Naim	275
Nakamichi	075 347
Nikko	215
Okano	440
Onkyo	100 135 144 380
Panasonic	039 309 389
Philips	189 412 600
Pioneer	014 080 289
Quad	275
Quasar	039
Revox	140 250
Roadstar	346 479
Rotel	610 709
Samsung	112
Sansui	189 323
Sanyo	448
Schneider	020 021 364 584 171
Scott	322
Sharp	186
Sherwood	066 502 491
Siemens	515
Sontec	068
Sony	158 168 415
Soundwave	322
Technics	039 208 518 309
Techwood	364
Uher	346
Universum	112 281
Victor	074
Yamaha	081 176 186

Record Players

Grundig	188
Marantz	188
Philips	188

Miscellaneous Audio

Aiwa	010 159 404
Akai	377
Alba	559
Denon	
Equalizer	529
Digital Planet	
Radio	441
Goodmans	559
Grundig	414
JVC	
Surround	073
Pioneer	271
Pye	559
Roadstar	376 559
Schneider	376
Siemens	414
Scientific	
Atlanta	
DMX	460
Sony	343 010 159 278
	576
Soundesign	376
Technics	517 521
Yorx	376

Audio Cassette Players

Aiwa	015 197 200 263
	264 111 148 290
	316 389 376
Akai	188 189 283 300
	439
Amstrad	021
Arcam	076
Denon	259 260 412 076
	371
Dual*	383 390
Fisher	074
Genexxa	300 439
Goldstar	375
Goodmans	364 365
Grundig	029 355 375
Harman	
Kardon	182
Hitachi	163 164
JVC	244 303 310 273
	274
Kenwood	183 205 233 234
	070 071
Luxman	012 091 095 266
Magnavox	029
Marantz	009 029
Memorex	099 101
Nakamichi	147 151 218 247
	248
Onkyo	100 136 150 282
	362
Panasonic	229
Philips	029

Pioneer	027 099 101
Revox	190
Rotel	174
Sansui	009 029 152 153
Sherwood	337 338 409
Sony	157 170 243
Soundwave	364 365
Tandberg	108 109
Technics	229
Toshiba	326 327 385 387
Universum	391 392 375
Victor	244 273 274
Yamaha	094 097 205

DAT, DCC

Aiwa	319
Denon	031
Grundig	158
Marantz	158
Onkyo	374
Philips	158
Sony	093
Technics	158

Laser Disc Players

Denon	172
Disco	
Vision	023
Grundig	059
Hitachi	023
Mitsubishi	059
NAD	059
Philips	388
Pioneer	023 059
Radiola	388
Sony	193 201
Telefunken	059
Thorn	014

Home Automation

One-For-All	
X-10	
System	167
Matra	
Handsfree	
Phone	535
Superswitch	
System	451

**Excludes a few models which operate on infrared frequencies over 100 kHz.*

Guarantee

UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in material and workmanship under normal use for a period of ninety (90) days from the date of the original purchase. Product will be replaced free of charge if it has been proven to be defective within the 90-day period when said product is returned at customer expense within the warranty period. THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not cover damage or failures caused by products or services not supplied by ONE FOR ALL, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, fire, water, lightning or other acts of God. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets, or any other items used in connection with the product.

There are no express warranties except as listed above. ONE FOR ALL SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid and adequately insured to the address below, together with your purchase receipt or other proof to the date of original purchase.

In the U.K.:	In Ireland:	In Australia:
ONE FOR ALL Ltd	Sherlane Agencies Ltd.	Kenmark Industrial (A)
P.O. BOX 197	Rockford Works,	Co. PTY. LTD.
Yateley, Hampshire	Deansgrange Road,	106 Mitchell Street
GU46 6ZR	Blackrock, County Dublin	Maidstone VIC 3012

IMPORTANT:

IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD, YOU MUST INCLUDE YOUR PURCHASE RECEIPT so that we may establish your eligibility for service and can replace your unit without cost. It would be helpful if you included a note detailing the problem. IF THE UNIT IS RETURNED FOR SERVICE OUTSIDE THE WARRANTY PERIOD, please include a cheque to cover the cost of replacement, handling and return postage. (Prices may differ per model. Please contact ONE FOR ALL customer service in your country for exact amount.)

NOTHING IN THIS GUARANTEE AFFECTS YOUR STATUTORY RIGHTS.

ONE FOR ALL and ONE FOR ALL 6 are trademarks of Universal Electronics Inc.

Copyright © 1995, 1996, 1997, 1998 by Universal Electronics Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronic Inc.

URC-4300
700319



SdL 0798



Printed on Recycled Paper