




URC 6200 Cinema 6+ User Guide

FEATURES AND FUNCTIONS

Here are the features and functions of the *Cinema 6* universal remote control. Use the drawing to locate each feature of the remote, then refer to the chart for a description of what function each feature performs.

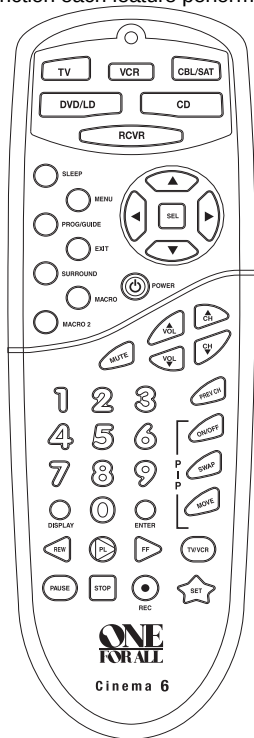

FEATURES AND FUNCTIONS

-  The **Light (LED)** flashes red to show that the remote is working and is sending a signal.
-  The **SETUP** key is used to program your *Cinema 6*.
-  The **POWER** key controls power ON and OFF the same as the **POWER** key on your original remote. Please note that most CD Players do not have an ON/OFF function on the original remote control. If this is the case with your CD Player, then **POWER** will have no effect on your CD Player.



The **TV**, **VCR**, **DVD/LD**, **RCVR**, **DVD/LD**, **RCVR**, **CD** OR **CABLE/SAT**, **CD** and **CABLE/SAT** keys are used to select the home entertainment component you want to control. If your component does not respond when you press a key on the remote control, press the appropriate device key (**TV**, **VCR**, **DVD/LD**, **RCVR**, **DVD/LD**, **RCVR**, **CD** OR **CABLE/SAT**, **CD** or **CABLE/SAT**) first to tell the remote control which component you would like the remote to operate.



The **VOL▲** (Volume Up), **VOL▼** (Volume Down) and **MUTE** keys control the volume the same as the Volume Up and Down and Mute keys on your original remote.



The **CH▲** (Channel Up) and **CH▼** (Channel Down) keys change channels the same as the Channel Up and Down keys on your original remote. The **CH▲/▼** keys also control the following functions in other modes: **DVD/LD** mode = Skip Forward/ Skip Reverse, **RCVR**, and **CD** mode = Preset Up/Preset Down.




The Digit keys (**0-9**) control direct channel access the same as the Digit keys on your original remote. The Digit keys (**0-9**) also control the following functions in other modes: **RCVR** modes = Input Selections.



The **ENTER** key operates the same as the Enter key on your original remote. If your original remote control required you to use an Enter key to change channels, use the **ENTER** key on the *Cinema 6* after entering your channel number. The **ENTER** key also controls the following functions in other modes: **RCVR** modes = TAPE MON.



 
The **PREV CH** (Previous Channel) key operates the same as the Last Channel or Recall key on your original remote. The **PREV CH** key also controls the following functions in other modes: **DVD/LD**, **RCVR** and **CD** mode = Random.

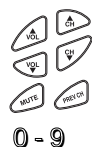

The **CH▲/▼**, **VOL▲/▼**, **MUTE**, **PREV CH** and Digit (**0-9**) keys are made of a phosphorescent material that glows-in-the-dark. Expose the keys to bright light to activate the glow-in-the-dark feature. The length of time the keys remain illuminated will be determined by the length of time the remote is exposed to bright light.



The **SLEEP** key accesses the Sleep Timer of your home entertainment components (**TV**, **CABLE/SAT**, **RCVR** and **DVD/LD**, **RCVR**, **CD** OR **CABLE/SAT** modes only). Even if your component does not have a Sleep Timer, the *Cinema 6* may access its own built-in sleep timer.



The **REW** (Rewind), **PL** (PLAY), **FF** (Fast Forward) **REC** (Record), **STOP**, and **PAUSE** keys operate the same as the transport keys on your original VCR, Laser Disc, DVD and CD Player remote. As a safety feature of the *Cinema 6*, you must press the **REC** key twice before recording.

The **TV/VCR** key operates the same as the **TV/VCR** key on your original VCR remote. The **TV/VCR** key also controls the following functions in other modes: **TV** mode = TV/VIDEO, **CBL/SAT** mode = A/B or TV/SAT, **DVD/LD** mode = TV/LD, **RCVR** mode = Input Select, **CD** mode = A/B.



The **MENU** key operates the same as the MENU or OSD (On Screen Display) key on your original remote. Use **▲**, **▼**, **◀**, and **▶** (Menu Up, Down, Left and Right) to navigate your menus. If your original remote control had a **SELECT** key to select options in your menus, use **SEL**. Use the **EXIT** key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.



The **◀**, **▶**, **▲**, and **▼** (Menu Up, Down, Left and Right) keys are used to navigate your On-Screen menus. The **◀**, **▶**, **▲**, and **▼** keys also control the following functions in other modes: **RCVR** and **DVD/LD**, **RCVR**, **CD OR CABLE/SAT** mode = Rear Level +/- and Balance Left/Right, **CD** mode = Track +/- and Disc +/-.



The **SEL** (Select) key selects options in your On-Screen menu. The **SEL** key also controls the following functions in other modes: **RCVR** and **DVD/LD**, **RCVR**, **CD OR CABLE/SAT** mode = Surround Mode, **CD** mode = Disc Select, **DVD/LD** mode = Chapter.



The **EXIT** key exits or clears your on-screen menus. The **EXIT** key also controls the following functions in other modes: **RCVR**, **DVD/LD**, **RCVR**, **CD OR CABLE/SAT** and **CD** mode = Open/Close.



The **PROG/GUIDE** key operates your components secondary menus as well as your DBS system's and Cable Converter's Guide function. Use the **◀**, **▶**, **▲**, and **▼** (Menu Up, Down, Left and Right) keys to navigate your menus. If your original remote control had a **SELECT** key to select options in your menus, use **SEL**. Use the **EXIT** key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.



The **DISPLAY** key operates the Display function of your home entertainment components.



The **PIP On/Off** key accesses your TV's Picture-in-Picture feature. The **PIP On/Off** key also controls the following functions in other modes: **CD** mode = Disk Skip, **DVD/LD** mode = Subtitle On/Off, **CBL/SAT** mode = View.



The **SWAP** key swaps the Picture-in-Picture window and the TV's main picture. The **SWAP** key also controls the following functions in other modes: **CBL/SAT** mode = SAT.



The **MOVE PIP** key moves the Picture-in-Picture window around your TV screen. The **MOVE PIP** key also controls the following functions in other modes: **DVD/LD** mode = Angle, **CBL/SAT** mode = Next.




The **SURROUND** key operates the same as the Surround On/Off key on your original remote. The **SURROUND** key also controls the following functions in other modes: **VCR** mode = Auto Tracking, **DVD/LD** mode = Disc, **CBL/SAT** mode = Favorite Channel, **CD** mode = 10+.





The **MACRO** and **MACRO2** keys can memorize up to 15 keystrokes per key that can be accessed in sequence with a single key press. These keys are not mode specific.

INSTALLING THE BATTERIES

Your *Cinema 6* requires four (4) new AAA alkaline batteries. To install the batteries:

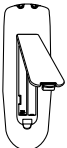- 

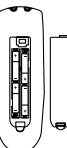On the back of the *Cinema 6*, pull back on the tab and lift the battery cover off.
- 

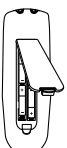Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.
- 

Press the battery cover back into place.
- 

Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light will blink.

NOTE: Removing the batteries will not require you to reprogram your remote control because the *Cinema 6* has unlimited min. memory backup : Allows you time to replace batteries without having to re-program the remote.

SETTING UP YOUR COMPONENTS

Programming the *Cinema 6* to operate your TV:

Locate the brand name of your TV and then write it in the space below.

TV Brand:

Locate the brand name of your TV in the "Setup Codes For TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6* to operate your TV.

To program the *Cinema 6* to operate your TV:

- Turn on your TV.
- 

Press **TV** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.
- Enter the first four-digit TV code listed for your brand in the "Setup Codes For TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- 

Aim the *Cinema 6* at your TV and press **POWER**. Your TV should turn off. If your TV does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV.
- ☐
☐
☐
☐

Your *Cinema 6* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6* to operate your TV, press the **TV** key first.

Setup Codes For TVs

Abex 0032
 Admiral 0093, 0179, 0180, 0016, 0047
 Adventura 0046
 Aiko 0092
 Akai 0030
 Alaron 0179
 A-Mark 0003
 Ambassador 0177
 Anam
 National 0055
 Anam 0180
 AOC 0030, 0019, 0185, 0003, 0052
 Archer 0003
 Audiovox 0451, 0092, 0180, 0003
 Baysonic 0180
 Belcor 0019
 Bell &
 Howell 0154, 0016
 Bradford 0180
 Brockwood 0019
 Broksonic 0003
 Candle 0056, 0030, 0186, 0046
 Carnivale 0030
 Carver 0054
 Celebrity 0000
 Cinerla 0451, 0092
 Citizen 0060, 0092, 0030, 0056, 0186, 0280, 0039,
 0046
 Clairtone 0185
 Concerto 0056
 Contec 0180, 0185
 Craig 0180
 Crown 0180, 0039
 Curtis
 Mathes 0030, 0060, 0154, 0039
 CXC 0180
 Daewoo 0451, 0092, 0019, 0039
 Daytron 0019
 Denon 0145
 Dumont 0017, 0019
 Electroband 0000, 0185
 Emerson 0463, 0236, 0180, 0019, 0154, 0177, 0178,
 0179, 0185, 0280, 0282, 0038, 0039
 Envision 0030
 Fisher 0154, 0159
 Fujitsu 0179
 Funai 0171, 0179, 0180
 Futuretech 0180
 GE 0047, 0051, 0451, 0021, 0027, 0055, 0178,
 0282, 0135
 Gibraltar 0019, 0030, 0017
 Goldstar 0019, 0030, 0178, 0032, 0039
 Gradiente 0053, 0056
 Grunpy 0179, 0180
 Hallmark 0178
 Harvard 0180
 Hitachi 0145, 0151, 0038, 0056, 0032
 Infinity 0054
 Janeil 0046
 JBL 0054
 JCB 0000
 JVC 0053
 Kaypani 0052
 KEC 0180
 Kenwood 0019, 0030
 Kloss 0024, 0046
 KTV 0030, 0180, 0185, 0280, 0032
 LG 0056
 Logik 0016
 Luxman 0056
 LXI 0047, 0054, 0154, 0156, 0178
 Magnavox 0054, 0096, 0186, 0187, 0020, 0024, 0030,
 0386
 Majestic 0016
 Marantz 0054, 0030
 Matsushita 0250
 Megatron 0145, 0003, 0178
 MEI 0185
 Memorex 0056, 0150, 0154, 0016, 0178
 MGA 0150, 0019, 0030, 0178
 Midland 0017, 0047, 0051, 0135, 0032, 0039
 Minutz 0021
 Mitsubishi 0150, 0093, 0019, 0178
 Motorola 0093, 0055

MTC 0060, 0019, 0030, 0056, 0185
 Multitech 0180
 NAD 0156, 0166, 0178
 NEC 0019, 0030, 0056
 Nikko 0030, 0092, 0178
 Noshi 0018
 NTC 0092
 Onwa 0180
 Optimus 0250, 0154, 0166
 Optonica 0093, 0165
 Orion 0236, 0436
 Panasonic 0250, 0051, 0055
 Penney 0047, 0156, 0051, 0030, 0019, 0003, 0018,
 0021, 0027, 0060, 0135, 0178, 0032, 0039
 Philco 0054, 0145, 0096, 0019, 0020, 0030
 Philips 0054
 Pilot 0019, 0030, 0039
 Pioneer 0166, 0038
 Portland 0092, 0019, 0039
 Prism 0051
 Proscan 0047
 Proton 0003, 0052, 0178
 Pulsar 0017, 0019
 Quasar 0250, 0051, 0055, 0165
 RadioShack 0047, 0056, 0154, 0019, 0030, 0165, 0178,
 0180, 0032, 0039
 RCA 0047, 0018, 0019, 0038, 0090, 0135
 Realistic 0056, 0154, 0019, 0030, 0165, 0178, 0180,
 0032, 0039
 Rhapsody 0185
 Runco 0017, 0030
 Sampo 0030, 0052, 0032, 0039
 Samsung 0060, 0019, 0030, 0056, 0178, 0032, 0039
 Samsux 0039
 Sansei 0451
 Sanyo 0154, 0159
 Scimitsu 0019
 Scotch 0178
 Scott 0236, 0019, 0178, 0179, 0180
 Sears 0047, 0054, 0056, 0154, 0156, 0171, 0178,
 0159, 0179
 Semivox 0180
 Semp 0156
 Sharp 0093, 0165, 0039, 0386
 Shogun 0019
 Signature 0016
 Simpson 0186, 0187
 Sony 0000, 0080
 Soundesign 0178, 0179, 0180, 0186
 Spectricon 0003
 Squareview 0171
 SSS 0019, 0180
 Starlite 0180
 Supre-Macy 0046
 Supreme 0000
 Sylvania 0054, 0096, 0020, 0030
 Symphonic 0171
 Tandy 0093
 Tatung 0055, 0003
 Technics 0250, 0051
 Technol Ace 0179
 Techwood 0051, 0056, 0003
 Teknika 0054, 0056, 0060, 0092, 0150, 0016, 0019,
 0179, 0180, 0186, 0039
 Telefunken 0056
 TMK 0056, 0177, 0178
 Toshiba 0156, 0060, 0154
 Tosonic 0185
 Totevision 0039
 Universal 0027
 Vector
 Research 0030
 Victor 0053
 Vidikron 0054
 Vidtech 0019, 0178
 Viking 0046
 Wards 0016, 0019, 0030, 0054, 0056, 0080, 0096,
 0165, 0178, 0179, 0020, 0021, 0027
 White
 Westinghouse 0451, 0463, 0236, 0180
 Yamaha 0019, 0030
 Zenith 0017, 0092, 0016

Programming the *Cinema 6* to operate your VCR:

Locate the brand name of your VCR and then write it in the space below.

VCR Brand:

Locate the brand name of your VCR in the "Setup Codes For VCRs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6* to operate your VCR.

To program the *Cinema 6* to operate your VCR:

1. Turn on your VCR and insert a tape.
2.  Press **VCR** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.

3. Enter the first four-digit VCR code listed for your brand in the "Setup Codes For VCRs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4.  Aim the *Cinema 6* at your VCR and press **POWER**. Your VCR should turn off. If your original VCR remote control did not have a POWER key, press **PL** (Play). Your VCR should start to play. If your VCR does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR.
5. 


 Your *Cinema 6* is now programmed to operate your VCR. Write your VCR code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6* to operate your VCR, press the **VCR** key first.

Zonda 0003

Setup Codes For VCRs

Admiral 0048, 0121, 0184, 0039, 0060, 0202
Adventura 0000
Aiko 0278
Aiwa 0037, 0000
Akai 0041, 0061, 0106
American
 High 0035
Asha 0240
Audiovox 0037
Beaumarck 0240
Bell &
 Howell 0104
Broksonic 0184, 0209, 0479, 0002, 0121, 0295, 0361
Calix 0037
Canon 0035
Capehart 0020
Carver 0081
CCE 0072, 0278
Cineral 0278
Citizen 0037, 0278
Colt 0072
Craig 0072, 0240, 0037, 0047, 0271
Curtis
 Mathes 0035, 0041, 0060, 0202
Cybernex 0240
Daewoo 0278, 0020, 0045
Daytron 0020
Denon 0042
Dynatech 0000
Electrohome 0037
Electroponic 0037
Emerex 0032
Emerson 0209, 0184, 0479, 0278, 0000, 0002, 0036, 0037, 0043, 0061, 0068, 0121, 0184, 0208, 0212, 0295, 0361
Fisher 0104, 0047, 0054, 0066
Fuji 0033, 0035
Funai 0000
Garrard 0000
GE 0060, 0202, 0035, 0048, 0240
Goldstar 0037, 0038
Go-Video 0432, 0526
Gradiente 0000, 0008
Harley

Davidson 0000
Harman/Kardon 0038
Harwood 0072, 0068, 0072
Headquarter 0046
HI-Q 0047
Hitachi 0041, 0105, 0000, 0042
Jensen 0041
JVC 0008, 0041, 0067
KEC 0037, 0278
Kenwood 0038, 0041, 0067
KLH 0072
Kodak 0035, 0037
Lloyd's 0000, 0208
Logik 0072
LXI 0037
Magnasonic 0278
Magnavox 0035, 0081, 0000, 0039, 0110, 0149
Magnin 0240
Marantz 0035, 0081
Marta 0037
Matsushita 0162, 0035, 0454
MEI 0035
Memorex 0162, 0240, 0035, 0037, 0104, 0000, 0039, 0046, 0047, 0048
MGA 0043, 0061, 0240
MGN
 Technology 0240
Minolta 0042, 0105
Mitsubishi 0043, 0048, 0061, 0067
Motorola 0035, 0048
MTC 0240, 0000
Multitech 0000, 0072
NEC 0038, 0040, 0041, 0067, 0104
Nikko 0037
Nikon 0034, 0253
Noblex 0240
Olympus 0035
Optimus 0162, 0048, 0037, 0104, 0454
Optonica 0062
Orion 0209, 0184, 0479, 0002, 0295
Panasonic 0162, 0035, 0077, 0225, 0454
Penney 0035, 0037, 0038, 0040, 0042, 0054, 0240
Pentax 0042, 0105
Philco 0035, 0209, 0479
Philips 0035, 0081, 0062, 0110
Pilot 0037
Pioneer 0067, 0162
Portland 0020
Proscan 0060, 0202
Protec 0072
Pulsar 0039
Quarter 0046
Quartz 0046
Quasar 0162, 0035, 0077, 0454
RadioShack 0000, 0037
Radix 0037
Randex 0037
RCA 0060, 0202, 0240, 0042, 0035, 0048, 0077, 0105, 0106, 0149
Realistic 0000, 0035, 0037, 0046, 0047, 0048, 0062, 0066, 0104
Ricoh 0034, 0253
Runco 0039
Samsung 0240, 0045
Sanky 0048, 0039
Sansui 0000, 0041, 0067, 0271, 0479
Sanyo 0104, 0046, 0047, 0054, 0240
Scott 0043, 0045, 0121, 0184, 0210, 0212
Sears 0000, 0035, 0037, 0042, 0046, 0047, 0054, 0066, 0104, 0105
Semp 0045
Sharp 0048, 0062
Shintom 0072
Shogun 0240
Singer 0072
Sony 0032, 0033, 0034, 0000, 0035, 0253
STS 0042
Sunpak 0253
Sylvania 0035, 0081, 0043, 0000, 0110
Symphonic 0000
Tatung 0041
TEAC 0000, 0041
Technics 0162, 0035
Teknika 0000, 0035, 0037
Thomas 0000

TMK	0240, 0036, 0208
Toshiba	0043, 0045, 0066, 0210, 0212
Totevision	0037, 0240
Unitech	0240
Vector Research	0038, 0040
Vector	0045
Video Concepts	0040, 0045, 0061
Videosonic	0240
Wards	0000, 0035, 0042, 0047, 0048, 0060, 0062, 0072, 0081, 0149, 0212, 0240

White
Westinghouse 0278, 0479, 0209, 0184

XR-1000 0000, 0035, 0072

Yamaha 0038

Zenith 0039, 0000, 0033, 0034

Setup Codes For TV/VCR Combos

American

High 0035*

Brocksonic 0002, 0294, 0479

Colt 0072

Curtis Mathes 0035*

Daewoo 0278*

Emerson 0002, 0294, 0479

Funai 0000

GE 0035*, 0060*, 0048*, 0240

Hitachi 0035*, 0000

HQ 0000

Lloyds 0000

Magnavox 0000, 0035*, 0081*

Magnin 0240

Memorex 0037, 0162*

MGA 0240

Mitsubishi 0048*

Orion 0002, 0294, 0479

Panasonic 0035*, 0162*

Penney's 0035*, 0240, 0162*

Quasar 0035*, 0162*

RCA 0035*, 0060*, 0048*

Sansui 0000, 0479

Sanyo 0240

Sears 0000, 0037

Sony 0032*

Symphonic 0000

NOTE: If your TV/VCR is working on one of the above codes highlighted with an asterisk (*), you may need to program a separate TV code in order to control the volume. Check the list of codes below and follow the instructions detailed in the "Programming the Cinema 6 to Operate Your TV" section to program the supplied TV code.

TV/VCRs working on VCR code 0032 may require TV code 0000 for volume control.

TV/VCRs working on VCR code 0035 may require TV code 0051 for volume control.

TV/VCRs working on VCR code 0048 may require TV code 0093 for volume control.

TV/VCRs working on VCR code 0060 may require TV code 0047 for volume control.

TV/VCRs working on VCR code 0081 may require TV code 0054 for volume control.

TV/VCRs working on VCR code 0162 may require TV code 0250 for volume control.

TV/VCRs working on VCR code 0278 may require TV code 0451 for volume control.

Programming the Cinema 6 to operate your DVD or Laser Disc Player:

Locate the brand name of your DVD or Laser Disc Player and then write it in the space below.

DVD/LD Brand:

Locate the brand name of your DVD or Laser Disc Player in the "Setup Codes For DVD or Laser Disc Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6* to operate your DVD or Laser Disc Player.

To program the *Cinema 6* to operate your DVD or Laser Disc Player:

1. Turn on your DVD or Laser Disc Player and insert a disc.

2.  Press **DVD/LD** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.



3. Enter the first four-digit DVD or Laser Disc Player code listed for your brand in the "Setup Codes For DVD or Laser Disc Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4.  Aim the *Cinema 6* at your DVD or Laser Disc Player and press **POWER**. Your DVD or Laser Disc Player should turn off. If your DVD or Laser Disc Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your DVD or Laser Disc Player.

5. ☐ Your *Cinema 6* is now programmed to operate your DVD or Laser Disc Player.
☐ Write your DVD or Laser Disc Player code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6* to operate your DVD or Laser Disc Player, press the **DVD/LD** key first.

Zenith 0000

Setup Codes for DVD Players

JVC 0558

Kenwood 0534

Mitsubishi 0521

Panasonic 0490

Philips 0539

Pioneer 0525

RCA 0522

Sony 0533

Toshiba 0503

Zenith 0503

Setup Codes for Laser Disc Players

Mitsubishi 0059

NAD 0059

Pioneer 0059

Programming the Cinema 6 to operate your Receiver/Tuner:

Locate the brand name of your Receiver/Tuner and then write it in the space below.

Receiver/Tuner Brand:

Locate the brand name of your Receiver/Tuner in the "Setup Codes For Receivers/Tuners" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6* to operate your Receiver/Tuner.

To program the *Cinema 6* to operate your Receiver/Tuner:

1. Turn on your Receiver/Tuner.

2.  Press **RCVR** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.



3. Enter the first four-digit Receiver/Tuner code listed for your brand in the "Setup Codes For Receivers/Tuners" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4.  Aim the *Cinema 6* at your Receiver/Tuner and press **POWER**. Your Receiver/Tuner should turn off. If your Receiver/Tuner does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Receiver/Tuner.

5. ☐ Your *Cinema 6* is now programmed to operate your Receiver/Tuner. Write your Receiver/Tuner code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6* to operate your Receiver/Tuner, press the **RCVR** key first.

Sony	0193, 0201
Setup Codes For Receivers/Tuners	
ADC	0531
Aiwa	0121, 0158, 0189
Capetronic	0531
Carver	0008, 0042, 0189, 0360
Casio	0195
Clarinette	0195
Denon	0004
Emerson	0424
Fisher	0042, 0219, 0360
Garrard	0424, 0463
Harman/Kardon	0110
JVC	0074
Kenwood	0027, 0313, 0314, 0077, 0186
Koss	0424
Linn	0189
Lloyd's	0195
LXI	0181
Magnavox	0189, 0195, 0531
Marantz	0039, 0189
MCS	0039
Modulaire	0195
NAD	0320
Nakamichi	0347
Onkyo	0135
Optimus	0042, 0080, 0177, 0181, 0186, 0219, 0531, 0670
Panasonic	0039
Penney	0195
Philips	0189
Pioneer	0014, 0080, 0150, 0531, 0630
Quasar	0039
RCA	0054, 0360, 0531
Realistic	0163, 0181, 0195
Sansui	0189
Sanyo	0219
Scott	0163, 0322
Sharp	0186
Sherwood	0491, 0502
Sony	0158, 0474
Soundesign	0670
TEAC	0163, 0463
Technics	0039, 0309, 0518
Victor	0074
Wards	0014, 0042, 0054, 0080, 0158, 0189
Yamaha	0176, 0186

Programming the *Cinema 6* to operate your CD Player:

Locate the brand name of your CD Player and then write it in the space below.

CD Player Brand:

Locate the brand name of your CD Player in the "Setup Codes For CD Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6* to operate your CD Player.

To program the *Cinema 6* to operate your CD Player:

- Turn on your CD Player and insert a disc.
-  Press **CD** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.

- Enter the first four-digit CD Player code listed for your brand in the "Setup Codes For CD Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
-  Aim the *Cinema 6* at your CD Player and press **PL** (Play). Your CD Player should play your disc. If your CD Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.
- Your *Cinema 6* is now programmed to operate your CD Player. Write your CD Player code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6* to operate your CD Player, press the **CD** key first.

Yorx	0195
Setup Codes For CD Players	
Aiwa	0124, 0157
Burmester	0420
California	
Audio Lab	0029
Carver	0157, 0179, 0437
Denon	0003
DKK	0000
Emerson	0305
Fisher	0048, 0174, 0179
Garrard	0393, 0420
Genexxa	0032, 0305
Harman/Kardon	0173
Hitachi	0032
JVC	0072
Kenwood	0028, 0037, 0048, 0190
Krell	0157
Linn	0157
LXI	0305
Magnavox	0157, 0305
Marantz	0029, 0157, 0180
MCS	0029
Mission	0157
MTC	0420
Nikko	0174
NSM	0157
Onkyo	0101
Optimus	0000, 0032, 0037, 0048, 0145, 0179, 0305, 0420, 0437, 0468
Panasonic	0029
Philips	0157
Pioneer	0032, 0468, 0244, 0305
Proton	0157
QED	0157
Quasar	0029
RCA	0764, 0053, 0179, 0305
Realistic	0179, 0180, 0420
Rotel	0157, 0420
SAE	0157
Sansui	0157, 0305
Sanyo	0179
Scott	0305
Sears	0305
Sharp	0037, 0180
Sherwood	0180
Sony	0000, 0185
Soundesign	0145
Tascam	0420
TEAC	0174, 0180, 0393, 0420
Technics	0029
Victor	0072
Wards	0157
Yamaha	0036, 0187

Programming the *Cinema 6* to operate your Cable Converter or Satellite:

Locate the brand name of your Cable Converter or Satellite and then write it in the space below.

Cable Converter Brand:

or

Satellite Brand:

Locate the brand name of your Cable Converter or Satellite in the "Setup Codes For Cable Converters or Satellites" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6* to operate your Cable Converter or Satellite.

To program the *Cinema 6* to operate your Cable Converter or Satellite:

- Turn on your Cable Converter or Satellite.
-  Press **CABLE/SAT** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.

- Enter the first four-digit Cable Converter or Satellite code listed for your brand in the "Setup Codes For Cable Converters or Satellites" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4.  Aim the *Cinema 6* at your Cable Converter or Satellite and press **POWER**. Your Cable Converter or Satellite should turn off. If your Cable Converter or Satellite does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite.

5. ☐
☐
☐
☐ Your *Cinema 6* is now programmed to operate your Cable Converter or Satellite. Write your Cable Converter or Satellite code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6* to operate your Cable Converter or Satellite, press the **CABLE/SAT** key first.

Yorx 0195

Setup Codes For CD Players

Aiwa	0124, 0157
Burmester	0420
California Audio Lab	0029
Carver	0157, 0179, 0437
Denon	0003
DKK	0000
Emerson	0305
Fisher	0048, 0174, 0179
Garrard	0393, 0420
Genexxa	0032, 0305
Harman/Kardon	0173
Hitachi	0032
JVC	0072
Kenwood	0028, 0037, 0048, 0190
Krell	0157
Linn	0157
LXI	0305
Magnavox	0157, 0305
Marantz	0029, 0157, 0180
MCS	0029
Mission	0157
MTC	0420
Nikko	0174
NSM	0157
Onkyo	0101
Optimus	0000, 0032, 0037, 0048, 0145, 0179, 0305, 0420, 0437, 0468
Panasonic	0029
Philips	0157
Pioneer	0032, 0468, 0244, 0305
Proton	0157
QED	0157
Quasar	0029
RCA	0764, 0053, 0179, 0305
Realistic	0179, 0180, 0420
Rotel	0157, 0420
SAE	0157
Sansui	0157, 0305
Sanyo	0179
Scott	0305
Sears	0305
Sharp	0037, 0180
Sherwood	0180
Sony	0000, 0185
Soundesign	0145
Tascam	0420
TEAC	0174, 0180, 0393, 0420
Technics	0029
Victor	0072
Wards	0157
Yamaha	0036, 0187

Programming the Cinema 6 to operate your Cable Converter or Satellite:

Locate the brand name of your Cable Converter or Satellite and then write it in the space below.

Cable Converter Brand:

or

Satellite Brand:

Locate the brand name of your Cable Converter or Satellite in the "Setup Codes For Cable Converters or Satellites" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6* to operate your Cable Converter or Satellite.

To program the *Cinema 6* to operate your Cable Converter or Satellite:

1. Turn on your Cable Converter or Satellite.

2.  Press **CABLE/SAT** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.

3. Enter the first four-digit Cable Converter or Satellite code listed for your brand in the "Setup Codes For Cable Converters or Satellites" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4.  Aim the *Cinema 6* at your Cable Converter or Satellite and press **POWER**. Your Cable Converter or Satellite should turn off. If your Cable Converter or Satellite does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite.

5. ☐
☐
☐
☐ Your *Cinema 6* is now programmed to operate your Cable Converter or Satellite. Write your Cable Converter or Satellite code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6* to operate your Cable Converter or Satellite, press the **CABLE/SAT** key first.

Yorx 0461

Setup Codes for Cable Converters

ABC	0003, 0008, 0014, 0007, 0001, 0011, 0013, 0017
Allegro	0153, 0315
Antronix	0022, 0207
Archer	0797, 0153, 0022, 0207
Belcor	0056
Cable Star	0056
Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153, 0315
Colour Voice	0025, 0031
Comtronics	0040
Contec	0019
Digi	0637
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
Garrard	0153
GC Electronics	0056, 0207
Gemini	0015
General Instrument	0476, 0003, 0014, 0011
Goldstar	0144, 0040
Goodmind	0797
Hamlin	0259, 0009, 0020, 0034
Hitachi	0011
Hytex	0007
Jasco	0153, 0315
Jerrold	0476, 0003, 0014, 0011, 0012, 0015
Linsay	0440
Magnavox	0027
Memorex	0000
Movie Time	0063, 0156
Novaplex	0618
NSC	0063, 0156
Oak	0007, 0019
Optimus	0021

Panasonic	0021, 0107, 0000
Panther	0637
Paragon	0000
Philips	0153, 0025, 0027, 0031
Pioneer	0753, 0144, 0023
Popular	
Mechanics	0400
Prelude	0770
Pulsar	0000
RadioShack	0015, 0315, 0797
RCA	0021
Realistic	0207
Recoton	0400
Regal	0259, 0020
Regency	0002
Rembrandt	0011
Runco	0000
Samsung	0144, 0040
Scientific	
Atlanta	0477, 0008, 0017
Seam	0510
Signal	0015, 0040
Signature	0011
SL Marx	0040
Sprucer	0021
Starcom	0003, 0015
Stargate	0770, 0015, 0040
Starquest	0015
Sylvania	0001
Tandy	0258
Teleview	0040
Texscan	0001
TFC	0310
Timeless	0418
Tocom	0012, 0013
Toshiba	0000
Tusa	0015
TV86	0063
Unika	0153, 0022, 0207
United	
Artists	0007
United	
Cable	0003
Universal	0153, 0022, 0056, 0191, 0207
Videoway	0250
Viewstar	0063, 0027, 0258
Zenith	0525, 0000
Zentek	0400
Setup Codes for Satellites	
AlphaStar	
DBS	0772
Chaparral	0053, 0216
Echostar	
DBS	0775
Echostar	0159, 0269, 0280
Express	
Vu DBS	0775
General	
Instrument	0361
Hitachi DBS	0819
Homecable	0238
HTS DBS	0775
Hughes	
Network	
Systems	
DBS	0749
IQ Prism	0210
IQ	0210
Janeil	0152
Jerrold	
Primestar	0627
Jerrold	0361
Legend	0269
Magnavox	
DBS	0722, 0724
Memorex	
DBS	0724
Memorex	0269
Panasonic	0152
Panasonic	
DBS	0701
Philips DBS	0722, 0724
Primestar	0361, 0627
RCA DSS	0566
Realistic	0052

Sony DBS	0639
Star Choice	
DBS	0869
Star Trak	0180
STS	0210
Toshiba	
DBS	0790
Toshiba	0082
Uniden DBS	0724
Uniden	0052, 0074,

SEARCHING FOR YOUR CODE

If your TV, VCR or Cable Converter does not respond to the *Cinema 6* after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, after trying all of the codes for your TV, you still cannot get the *Cinema 6* to operate your TV, then:

1. Turn on your TV.
2.  Press **TV** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.

3. **9-9-1** Press **9 - 9 - 1**.
4.  Slowly alternate between pressing **POWER*** and **TV** until your TV turns OFF. Make sure that the *Cinema 6* is aimed at your TV during the search. You may have to press this sequence of buttons (**POWER*** then **TV**) up to 100 times to search the entire library of codes.
5. 


 When your TV turns OFF, press and release **SETUP** to lock in the code for your TV. Your *Cinema 6* is now programmed to operate your TV.

*If you are searching for your VCR, CD, LD or DVD Player code, you may want to use the **PL** (Play) key instead of the **POWER** key to search for your code. When your VCR starts to play, press **SETUP** to lock in your code.

NOTE: To search for the codes of your other components, repeat Steps 1 through 4, only substitute the appropriate device key (**VCR, DVD/LD, RCVR, DVD/LD, RCVR, CD OR CABLE/SAT, CD or CABLE/SAT**) for the component you are searching for.

LEARNING THE CODES PROGRAMMED INTO THE CINEMA 6

If you have set up the *Cinema 6* using the "SEARCHING FOR YOUR CODE" procedure, you may want to figure out which three-digit code is operating your equipment. Use this procedure after you have set up your components to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV after setting up your TV using the "SEARCHING FOR YOUR CODE" procedure:

1.  Press **TV** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.

2. **9-9-0** Press **9 - 9 - 0**.
3. **1** For the first digit of your four-digit code, press **1** and count the number of times the red light (LED) blinks on the *Cinema 6*. If the light does not blink when you press the number **1**, the digit is zero.
4. **2** For the second digit, press **2** and count the number of times the red light (LED) blinks on the *Cinema 6*. If the light does not blink when you press the number **2**, the digit is zero.
5. **3** For the third digit, press **3** and count the number of times the red light (LED) blinks on the *Cinema 6*. If the light does not blink when you press the number **3**, the digit is zero.
6. **4** For the fourth and final digit, press **4** and count the number of times the red light (LED) blinks on the *Cinema 6*. If the light does not blink when you press the number **4**, the digit is zero. Now you have your four-digit code.

NOTE: To find out the code for your other components, repeat Steps 1 through 6, only substitute the appropriate device key (**VCR**, **DVD/LD**, **RCVR**, **DVD/LD**, **RCVR**, **CD OR CABLE/SAT**, **CD** or **CABLE/SAT**) for the component code you wish to learn.

SETTING UP OTHER COMPONENTS

In addition to the components labeled on the device keys (**TV**, **VCR**, **DVD/LD**, **CBL/SAT**, etc.), the *Cinema 6* can also operate the following components: Cassette Decks, Infrared Home Automation, Video Accessories and Miscellaneous Audio Components (Graphic Equalizers and Digital Music Service Boxes).

The Setup Codes for these components can be accessed under the following device keys:

Cassette Decks:	Use the VCR Key
IR Home Automation:	Use the CD Key
Video Accessories:	Use the CBL/SAT Key
Miscellaneous Audio:	Use the RCVR Key

For example, to set up a Cassette Player on the VCR key:

1. Turn on your Cassette Player and insert a tape.
2.  Press **VCR** and release. Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**. 
3. Enter the first four-digit Cassette Player code listed for your brand in the "Setup Codes For Audio Cassettes" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4.  Aim the *Cinema 6* at your Cassette Player and press **PL** (Play). Your Cassette Player should play your tape. If your Cassette Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cassette Player.
5. Your *Cinema 6* is now programmed to operate your Cassette Player. Remember, if you want to use your *Cinema 6* to operate your Cassette Player, press the **VCR** key first.

0076, 0238

Setup Codes For Audio Cassette Decks

Aiwa	0029, 0197
Carver	0029
Denon	0076
Harman/Kardon	0182
JVC	0244, 0273
Kenwood	0070
Magnavox	0029
Marantz	0029
Onkyo	0135, 0282
Optimus	0027, 0220
Philips	0029
Pioneer	0027, 0099, 0220
Sansui	0029
Sony	0170, 0243, 0291
Technics	0229
Victor	0273
Wards	0027
Yamaha	0094, 0097

Setup Codes For IR Home Automation

GE	0240
LiteTouch	0084
Lutron	0318, 0597
One For All	0167
RadioShack	0240
Security System	0167
Universal X10	0167
X10	0167

Setup Codes For Video Accessories

Archer	0160
GC Electronics	0160
Jebsee	0160
Rabbit	0081
RadioShack	0160
Roctec	0456
SuperGuide	0169
TeleCaption	0171

Setup Codes For Miscellaneous Audio

Aiwa	0010, 0159
Fisher	0052
Harman/Kardon	0477
Jerrold	0459, 0520
JVC	0073
Nikko	0376
Paramount Pictures	0317
RCA	0056
Schneider	0376
Scientific Atlanta	0460
Sony	0010, 0159
Soundesign	0376
SSI	0317
Starcom	0459
Yorx	0376

RE-ASSIGNING DEVICE KEYS

You can use the *Cinema 6* to operate a second TV or a second VCR or any combination of seven home entertainment components. For example, you may want your *Cinema 6* to control 1 TV, 1 Cable Converter, 1 Receiver, 1 CD Player, 1 DVD Player and 2 VCRs. To accomplish this, you must re-assign one of the device keys to operate the desired component, in this case, a second VCR. The chart below shows you how to re-assign a particular device key and then set up your new component.

TV to VCR	SETUP* + 992 + VCR + TV + TV + SETUP* + VCR code
TV to DVD/LD	SETUP* + 992 + DVD/LD + TV + TV + SETUP* + DVD or LD Player code
TV to RCVR	SETUP* + 992 + RCVR + TV + TV + SETUP* + Audio code
TV to CD	SETUP* + 992 + CD + TV + TV + SETUP* + CD Player code
TV to CBL/SAT	SETUP* + 992 + CBL/SAT + TV + TV + SETUP* + Cable/DBS code
VCR to TV	SETUP* + 992 + TV + VCR + VCR + SETUP* + TV code
VCR to DVD/LD	SETUP* + 992 + DVD/LD + VCR + VCR + SETUP* + DVD or LD Player code
VCR to RCVR	SETUP* + 992 + RCVR + VCR + VCR + SETUP* + Audio code
VCR to CD	SETUP* + 992 + CD + VCR + VCR + SETUP* + CD Player code
VCR to CBL/SAT	SETUP* + 992 + CBL/SAT + VCR + VCR + SETUP* + Cable/DBS code
DVD/LD to TV	SETUP* + 992 + TV + DVD/LD + DVD/LD + SETUP* + TV code
DVD/LD to VCR	SETUP* + 992 + VCR + DVD/LD + DVD/LD + SETUP* + VCR code
DVD/LD to RCVR	SETUP* + 992 + RCVR + DVD/LD + DVD/LD + SETUP* + Audio code
DVD/LD to CD	SETUP* + 992 + CD + DVD/LD + DVD/LD + SETUP* + CD Player code
DVD/LD to CBL/SAT	SETUP* + 992 + CBL/SAT + DVD/LD + DVD/LD + SETUP* + Cable/DBS code
RCVR to TV	SETUP* + 992 + TV + RCVR + RCVR + SETUP* + TV code
RCVR to VCR	SETUP* + 992 + VCR + RCVR + RCVR + SETUP* + VCR code
RCVR to DVD/LD	SETUP* + 992 + DVD/LD + RCVR + RCVR + SETUP* + DVD or LD Player code
RCVR to CD	SETUP* + 992 + CD + RCVR + RCVR + SETUP* + CD Player code

RCVR to CBL/SAT	SETUP* + 992 + CBL/SAT + RCVR + RCVR + SETUP* + Cable/DBS code
CD to TV	SETUP* + 992 + TV + CD + CD + SETUP* + TV code
CD to VCR	SETUP* + 992 + VCR + CD + CD + SETUP* + VCR code
CD to DVD/LD	SETUP* + 992 + DVD/LD + CD + CD + SETUP* + DVD or LD Player code
CD to RCVR	SETUP* + 992 + RCVR + CD + CD + SETUP* + Audio code
CD to CBL/SAT	SETUP* + 992 + CBL/SAT + CD + CD + SETUP* + Cable/DBS code
CBL/SAT to TV	SETUP* + 992 + TV + CBL/SAT + CBL/SAT + SETUP* + TV code
CBL/SAT to VCR	SETUP* + 992 + VCR + CBL/SAT + CBL/SAT + SETUP* + VCR code
CBL/SAT to DVD/LD	SETUP* + 992 + DVD/LD + CBL/SAT + CBL/SAT + SETUP* + DVD or LD code
CBL/SAT to RCVR	SETUP* + 992 + RCVR + CBL/SAT + CBL/SAT + SETUP* + Audio code
CBL/SAT to CD	SETUP* + 992 + CD + CBL/SAT + CBL/SAT + SETUP* + CD Player code

***NOTE:** Here (*) you must hold **SETUP** until the *Cinema 6*'s red light blinks twice.

PROGRAMMING THE MACRO KEYS

The *Cinema 6* has two Macro keys (**MACRO** and **MACRO2**) that allow the user to play back a series of keystrokes, at any time, with the press of one key. For example, to set up a sequence that will turn on your components and change the components to the proper inputs:

-  Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.
- 9-9-5** Press **9 - 9 - 5**. The *Cinema 6*'s red light will blink twice.
-  Press and release one of the **MACRO** keys. This will be the key that will play back the series of keystrokes assigned to that key.
- Begin entering the sequence of keystrokes, up to 15, that you wish to be played back when you press the **MACRO** key. For example:

RCVR + POWER + TV + POWER + TV/VCR
(To change the input on the TV to VIDEO 1) + **CBL/SAT + POWER**.
-  Once your sequence is entered, press and hold **SETUP** until the *Cinema 6*'s red light blinks twice.

Now, using the example above, whenever the programmed **MACRO** key is pressed, the Receiver would power ON, the TV will power ON and change the input to VIDEO 1 and then the Satellite would power ON.

Repeat steps 1 - 5 to then setup a second sequence on the **MACRO2** key.

VOLUME LOCK

Volume Lock allows the user to designate which component will control the volume in the **TV**, **DVD/LD** and **CBL/SAT** modes. To set the Volume Lock to the **TV** mode:

-  Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.
- 9-9-3** Press **9 - 9 - 3**. The *Cinema 6*'s red light will blink twice.
-  Press and release **TV**. The *Cinema 6*'s red light will blink twice.

Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** in the **VCR**, **DVD/LD** and **CBL/SAT** modes your TV will control the volume. If you would like to change the Volume Lock setting to the **VCR**, **DVD/LD** or **CBL/SAT** modes repeat steps 1-3, only substitute the appropriate device key. Setting the Volume Lock to the **TV**, **VCR**, **DVD/LD** or **CBL/SAT** mode will not effect the volume control in the **RCVR** and **CD** mode.

You can also change the Volume Lock setting so that an Audio component controls the volume in all device modes. To change the Volume Lock setting on the *Cinema 6* to the **RCVR** or mode:

-  Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.
- 9-9-3** Press **9 - 9 - 3**. The *Cinema 6*'s red light will blink twice.
-  Press and release **RCVR**. The *Cinema 6*'s red light will blink twice.

Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** your Audio component will control the volume in all device modes. You can also change the Volume Lock setting so that each component controls its own volume. However, some components do not have volume control. Using this setting may eliminate volume control in some device modes. To change the Volume Lock setting on the *Cinema 6* so each mode controls its own volume:

-  Press and hold **SETUP** until the *Cinema 6*'s red light blinks twice, then release **SETUP**.
- 9-9-3** Press **9 - 9 - 3**. The *Cinema 6*'s red light will blink twice.
-  Press and release **VOL▲**. The *Cinema 6*'s red light will blink twice.

Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** on the *Cinema 6* each component will control its own volume, provided each component has volume control.

USING THE SLEEP KEY

The **SLEEP** key allows you to access the sleep timer of your TV, Cable Converter/DBS Satellite or Audio component. You can access your TV, Cable Converter, DBS Satellite or Audio component's Sleep Timer by pressing the **SLEEP** key. Most Sleep Timers advance in increments of 10 or 15 minutes, however, for specific instructions on setting your components Sleep Timer, please consult your original owners manual.

Even if your original Cable Converter remote control did not have a sleep timer, your *Cinema 6* has its own built-in sleep timer. If your Cable Converter does not have a sleep timer, press the **SLEEP** key to activate the *Cinema 6*'s built-in sleep timer. For example:

-  Press and release the **CBL/SAT** key then press the **SLEEP** key once to set the *Cinema 6*'s built-in sleep timer for 15 minutes. The red light will blink once.
-  Each additional press of the **SLEEP** key will add 15 more minutes to the Sleep Timer, up to a maximum of 60 minutes. The LED will blink twice when the sleep timer is set for 30 minutes, 3 times for 40 minutes, or 4 times for 60 minutes.

NOTE: The sleep timer starts 10 seconds after the last press of the **SLEEP** key. Once you have activated the *Cinema 6*'s built-in sleep timer, you must keep the remote control aimed directly at the component.

-  To de-activate the built-in sleep timer, press **POWER**.

NOTE: Plugging your TV into the outlet on the back of the Cable Converter may allow you to turn both your Cable Converter and your TV ON and OFF.

TROUBLE SHOOTING

Problem	Solution
Red light does not blink when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The <i>Cinema 7</i> does not operate your home entertainment components or is not performing commands properly?	Try all of the codes listed for your brand of home entertainment component in the "Setup Codes" section. Many setup codes may allow for partial functionality, however, only one setup code will operate your home entertainment component correctly. Make sure that all of the components you are setting up can be operated with an infrared remote control.
The <i>Cinema 7</i> is not performing commands properly?	Try all of the codes listed for your brand of home entertainment component in the "Set-Up Codes" section. Many set-up codes may allow some degree of operation. However, only one set-up code will work correctly with your home entertainment component.
Problems programming a TV/VCR combo?	Try the VCR set-up codes for your brand. However, some combo units may require both a TV code for volume control and a VCR code for the remaining functions.
VCR not recording?	As a safety feature on the <i>Cinema 7</i> , you must press the REC key twice.
CH ▲/▼ and PREV CH not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions.
Problems changing channels?	If your original remote control required an Enter keystroke when changing channels, press the ENTER key on the <i>Cinema 7</i> after you enter the channel number.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you are aiming your <i>Cinema 7</i> at your home entertainment component and that you are within 15 feet before using your remote.

Consumer Help Line: 1-330-405-8655
E-mail Address: help@oneforall.com
World Wide Web:
<http://www.oneforall.com>

LIMITED WARRANTY

Universal Electronics Inc. ("UEI") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This warranty does not cover damage or failures caused by products or services not supplied by UEI, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. UEI SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

Universal Electronics Inc.
(330)-405-8655
www.oneforall.com

As you add new components to your home entertainment system, One For All® has a remote control that will fit your needs. Look for these exciting products at a retailer near you.

ONE FOR ALL® is the registered trademark of Universal Electronics Inc. Computime International Ltd. is the Licensee of the ONE FOR ALL® brand for USA and Canada

One For All is designed for compatibility in North America excluding Mexico.
URC-6200 Cinema 6+ 12/00