

ONE
FOR ALL[®]

4

URC-7040
701928

ONE FOR ALL 4

UK Universal remote

D

F

E

P

I

NL



PICTURE OF THE ONE FOR ALL 4 REMOTE	3
INSTALLING THE BATTERIES	4
FEATURES AND FUNCTIONS	4
INSTALLATION	
Setting up your devices	6
The Search Method	7
QUICK CODE REFERENCE	8
CHANGING THE MODE OF A DEVICE KEY	9
RESETTING A DEVICE KEY	9
ADVANCED FEATURES	
Colour and Brightness	10
Volume Punch Through	10
Auto Scan	10
Device Sleptimer	11
ONE FOR ALL Sleptimer	11
ONE FOR ALL Recall	12
TROUBLE-SHOOTING	12
Customer Service	13
SETUP CODES	
Televisions	80
Video Recorders	84
Satellite Receivers	86
Cable Converters	89
DVD Players	89

About Your ONE FOR ALL 4

Congratulations on your purchase of the ONE FOR ALL 4 Universal Remote Control. By choosing the ONE FOR ALL 4 remote you have opted for the User Friendly remote control solution. Made according to the highest quality, the ONE FOR ALL 4 will provide you with long-term satisfaction. Please read these enclosed instructions carefully before putting your ONE FOR ALL 4 to use.

Your ONE FOR ALL 4 Remote Package contains:


- Your ONE FOR ALL 4 Remote Control
- Your ONE FOR ALL 4 Manual

Your Manual is divided into two parts: the set-up instructions and the device codes.

PLEASE DO NOT DISCARD THIS MANUAL AS YOU MAY NEED IT AGAIN IN THE FUTURE!

Your ONE FOR ALL 4 can operate four devices: a Television, a Video Recorder, a DVD Player and a Satellite Receiver or Cable Converter.

Your ONE FOR ALL 4 remote needs to be powered by 2 new "AA/LR6" Alkaline batteries.

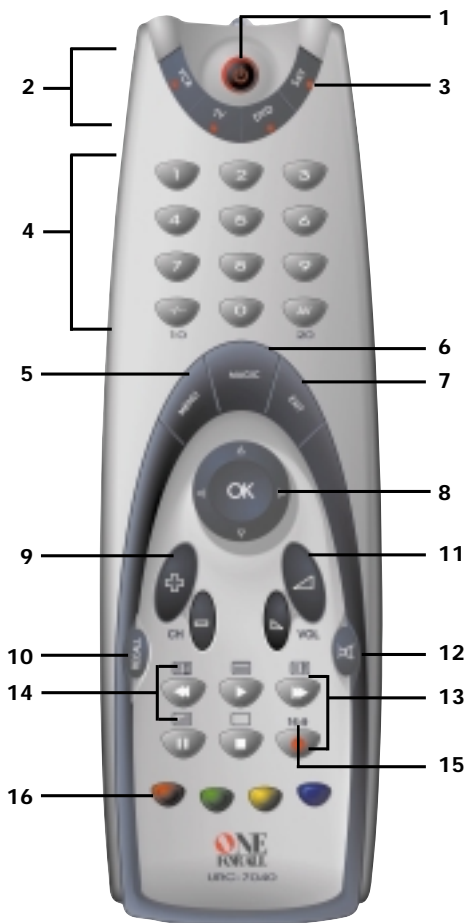

Installing the Batteries

Your ONE FOR ALL 4 Remote needs 2 new "AA/LR6" Alkaline batteries.

- 1 Remove the battery cover from the back of your ONE FOR ALL 4 by pressing down on the arrow on the battery cover and sliding it backwards.
- 2 Match the batteries to the + and - marks inside the battery case, then insert the batteries.
- 3 Slide the battery cover back into place until it clicks. Make sure the battery cover is secure.

Important notes:

- In order to avoid having to re-program your ONE FOR ALL 4 after you remove the batteries, you will need to insert new batteries within 5 minutes. Also it is recommended that you do not use rechargeable batteries.
- On the inside of the battery compartment door you will find a label on which to write your Set-Up Codes for future reference. This you will do after setting up your ONE FOR ALL 4 remote for your devices.

Features and Functions

Please refer to the picture of the ONE FOR ALL 4 Remote Control on Page 3.

- 1 **Power Key:**
The Power key controls the same function as it did on your original remote.
- 2 **Device Keys:**
The TV, VCR, DVD & SAT keys select the home entertainment device you wish to control. For example, pressing the TV key allows the remote to control the functions of your television, etc.
- 3 **4 Mode Indicator LED's:**
During the use of your ONE FOR ALL 4, these LED's will indicate the mode you're using. For example when you are controlling your DVD player, the LED on the DVD key will flash red.
- 4 **Number Keys:**
The Number keys (0-9, -/--(10), AV (20)) provide the functions just like your original remote, such as the direct access to programme/channel selection. If your original remote uses a 10 key, this function can be found by pressing the -/-- key. If your original remote uses a 20 key, this function can be found by pressing the AV key.
- 5 **Menu Key:**
Controls the same function as it did on your original remote control.
- 6 **Magic Key:**
The Magic key is used to set-up your ONE FOR ALL 4 Remote Control and to access special functions.
- 7 **Exit Key:**
The Exit key will exit the Menu.
- 8 **Menu Navigator:**
The Menu Navigator is a miniature joystick. The movement of the navigator up, down, left and right operates the same functions as the up, down, left and right keys of your original remote. By pressing the Menu Navigator, it will operate the same function as the OK/Select key on your original remote control. These keys will allow you to navigate up, down, left and right through the menu of your device.
Please note: the Menu Navigator Joystick is not guaranteed against abusive use such as in on-line gaming now offered by Satellite/Cable Service Providers.

9 Channel Up / Down Control:

The Channel Up / Down keys control the same functions as your original remote control. In DVD mode the Channel Up key operates the ► (Next Track) function, and the Channel down key operates the ◀◀ (Previous Track) function.

10 Recall Key:

The Recall key operates the same function it did on the original remote control. If your original remote control does not have a Recall function you can set the Recall function up with the ONE FOR ALL Recall (see page 12).

11 Volume Up / Down Control:

These keys operate just as those on your original remote.

12 Mute Key:

The Mute key operates the same function it did on your original remote. It is also used to access the scan feature (see page 10).

13 VCR/DVD Playback keys:

After pressing the VCR mode key, the Playback keys operate the same functions of your Video Recorder Keys. To prevent accidental recording of your video, the RECORD key must be pressed **twice**. After pressing the DVD mode key, the Playback keys will operate the same functions of your DVD Players.

14 Teletext Functions:

After pressing the TV mode key, the VCR/DVD Playback keys are used to operate the main teletext functions. The symbols above the keys represent the teletext functions they will access.



TEXT ON: Puts your television in the teletext mode.



TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT key several times.



HOLD/STOP: Stops the television changing text pages.



EXPAND: Shows the top half of the teletext page in larger letters. By pressing again, you can see the bottom half of the teletext page enlarged. To return to the regular teletext viewing, press the Expand key again, or press the Text key, depending on your television.



MIX: Shows the teletext and regular television simultaneously. You may also use this key for subtitling. On some televisions this function is accessed by pressing the Text key twice.

15 Wide Screen/Format/16:9 Function:

The 16:9 key allows you to access the wide screen view option of your television (if the function is available on your original remote).

16 Fasttext Keys:

The Red, Green, Yellow and Blue keys will allow you to access the fasttext functions of your television. Again, your television must have fasttext capability to operate these functions. If on your original remote control these keys are used for Menu operation, the ONE FOR ALL 4 Remote will operate the same. These keys will also operate the same functions as on your original digital satellite/cable remote.






Important note: For a more detailed explanation of the Teletext and Fasttext functions, please refer to the manual of your television. Remember, different televisions control Teletext and Fasttext in different ways. Not all Teletext functions may be available for your particular model.

Installation

Before you start, please read these instructions carefully

Setting Up Your Devices


Example: To set up the ONE FOR ALL 4 for your television:

- 1** Make sure your device (television) you wish to operate is switched on (not in standby).
-  **2** Find the code for your device in the Code List (page 80 - 89). The device codes are listed per device type and brand name. Also the most popular code for each brand is listed first.
-  **3** Press the device mode key (TV) on the ONE FOR ALL 4 remote for the device you wish to set up.
-  **4** Press and hold down MAGIC until the red light blinks twice (the red light will blink once then twice).
-  **5** Enter your four-digit device code using the number keys. The red light will blink twice.
-  **6** Now aim the ONE FOR ALL 4 remote at your device (television) and press POWER. If your device switched off, the ONE FOR ALL 4 is ready to operate your device.
- 7** Turn your device (television) back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-6 using another code listed under your brand.
- 8** If your device (television) does not respond to the code entered, follow steps 1-6 with each code listed for your brand. If none of the codes listed for your brand operate your device (television), or if your brand is not listed at all, try the search method described on page 7.
- 9** Write your devicecode in the applicable four digit boxes provided in the battery compartment and on page 8 for future reference.

Important notes:

- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- For VCR setup: If your VCR's original remote control does not have a POWER key, press PLAY instead of POWER during step 6.
- Remember to press the correct device mode key before operating your device. Only one device can be assigned to each device mode key. If your original remote control operates more than one device, you need to set up each device separately.

Devices can be found under the following keys:

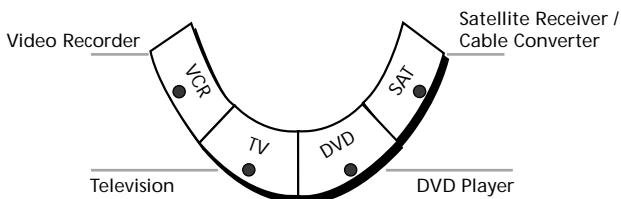






To set up for a second TV, VCR, DVD or SAT (See Changing the Mode of a Device Key, Page 9).

The Search Method

If your device does not respond to the ONE FOR ALL 4 after you have tried all the codes listed for your brand, try searching for your code. The Search Method allows you to find the code for your device by scanning through all the codes contained in the memory of the ONE FOR ALL 4. The search method may also work if your brand is not listed at all.

Example: To search for your television code:

- 1 Switch your television on (not in standby) and aim your ONE FOR ALL 4 at your device.
- 2  Press the **TV** key on the ONE FOR ALL 4.
- 3  Press and hold down **MAGIC** until the ONE FOR ALL 4 red light blinks twice (the red light will blink once then twice).
- 4  Press **9 9 1**. The red light will blink twice.
- 5  Now slowly, alternate between **TV and POWER**, over and over, until your television turns off. You may have to press these keys many times (up to 200 times!), so please be patient. Remember to keep pointing the ONE FOR ALL 4 at your television when you press these keys.
- 6  As soon as your television turns off, press **MAGIC** to store the code.








The ONE FOR ALL remote should now be ready to operate your TV. Turn your TV back on and try all the remote's functions to ensure they are working properly. If some of the ONE FOR ALL 4's commands are not operating correctly, try the search method again. You may be using the wrong code.

Important notes:

- To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during steps 2 and 5.
- If the original remote control of your VCR does not have a POWER key, press PLAY instead of POWER during step 5.

Once you have Set-Up your ONE FOR ALL 4, you can blink back your Set-up Code for future reference.

Example: to blink out your television code:

- 1  Press the **TV** key once.
- 2  Press and hold down **MAGIC** until the ONE FOR ALL 4 red light blinks twice (the red light will blink once then twice).
- 3  Press **9 9 0**. The red light will blink twice.
- 4  For the first digit of your four-digit code, press **1** and count all the red blinks. If there are no blinks, the digit is "0".
- 5  For the second digit of your four-digit code, press **2** and count all the red blinks. If there are no blinks, the digit is "0".
- 6  For the third digit of your four-digit code, press **3** and count all the red blinks. If there are no blinks, the digit is "0".
- 7  For the fourth digit of your four-digit code, press **4** and count all the red blinks. If there are no blinks, the digit is "0". Now you have your four-digit code.

Important note: To blink back the code for your other devices, press the appropriate device key during step 1.

Quick Code Reference





Make sure you write down the codes for your devices in the boxes below and in the battery compartment for future easy reference.

Device Type	Code
1. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
2. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
3. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
4. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

Changing the Mode of a Device Key

With your ONE FOR ALL 4 Remote it is possible to change the mode of a device key. This is useful if you want the ONE FOR ALL 4 to operate more than one of the same device types such as two Televisions or two Video Recorders for example.

Example: to program a second Video Recorder on the SAT key, you need to change the SAT key into a VCR key.

-  Press and hold down the **MAGIC** key until the red light blinks twice (the red light will blink once then twice).
-  Press **9 9 2**. The red light will blink twice.
-  Press the **VCR** key (the device mode you want to duplicate).
-  Now press the **SAT** key (the device mode key you want changed) and the red light will blink twice.

The SAT key of the ONE FOR ALL 4 is now ready to be set-up for your video cassette recorder. To enter the Set-up code for your second VCR, proceed with the setup procedure on page 6 remembering to use VCR codes for the SAT key.

Resetting a Device Key

Example: to reset the SAT key back to its original mode.

- Hold down the **MAGIC** key until the red light blinks twice (the red light will blink once then twice).
- Press **9 9 2**. The red light will blink twice.
- Press the **SAT** key (the device mode you want to reset).
- Now press the **SAT** key again to confirm and the red light will blink twice.

Now your SAT key of the ONE FOR ALL 4 is ready to be programmed for your satellite receivers and cable converters again. To enter the Set-up code for your satellite receiver or cable converter, proceed with the setup procedure on page 6.

Advanced Features

Colour and Brightness

Depending on the functions of your original remote control, the ONE FOR ALL 4 may operate the colour and brightness settings of your television.

Colour (+) = Press and release **MAGIC** then hold **Volume (+)**

Colour (-) = Press and release **MAGIC** then hold **Volume (-)**

Brightness (+) = Press and release **MAGIC** then hold **Channel (+)**

Brightness (-) = Press and release **MAGIC** then hold **Channel (-)**

Important note: You have 5 seconds to press the Volume or Channel keys for the colour or brightness adjustments after pressing MAGIC.

Volume Punch Through

You may be able to use some functions of your Television, Video recorder, DVD player, Satellite receiver or Cable converter at the same time. For example: if you are watching a programme on your video recorder, you can adjust the volume (a TV function) without pressing the TV mode key on your ONE FOR ALL 4. The table below lists some of the possibilities.

Last Device Mode Key Pressed:	You Can Control:
VCR	TV volume up and down, mute
SAT	TV volume up and down, mute
DVD	TV volume up and down, mute

To punch through to TV volume while in the VCR, DVD or SAT mode:

- 1 Press and hold **MAGIC** until the red light blinks twice.
- 2 Press **9 9 3**.
- 3 Then press the **TV** key and the red light will blink twice.

To cancel the "Volume Punch Through":

- 1 Press and hold **MAGIC** until the red light blinks twice.
- 2 Press **9 9 3**.
- 3 Press the **Volume (+)** key and the red light will blink four times.

Auto Scan

Your ONE FOR ALL 4 comes with a special Scan function which lets you scan through every channel available on your television.

To scan the channels on your TV:

- 1 Aim the ONE FOR ALL 4 at your TV. Press the **TV** key. Press and release **MAGIC** then press the **MUTE** key.

The ONE FOR ALL 4 will send the command to advance through all the channels available on your television stopping at each channel for about three seconds. Remember, you must aim the ONE FOR ALL 4 at your television the entire time you are using scan.

- 2 When you find a channel you would like to watch, simply press **any key** to stop the scan.

Important note: Auto Scan may not work with devices that do not have Channel +/- keys on the original remote control.

Device Sleptimer

If your television or satellite receiver has a "Sleptimer" function built in, you can access this function with your ONE FOR ALL remote. To do so:

- 1 Make sure your television or satellite is switched on (not in standby).
- 2 Press the device key (**TV** or **SAT**).
- 3 Point the ONE FOR ALL at your television and press and release **MAGIC** then press **POWER**. You should see the Sleptimer activate on your TV screen.
To increase the timer, simply press **POWER** again (within 5 seconds) until the timer gets to the desired time.

To deactivate the Sleptimer, repeat steps 1-3 above. During step 3, continue pressing **POWER** (within 5 seconds) until the timer indicates zero minutes.

Important note: Depending on how you used the sleptimer function on your original remote, you might need to access the sleptimer of your television in a different way (through menu for example).

ONE FOR ALL Sleptimer

If your device does **not** have a sleptimer function built-in, you can still install the ONE FOR ALL Sleptimer function.

Installing the ONE FOR ALL Sleptimer:

- 1 Press the device key of the device you want to use the sleptimer on (this is only available for **TV** or **SAT**).
- 2 **Press and hold MAGIC** until the red light blinks twice.
- 3 Press **9 7 0**. The red light will blink twice again.

Now your ONE FOR ALL 4 is setup to use the ONE FOR ALL Sleptimer on the device you selected in the setup above.

To activate the ONE FOR ALL Sleptimer:

It is possible to set the ONE FOR ALL Sleptimer for 15, 30, 45 or 60 minutes. To do this, first make sure your TV (or Satellite) is switched on.

- 4 Press the device mode key (**TV** or **SAT**).
- 5 Press and release the **MAGIC** key and then press **POWER**. The red light will blink once to indicate the timer is activated for 15 minutes.
- 6 To increase the timer, simply press the **POWER** key again (this must be done within 5 seconds). The red light will blink twice indicating the timer is set for 30 minutes (2x15).
- 7 You can press the **POWER** to a maximum of four times. This will set the timer to 60 minutes (indicated by 4 blinks).

Once you have set the timer to the desired time, set your ONE FOR ALL remote down, pointing it at your device. When the programmed amount of time has elapsed, the ONE FOR ALL 4 will send the command for **POWER**, thereby turning off your device.

Important notes:

- The red light on the ONE FOR ALL 4 will blink every 15 seconds indicating that the remote is in sleptimer mode.
- To deactivate the timer, simply press any key on the ONE FOR ALL 4 remote.
- Once the ONE FOR ALL Sleptimer has been installed it is not necessary to repeat steps 1-3 above every time you wish to activate the timer. Simply repeat steps 4-7.
- To uninstall the ONE FOR ALL Sleptimer back to device sleptimer, repeat steps 1-3 above and the red light will blink four times.
- Remember to place the remote so it is pointing to your device when the timer is activated.
- The ONE FOR ALL Sleptimer can only be set-up for one device at a time.

ONE FOR ALL Recall (Previous Channel)

If your television has a Recall or Previous / Last Channel function, the Recall key allows you to access this function. If, however, your television does not have a Recall or Previous / Last Channel function, then you can set up your own two favourite channels with the ONE FOR ALL Recall function.

The ONE FOR ALL Recall function allows you to program up to two channels, each consisting of a maximum of 4 key presses per channel entry. This allows you to swap back and forth between two channels with the press of a single key.

- 1 Press the device key (**TV** or **SAT**).
- 2 Press the **MAGIC** and **RECALL** keys simultaneously, until the red light blinks twice.
- 3 Enter the first channel number **exactly as you would on your original remote** (e.g. <-/->, <1>, <2> to get channel number 12).
- 4 Press **RECALL** once and release.
- 5 Enter the second channel number **exactly as you would on your original remote** (e.g. <-/->, <2>, <3> to get channel number 23).
- 6 Press the **MAGIC** key, and the red light blinks twice.

Now, if you press **RECALL**, you will obtain the second channel programmed (being <23>) and if you press **RECALL** again you will obtain the first channel programmed (being <12> in our example).

Important notes:

- To enter only one channel number, skip steps 4 & 5.
- If two channel numbers have been stored previously, entering one new channel will delete the oldest entry.

To reset the RECALL key:

- 1 Press the device key (**TV** or **SAT**).
- 2 Press **MAGIC** and **RECALL** **simultaneously** until the red light blinks twice.
- 3 Press **RECALL** and release.
- 4 Press **MAGIC** and release and the red light will blink twice.

Trouble-Shooting

Problem:	Solution:
Your brand is not listed in the code section?	Try the search method on page 7.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 7.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
Video not recording?	As a safety feature on your ONE FOR ALL, you must press the Record key twice.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
The red light does not blink when you press a key?	Replace batteries with 2 fresh, new "AA/LR6" alkaline batteries.

Customer Service

If you still have questions about the operation of your ONE FOR ALL 4 universal remote and could not find the answer(s) in the trouble shooting section, you may want to contact the customer service department for assistance.

You may care to visit our Internet-site:

www.oneforall.com

Our internet-site has many advantages:

- 24 hours access
- no waiting time
- page for Frequently Asked Questions
- info about the ONE FOR ALL product range

Before contacting us, by Fax, E-mail or Phone, make sure you have the required information available by filling in the table below.

What do we need to know before you contact us:

- 1 That you have the **URC-7040** ONE FOR ALL remote.
- 2 The date of purchase (...../...../.....).
- 3 A list of your equipment/models/helpcodes(*): (see example below)

Helpcode(*)	Device	Brand	Device model nr.	Remote model nr.	SET-UP(***) code
3210805	TV	Sony	KVX-2950B	RMT-V131B	0505 (example)

(***) To obtain the SET-UP CODE, please follow the blink back procedure on page 8.

Type/model numbers can often be found in your equipment owner's manual or on the factory plate behind the device.

4. Then Fax, E-mail or Dial us:

In the UK:

e-mail : ofahelp@uebv.com (**)
fax : +31 53 432 9816
tel : 0808-1000306(*)

In Ireland:

e-mail : ofahelp@uebv.com (**)
fax : +31 53 432 9816
tel : 1-800 553199 (*)

In Australia:

e-mail : ofahelp@uebv.com (**)
fax : 03 9672 2479
tel : 1-300 888298

In South Africa:

e-mail : support@oneforall.co.za
fax : 011 298 2302
tel : 0860 100551
tel : 011 298 2300

In New Zealand:

e-mail : ofahelp@uebv.com (**)
fax : (06) 878 2760
tel : 0508 ONE 4 ALL (663 4 255)

(*) When you call us you will be asked to enter your helpcode(s). You only have to enter the helpcode(s) of those devices you have a problem with. The helpcode is a 7-digit code, which defines the ONE FOR ALL-model you have, the device type and the brand of your device. This helpcode can be found in the first column of the setup code list.

(**) Just send a blank message, you'll get auto-reply.

Televisions

Fernseher

Téléviseurs

Televisores

Televisões

Televisori

Televisies

3210991	A.R. Systems	0037
3211306	Accent	0037
3212089	Acec	0012
3210010	Admiral	0087 0093 0418 0264
3210012	Adyson	0217 0216
3211080	Agashi	0216 0264
3210015	AGB	0516
3210997	Agef	0087
3210017	Aiko	0216 0009 0037 0371 0433 0072 0264 0217
3210018	Aim	0037
3210019	Aiwa	0701
3210020	Akai	0208 0371 0037 0433 0009 0072 0218 0163 0516 0602 0556 0581 0480 0217 0631 0216 0264 0448 0178 0377 0606 0714 0708
3210021	Akiba	0218 0282 0455 0037
3210022	Akito	0037
3210023	Akura	0218 0282 0009 0412 0264 0037 0668
3211267	Alaron	0179 0216
3210024	Alba	0218 0235 0009 0418 0370 0355 0371 0037 0216 0247 0163 0581 0487 0036 0668 0579
3210029	Allorgan	0206 0294 0217
3210032	Allstar	0037
3210041	Amplivision	0217 0400 0320 0370
3210042	Amstrad	0177 0009 0516 0264 0354 0218 0371 0433 0412 0037 0648
3211094	Anam	0037 0009
3211268	Anam National	0037
3210044	Anglo	0009 0264
3210045	Anitech	0009 0264 0037
3210047	Ansonic	0370 0292 0102 0009 0037 0374 0163 0411 0259 0247 0012 0428
3210050	Apollo	0473
3210053	Arc en Ciel	0399 0109 0196 0198
3210054	Arcam	0216 0399 0217
3211307	Ardem	0486
3210057	Aristona	0037 0556 0012
3210059	Arthur Martin	0163 0400
3210060	ASA	0105 0346 0070 0104 0087
3210062	Asberg	0037
3211095	Asora	0009
3210070	Asuka	0218 0264 0216 0282 0217
3210072	Atlantic	0037 0216 0206 0259 0320
3210074	Atori	0009
3210075	Auchan	0163 0400
3210080	Audiosonic	0037 0109 0217 0370 0337 0264 0218 0486 0428
3210081	Audioton	0217 0486 0370 0264
3210085	Autovox	0087 0206 0217 0247
3211156	AWA	0011 0036 0009 0157 0374 0412 0037 0216 0606
3211081	Ayomi	0238
3210091	Baird	0109 0193 0190 0192 0072 0073 0217 0208
3210093	Bang & Olufsen	0565 0087
3210094	Barco	0380 0163
3210097	Basic Line	0218 0009 0374 0037 0163 0282

3210098	Bastide	0217
3210099	Baur	0303 0195 0512 0037 0505
3211082	Bazin	0217
3211079	Beaumarck	0178
3210103	Beko	0370 0486 0037 0714 0606 0715
3210105	Beon	0037 0418
3210106	Best	0337 0370 0421
3210107	Bestar	0037 0370 0374
3210108	Binatone	0217
3210110	Black Star	0247
3210111	Blacktron	0282
3210112	Blackway	0282
3210113	Blaupunkt	0195 0200 0327 0328 0448
3210114	Blue Sky	0218 0282 0455 0037 0487 0668 0714 0715
3210115	Blue Star	0282
3210118	Bondstec	0247
3210119	Boots	0217
3210121	BPL	0282 0037
3210123	Brandt	0109 0399 0196 0198 0335 0625
3210126	Brinkmann	0418 0037
3211030	Brionvega	0037 0087
3210128	Britannia	0216 0217
3211444	Brother	0264
3210133	Bruns	0087
3210134	BSR	0163 0294
3210138	BTC	0218
3210139	Bush	0668 0218 0235 0163 0009 0036 0282 0037 0355 0371 0374 0264 0487 0208 0581 0294 0217
3210149	Capsonic	0264
3211455	Carad	0610 0037
3210150	Carena	0455 0037
3210151	Carrefour	0036 0070
3210153	Carver	0170
3210998	Cascade	0009 0037
3210154	Casio	0037
3210155	Cathay	0037
3211231	CCE	0037 0217
3210160	Centurion	0037
3210161	Century	0087 0247 0238
3210162	CGE	0074 0084 0247 0163 0418 0370
3210167	Cimline	0009 0235 0218
3210169	City	0009
3211073	Clarivox	0418 0070
3210172	Clatronic	0218 0264 0370 0371 0217 0247 0037 0009 0102 0320 0579
3210173	Clayton	0385
3211308	CMS hightec	0217
3210186	Concorde	0009
3210187	Condor	0216 0247 0282 0320 0037 0370 0009 0102 0411 0418 0216 0009 0157 0011 0036
3210191	Contec	
3210192	Continental	
	Edison	0109 0196 0198 0399 0487
3210194	Cosmel	0009 0337
3210196	Crosley	0087 0247 0074 0084 0163
3210197	Crown	0009 0370 0486 0421 0037 0579 0418 0208 0487 0053 0714
3210200	CS Electronics	0247 0216 0218
3210201	CTC	0247
3210202	Curtis Mathes	0093 0166
3210203	Cybertron	0218
3211254	Daenyk	0179
3210205	Daewoo	0009 0037 0216 0374 0218 0217 0624
3210206	Dainichi	0218 0216
3210207	Dansai	0037 0264 0216 0009
3211160	Dansette	0412
3211083	Dantax	0370 0486
3211102	Datsura	0208
3210209	Dawa	0037
3210210	Daytron	0009 0374 0037
3210216	de Graaf	0208 0044 0163
3210214	Decca	0072 0033 0516 0037 0217
3211459	Deitron	0037

3210999	Denko	0264	3210346	Goldline	0337
3211103	DER	0193 0190	3210347	GoldStar	0037 0370 0290 0009 0377
3210220	Desmet	0320 0037			0217 0247 0216 0163 0178
3211000	Diamant	0037			0044
3211310	Digiline	0037	3210349	Goodmans	0036 0072 0037 0009 0264
3210232	Dixi	0009 0037 0247 0217			0516 0290 0179 0374 0487
3210235	Domland	0394			0371 0556 0235 0480 0217
3211255	Drean	0037			0624 0335
3210239	DTS	0009	3210350	Gorenje	0370 0421
3210240	Dual	0217 0259 0037 0394 0399	3210351	GPM	0218
		0303 0163	3211248	Gradiente	0037 0053 0170
3210243	Dumont	0087 0104 0102 0217 0070	3210352	Graetz	0037 0371
		0072	3210353	Granada	0037 0400 0226 0012 0045
3211162	Dux	0037 0012			0072 0108 0208 0217 0036
3210247	Dynatron	0037			0339 0516 0473 0335
3210252	Elbe	0435 0238 0259 0292 0370	3210354	Grandin	0282 0218 0400 0037 0009
		0163 0037 0218 0411 0610			0320 0163 0455 0579 0610
3210254	Elcit	0087 0247 0516 0102 0163			0714 0715
3210255	Elekta	0264 0282	3211107	Gronic	0102 0217
3212093	ELG	0037	3210355	Grundig	0195 0487 0070 0037 0556
3210259	Elin	0216 0037 0105 0104 0448	3210359	Halifax	0264 0216 0217
		0163 0009	3210360	Hampton	0216 0217
3210260	Elite	0218 0037	3211108	Hanimex	0294
3210261	Elman	0102	3210362	Hanseatic	0037 0292 0282 0163 0394
3210263	Elta	0009 0264 0216			0320 0428 0370 0009 0294
3210265	Emerson	0177 0087 0178 0247 0037			0217 0087
		0179 0371 0070 0282 0320	3210363	Hantarex	0009 0037 0102
3210267	Emperor	0282	3210364	Hantor	0037
3210271	Erres	0037 0012	3211280	Harley Davidson	0179
3210272	ESC	0037	3211084	Harwood	0009 0412 0037
3210273	Etron	0037 0009 0163	3211678	Hauppauge	0037
3211632	Eurofeel	0264	3210370	HCM	0264 0009 0282 0412 0217
3210278	Euroman	0216 0264 0037 0217 0421			0218 0418 0037
		0370	3210372	Hema	0217 0009
3210279	Europa	0037	3210374	Hifivox	0109 0196 0399
3210280	Europhon	0037 0516 0102 0217 0247	3211682	Highline	0264 0037
		0163	3211110	Hikona	0218
3210291	Expert	0206 0400 0259 0163	3210377	Hinari	0208 0179 0036 0037 0218
3211001	Exquisit	0037 0247			0009 0163 0355 0443 0487
3211639	Family Life	0037			0235 0294
3210294	Fenner	0374 0009	3210380	Hisawa	0282 0218 0400 0455
3210296	Ferguson	0073 0192 0190 0335 0238	3211004	Hit	0087
		0193 0109 0625	3210381	Hitachi	0036 0044 0043 0473 0163
3210299	Fidelity	0193 0216 0371 0163 0264			0578 0196 0198 0217 0194
		0037			0516 0072 0037 0105 0178
3211164	Filsai	0217			0556
3210301	Finlandia	0208 0346	3211684	Hitachi Fujian	0108
3210302	Finlux	0105 0104 0037 0346 0217	3211170	Hitsu	0009 0455 0218
		0072 0163 0516 0070 0087	3211085	Hornophone	0037 0012
		0179 0102 0411 0631 0480	3210384	Hoshai	0218 0455
		0714	3211086	Huanyu	0374 0216
3210304	Firstline	0294 0216 0037 0374 0385	3210388	Hygashi	0217 0216
		0247 0009 0163 0102 0217	3210389	Hyper	0009 0216 0217 0247
		0411 0238 0072 0235 0668	3210391	Hypson	0037 0264 0217 0282 0455
		0208 0624			0400 0238
3210305	Fisher	0104 0217 0036 0208 0370	3211005	Iberia	0037
		0045 0087 0157 0163 0303	3210393	ICE	0264 0217 0037 0371 0218
		0072			0216 0009
3210307	Flint	0037 0455 0072 0218	3211006	Ices	0218 0216
3211002	FNR	0102	3210395	Imperial	0037 0247 0370 0418 0163
3210308	Forgestone	0193			0074 0084 0196
3210309	Formenti	0087 0216 0320 0163	3210397	Indiana	0037
3210310	Fortress	0093 0087	3211343	Ingelen	0487 0610
3210313	Fraba	0370 0037	3210398	Ingersoll	0009
3211106	Friac	0009 0037 0102 0421	3210401	Inno Hit	0009 0072 0037 0218 0290
3210319	Frontech	0247 0264 0448 0217 0009			0217 0516 0247
3210322	Fujitsu	0179 0206 0072 0102 0217	3211312	Interactive	0411
		0163 0643 0009	3210404	Interbuy	0009 0264 0247
3211457	Fujitsu General	0009 0217	3210405	Interfunk	0037 0012 0087 0512 0327
3210323	Funai	0264 0179 0294			0163 0370 0109
3210326	Galaxi	0102 0037	3211113	Internal	0037
3210327	Galaxis	0370 0418 0037 0102	3210408	Intervision	0282 0217 0455 0037 0371
3210331	GBC	0163 0009 0374 0218			0377 0448 0486 0370 0394
3210333	GE	0109 0178 0282 0335			0487 0218 0102 0163 0264
3211003	Geant Casino	0163 0400			0247
3210335	GEC	0043 0072 0163 0516 0037	3210410	Irradio	0009 0037 0218 0247 0290
		0217	3210412	Isukai	0218 0037 0282
3210336	Geloso	0247 0009 0163 0374	3210413	ITC	0217
3210337	General	0590 0109	3210414	ITS	0037 0371 0218 0282 0264
3210338	General Technic	0009			0216
3210339	Genexxa	0218 0037 0412	3210415	ITT	0163 0480 0473 0193 0346
3210345	Goldhand	0216			0339 0208 0179

3210416	ITT Nokia	0163 0473 0480 0346 0208 0179 0339 0606 0610 0631	3210521	Memphis	0337 0072 0009 0385
3210417	ITV	0264 0037 0247	3210522	Mercury	0037 0009
3211314	Jean	0036	3210525	Metz	0087 0195 0447 0367 0388 0587
3210425	JVC	0653 0053 0190 0036 0192 0193 0371 0218 0606 0643	3210526	MGA	0178
3210427	Kaisui	0218 0282 0037 0216 0455 0217 0009	3211317	Micromaxx	0037 0668
3210428	Kamp	0216	3210531	Minerva	0487 0195 0070
3210429	Kapsch	0206 0163 0259 0104	3210532	Minoka	0412 0037
3210430	Karcher	0037 0421 0370 0282 0102 0610 0264	3210535	Mitsubishi	0108 0512 0037 0093 0178 0354 0087 0033 0036 0193 0292 0290 0291 0370 0216 0609
3211283	Kawasho	0216	3210538	Mivar	0009
3211177	KB Aristocrat	0163	3211186	Monaco	0037
3210432	Kendo	0235 0247 0102 0037 0428 0370 0411 0610 0377	3210540	Morgan's	0093
3210433	Kennedy	0206 0163 0435	3211297	Motorola	0093
3210437	Kingsley	0216	3210543	MTC	0370 0512 0216
3210438	Kneissel	0435 0259 0292 0370 0238 0037 0411 0610	3211187	Multibroadcast	0193
3210441	Kolster	0037 0102	3210545	Multistandard	0102
3210442	Konka	0218 0371 0037	3211452	Multitec	0037 0668
3211315	Kontakt	0487	3210547	Multitech	0217 0009 0216 0247 0102 0486 0370 0037
3210443	Korpel	0037	3210551	Murphy	0104 0216 0072 0163
3210444	Korting	0087 0421 0370 0320	3211791	Musikland	0218
3210445	Kosmos	0037	3210553	NAD	0166 0178
3211181	Kotron	0412 0264	3211124	Naiko	0037
3211350	Kraking	0238	3211125	Nakimura	0374 0037
3211287	KTV	0217	3212099	NAT	0226
3211117	Kyoshu	0264 0412 0418	3210562	National	0226
3210451	Kyoto	0385 0163	3210564	NEC	0170 0036 0320 0455 0009 0374 0217 0037 0011 0704
3212153	Lacson	0037	3210565	Neckermann	0037 0370 0505 0200 0556 0163 0327 0418 0087 0247 0217 0411
3211451	Lemair	0411	3210566	NEI	0037 0337 0371
3210454	Lenco	0009 0374 0104 0163 0037	3210567	Nesco	0247 0179
3210456	Lenoir	0209	3211292	Netsat	0037
3210458	Lesa	0247	3210568	Network	0337
3210461	Leyco	0264 0072 0037 0294 0579 0037 0370 0290 0009 0377	3211012	Neufunk	0037 0009 0556 0610
3211072	LG	0217 0247 0216 0163 0178	3210572	New Tech	0037 0009 0556 0217 0448
3211008	Liesenkotter	0037 0327 0328 0012	3210571	New World	0218
3210463	Lifetec	0009 0264 0037 0374 0218 0643 0668 0512	3210574	Nicamagic	0216
3211240	Lloyd's	0009	3210576	Nikkai	0072 0218 0037 0217 0264 0337 0216 0009 0036
3210472	Loewe	0512 0037 0087 0292 0370	3210577	Nikko	0178
3210474	Logik	0011 0033 0193 0371	3211249	Noblex	0037 0264
3211456	Logix	0668	3210578	Noblisko	0102 0070 0216
3210478	Luma	0206 0037 0163 0259 0411 0374 0009	3210579	Nogamatic	0399 0109 0196
3211009	Lumatron	0206 0037 0163 0259 0217 0264 0073	3210580	Nokia	0163 0480 0473 0339 0208 0374 0631 0606 0346
3210481	Lux May	0037 0009	3210582	Nordmende	0109 0399 0196 0198 0195 0037 0335
3210485	Luxor	0194 0290 0480 0208 0163 0346 0473 0179	3211013	Novatronic	0037 0105 0374
3211241	LXI	0178	3210588	Oceanic	0163 0400 0294 0208
3211316	Madison	0037	3212100	Odeon	0264
3210490	Magnadyne	0087 0247 0516 0102 0163	3210590	Okano	0370 0037 0264 0072
3210491	Magnafon	0516 0102 0216	3211014	Omega	0264
3210492	Magnavox	0036 0179 0037	3210595	Onwa	0371 0602 0218 0433 0581
3211071	Magnum	0648	3210596	Opera	0037
3210495	Mandor	0264	3210598	Optimus	0250 0166
3210496	Manesth	0037 0235 0217 0264 0320 0294	3211299	Optonica	0093
3210497	Manhattan	0037 0668	3210599	Orbit	0037
3210500	Marantz	0037	3210602	Orion	0179 0235 0294 0177 0320 0355 0011 0037 0009 0102 0443 0556 0264 0412
3210503	Marelli	0087	3211015	Orline	0037 0218
3210504	Mark	0037 0217 0216 0374 0009	3211192	Ormond	0385 0668
3211342	Masuda	0218 0009 0371	3210605	Osaki	0072 0218 0217 0264 0037 0412 0374
3210508	Matsui	0235 0177 0009 0355 0011 0033 0072 0036 0037 0556 0487 0217 0354 0294 0371 0433 0443 0579 0455 0516 0163 0208 0045 0195 0335	3211193	Osio	0037
3210513	McMichael	0043	3210607	Oso	0218
3210517	Mediator	0037 0556 0012	3210608	Osume	0157 0072 0036 0218
3210518	Medion	0037 0668	3210610	Otto Versand	0505 0036 0093 0512 0037 0556 0195 0235 0109 0294 0226 0247 0303 0320 0217 0216
3211121	Megas	0610	3210614	Pael	0370 0037 0505 0200 0418
3211291	Megatron	0178	3210616	Palladium	0556 0247 0327 0087 0163 0217 0411
3210487	Melectronic	0346 0037 0512 0109 0247 0105 0104 0374 0009 0217 0480 0216 0411	3211129	Palsonic	0264 0412 0037 0217 0377
3211010	Melvox	0400	3210619	Panama	0009 0217 0264 0216 0037 0247
3210520	Memorex	0009 0178 0250			

3210620	Panasonic	0226 0650 0250 0367 0516 0037 0163	3210724	Samsung	0037 0556 0587 0009 0217 0178 0448 0370 0264 0216 0290 0072 0208 0644
3210622	Panavision	0037 0411	3210726	Sandra	0216 0217
3210628	Pathe Cinema	0163 0238 0216 0400 0320 0292	3211139	Sanela	0238
3210629	Pathe Marconi	0109 0196 0198 0399	3210727	Sansui	0037 0371
3210631	Pausa	0009	3212102	Santon	0009
3210632	Perdio	0072 0320 0163 0037	3210729	Sanyo	0208 0157 0292 0036 0011 0370 0339 0072 0216 0217 0104 0045 0009 0163 0037
3210633	Perfekt	0037	3211318	Save	0037
3211460	Pershin	0400	3210743	SBR	0037 0556 0012
3210634	Philco	0087 0084 0074 0418 0247 0163 0370 0037	3210745	Schaub Lorenz	0606
3210635	Philharmonic	0217	3210746	Schneider	0037 0556 0012 0303 0394 0259 0217 0247 0371 0218 0163 0668 0648
3210636	Philips	0037 0556 0012 0043 0087 0193 0374	3210750	Scott	0178 0179
3210639	Phoenix	0037 0087 0320 0486 0370 0385 0216 0163 0072	3211324	Sears	0178 0179
3210640	Phonola	0037 0556 0012 0087 0193 0216	3210753	SEG	0217 0264 0009 0247 0036 0102 0163 0037 0216 0668 0487
3211336	Pilot	0037 0556	3210754	SEI	0087 0102 0163 0516 0294 0206 0037
3210642	Pioneer	0166 0037 0428 0370 0109	3210756	Seleco	0206 0259 0163 0411
3211132	Pionier	0370 0486	3210757	Sencora	0009
3210644	Plantron	0037 0264 0009	3210759	Sentra	0218 0009
3211066	Playsonic	0217	3211265	Serie Dorada	0178
3210646	Polytron	0697	3211019	Serino	0455 0610
3210647	Poppy	0009	3210762	Sharp	0093 0157 1193 0036 0294 0653 0053 0256 0193
3210648	Portland	0374	3210769	Shorai	0294 0179
3211846	Powerpoint	0487	3211263	Siam	0037
3210650	Prandoni-Prince	0247 0516	3210772	Siarem	0163 0087 0102
3210651	Precision	0217	3210773	Siemens	0200 0195 0327 0328 0157 0037
3210655	Prima	0009 0264	3211916	Siera	0037 0556 0012
3210656	Prinz	0072 0194	3210776	Siesta	0370
3210658	Profex	0009 0163	3210780	Silva	0216 0037
3210660	Profitronic	0037 0102	3210781	Silver	0036 0037 0179
3210662	Proline	0072 0037 0012 0625	3210782	Singer	0087 0102 0247 0400 0435 0009 0037
3210664	Prosonic	0037 0216 0370 0374 0579 0371 0668	3210783	Sinudyne	0177 0087 0235 0102 0294 0163 0516 0206 0037
3210665	Protech	0037 0217 0009 0247 0102 0264 0418 0337 0668	3211298	Sky	0037
3210667	Proton	0178	3212120	Skysonic	0696
3210669	Provision	0037	3210795	Sogera	0320
3210672	Pye	0037 0374 0556 0012 0087	3210797	Solavox	0072 0163
3210673	Pymi	0009	3211927	Sonawa	0218
3211067	Quadra Vision	0400	3210801	Sonitron	0208 0370 0339 0217
3210677	Quasar	0247 0250	3211035	Sonneclair	0037
3210678	Quelle	0037 0011 0109 0512 0036 0217 0247 0074 0084 0327 0070 0104 0105 0157 0195 0200 0264 0290 0668	3210802	Sonoko	0037 0009 0264 0282 0217
3210679	Questa	0036	3210803	Sonolor	0208 0163 0400 0505
3210680	R-Line	0037	3210804	Sontec	0037 0370 0294
3210682	Radialva	0109 0218 0163 0037	3210805	Sony	1505 0505 1651 1010 0011 0036 0102 0074
3210684	Radiola	0037 0556 0012	3210806	Sound & Vision	0102 0218 0374
3210685	Radiomarelli	0087 0516 0247 0037	3210807	Soundesign	0178 0179
3211088	RadioShack	0037 0178	3210809	Soundwave	0037 0320 0418
3210686	Radiotone	0009 0037 0428 0370 0579 0418 0264 0412 0648	3211933	Spectra	0009
3210690	Rank	0070	3211143	Ssangyong	0009
3210691	RCA	0625 0335 0093	3210813	Standard	0218 0009 0217 0320 0037 0374
3210693	Realistic	0178	3210817	Starlite	0009 0163 0037 0264
3211016	Recor	0037	3210822	Stenway	0282 0218
3212101	Rectiligne	0037	3210823	Stern	0206 0259 0163
3210695	Rediffusion	0036	3211020	Strato	0037 0264 0009
3211017	Redstar	0037	3210828	Sunkai	0294 0355 0455 0218 0235 0037 0487
3211018	Reflex	0037	3210831	Sunstar	0371 0037 0009 0579
3210698	Revox	0037 0370	3210833	Sunwood	0037 0009
3210699	Rex	0206 0411 0247 0163 0259	3210835	Superla	0516 0216
3210700	RFT	0087 0292 0370 0428 0072 0264	3210838	SuperTech	0009 0037 0216 0556 0218
3211338	Rhapsody	0216	3210839	Supra	0374 0009
3210701	Roadstar	0009 0264 0218 0418 0037	3210840	Susumu	0335
3210703	Robotron	0087	3210841	Sutron	0009
3211885	Rodex	0037	3211319	Swissline	0247
3211197	Roxy	0448	3210842	Sydney	0216 0217
3210711	Royal Lux	0421 0370 0412	3211021	Sytong	0216
3210715	Saba	0625 0087 0399 0163 0109 0516 0196 0198 0335	3210849	Tandberg	0367 0411 0109 0337 0196 0218 0072 0217 0247 0093
3210718	Sagem	0455 0610 0282	3210850	Tandy	0036 0043 0217 0170 0216 0163
3210720	Saisho	0235 0516 0177 0009 0011 0033 0217 0163 0264 0354	3210852	Tashiko	
3210722	Salora	0290 0194 0163 0516 0339			
3210723	Sambers	0516 0102			

3210853	Tatung	0072 0516 0217 0037 0011
3210854	Teac	0037 0698 0512 0455 0264 0009 0412 0178
3210855	TEC	0217 0009 0247 0335 0337 0259
3211320	Tech Line	0037 0668
3212107	Techica	0218
3210856	Technema	0320
3210857	Technics	0250
3211453	Tedelex	0217
3211978	Teiron	0009
3211328	Teknika	0179
3210866	Teleavia	0109 0196 0399 0490
3210870	Telecor	0037 0163 0218 0217 0259 0394
3210872	Telefunken	0109 0399 0074 0084 0101 0335 0262 0073 0196 0037 0486 0625
3211213	Telefusion	0037
3210874	Telegazi	0037 0163 0259 0218 0264
3210878	Telemeister	0320 0037
3210882	Telesonic	0037
3210883	Telestar	0037
3210884	Teletech	0009 0247 0337 0037 0668
3210885	Teleton	0217 0206 0163 0259 0036
3210887	Televideon	0320 0163 0216
3211022	Televiso	0400
3210889	Temco	0294
3211334	Tempest	0009 0037
3211991	Tennessee	0037
3210891	Tensai	0104 0218 0037 0217 0294 0320 0009 0105 0374 0371 0377 0247
3211023	Tenson	0320 0009
3211461	Tevion	0037 0648 0668
3210892	Textet	0217 0374 0009
3210895	Thomson	0399 0109 0335 0196 0198 0037 0490 0625
3210897	Thorn	0193 0073 0190 0238 0192 0074 0084 0037 0104 0335 0512 0374
3211329	TMK	0178
3210900	Tokai	0072 0037 0448 0337 0163 0217 0374 0009
3210901	Tokyo	0216 0448
3210902	Tomashi	0282 0218
3210905	Toshiba	0508 0036 0070 0102 0217
3210906	Towada	0102 0217
3212109	Toyoda	0009
3212110	Trakton	0264
3210908	Trans Continers	0217 0037
3212111	Transonic	0037 0455 0587 0512
3212008	Transtec	0216
3210913	Trident	0516 0217
3210915	Tristar	0218 0193
3210916	Triumph	0177 0516 0346 0556 0037
3210919	Uher	0037 0206 0320 0303 0374 0418 0486 0370 0259
3211148	Ultra	0192
3210920	Ultravox	0087 0102 0374 0247 0216 0163 0037
3211024	Unic Line	0037 0473
3211215	United	0037
3210929	Universum	0346 0105 0195 0473 0247 0480 0370 0200 0418 0011 0512 0294 0036 0157 0070 0163 0264 0104 0037 0421 0411 0290 0074 0327 0328 0505 0217 0109 0337 0177 0631 0668
3210930	Univox	0337 0087 0037 0163 0238
3210937	Vestel	0037 0163 0217
3210938	Vexa	0009 0037
3210939	Victor	0053
3210942	Videologique	0216 0218 0217
3210943	VideoSystem	0037
3210944	Videotechnic	0216 0320 0217 0374
3211025	Videoton	0163
3211322	Vidikron	0102
3211330	Vidtech	0036 0178
3210947	Viper	0337
3210949	Visiola	0216

3210950	Vision	0037 0320
3210954	Vistar	0206
3210956	Vortec	0037
3210957	Voxson	0087 0037 0418
3210958	Waltham	0217 0418 0385 0037
3210959	Watson	0037 0320 0163 0218 0579 0394 0009 0668
3210960	Watt Radio	0102 0163 0216
3210961	Wega	0036 0087 0037
3211026	Wegavox	0009
3210963	Weltblick	0037 0320
3211245	Wharfedale	0037
3210967	White	0320 0216 0037 0337
3211264	Winco	0412
3211027	Windstar	0282
3210976	Xrypton	0037
3210979	Yamishi	0282 0455 0218 0037 0217
3210980	Yokan	0037
3210981	Yoko	0217 0037 0218 0264 0009 0421 0370 0339 0216 0247
3210983	Yorx	0218
3210984	Zanussi	0206 0217
3211219	Zenor	0339

Video Recorders

Videorecorder

Magnétoscopes

Vídeos

Vídeo Gravadores

Videoregistratori

Videorecorders

3221028	Adelsound	0004
3220012	Adyson	0072
3220019	Aiwa	0307 0000 0041 0348 0352 0037
3220020	Akai	0106 0315 0041 0020 0352 0240
3220021	Akiba	0072
3220023	Akura	0072 0041
3220024	Alba	0278 0072 0352 0020 0000 0315 0348
3220029	Allorgan	0240
3220032	Allstar	0322 0081
3220037	Ambassador	0020
3220042	Amstrad	0000 0325 0278 0072
3220045	Anitech	0072 0322
3220047	Ansonic	0004
3220057	Aristona	0081
3220060	ASA	0037 0081
3220070	Asuka	0072 0037 0081 0000 0038
3220080	Audiosonic	0278
3220081	Audioton	0020
3221156	AWA	0075 0037 0278 0043
3220091	Baird	0106 0278 0104 0041 0000
3220093	Bang & Olufsen	0499
3220097	Basic Line	0278 0020 0072
3220107	Bestar	0278 0020
3220109	Black Panther	0278
3220113	Blaupunkt	0226 0081 0154 0227 0162 0195
3220114	Blue Sky	0037 0348 0072 0352
3220118	Bondstec	0020 0072
3220120	Bosch	0154
3220123	Brandt	0041 0206 0320 0321 0493
3220126	Brinkmann	0348
3220139	Bush	0072 0278 0315 0352 0000 0348
3220150	Carena	0081
3220151	Carrefour	0045
3220154	Casio	0000
3220155	Cathay	0278

3220156	Catron	0020	3220425	JVC	0041 0067 0008 0206 0207 0384
3220162	CGE	0041 0000	3220427	Kaisui	0072
3220167	Cimline	0072	3220430	Karcher	0278
3220172	Clatronic	0020 0072	3220432	Kendo	0106 0315 0348 0072 0037
3220180	Combitech	0352	3220434	Kenwood	0041 0038
3220187	Condor	0020 0278	3221032	Kimari	0047
3220197	Crown	0278 0072 0020 0322	3220438	Kneissel	0352 0348 0037
3220205	Daewoo	0278 0020 0045 0352 0637 0642	3220443	Korpel	0072
3220207	Dansai	0072 0278	3220448	Kuba	0047
3220210	Daytron	0278	3222095	Kuwa	0226
3220216	de Graaf	0042 0081 0104 0048	3220451	Kyoto	0072
3220214	Decca	0000 0041 0081 0008 0067 0348	3220461	Leyco	0072
3221459	Deitron	0278	3221072	LG	0037 0000 0278
3220999	Denko	0072	3220463	Lifetec	0348
3221000	Diamant	0037	3220472	Loewe	0081 0037 0004 1162 0162
3220240	Dual	0041 0081 0278 0000	3220474	Logik	0004 0240 0072 0106
3220243	Dumont	0000 0081 0104	3221009	Lumatron	0278
3220252	Elbe	0278 0038	3220485	Luxor	0106 0043 0072 0062 0104 0047 0048
3220253	Elcatech	0072	3220492	Magnavox	0081
3220259	Elin	0240	3220496	Manesth	0072 0045 0081
3221031	Elsay	0072	3220500	Marantz	0081 0038 0062
3220263	Elta	0072 0278	3220504	Mark	0278 0020
3220265	Emerson	0072 0045	3221033	Marquant	0322
3220272	ESC	0278 0240 0020	3220508	Matsui	0004 0348 0037 0240 0352 0000
3220274	Etzuko	0072	3220517	Mediator	0081
3220280	Europhon	0020	3220518	Medion	0348 0352
3220294	Fenner	0020	3220487	Meletronic	0000 0037 0038
3220296	Ferguson	0041 0320 0321 0493 0000 0278	3220520	Memorex	0104 0000 0037 0048 0047 0072
3220299	Fidelity	0000 0072 0325 0240	3220521	Memphis	0072
3220301	Finlandia	0104 0081 0042 0000 0048	3220525	Metz	0195 0347 0081 1162 0162 0226 0227 0459
3220302	Finlux	0000 0081 0104 0042	3221323	Micormay	0348
3220304	Firstline	0072 0348 0043 0037 0045 0042 0278	3220529	Migros	0000
3220305	Fisher	0047 0104 0038 0020	3220531	Minerva	0195
3220319	Frontech	0020 0322	3220535	Mitsubishi	0043 0067 0075 0081 0608
3220322	Fujitsu	0000	3220547	Multitech	0000 0072 0020 0104 0322
3220323	Funai	0000	3220551	Murphy	0000
3220326	Galaxi	0000	3220553	NAD	0104
3220331	GBC	0020	3220562	National	0226 0162
3220335	GEC	0081	3220564	NEC	0041 0038 0067 0104 0037
3220337	General	0020	3220565	Neckermann	0041 0081
3220338	General Technic	0348	3220567	Nesco	0072 0000 0352
3220339	Genexxa	0104	3220576	Nikkai	0020 0072 0278
3220345	Goldhand	0072	3220580	Nokia	0104 0106 0315 0041 0278 0240 0048 0042 0081
3220347	GoldStar	0037 0000	3220582	Nordmende	0041 0384 0320 0321 0207 0528 0067 0493
3220349	Goodmans	0000 0072 0240 0278 0062 0037 0020 0081 0348 0637 0008	3220588	Oceanic	0000 0048 0106 0081 0104 0041
3221248	Gradiente	0008	3220590	Okano	0315 0348 0072 0322 0278
3220352	Graetz	0041 0104 0240	3220602	Orion	0004 0352 0348
3220353	Granada	0104 0048 0081 0240 0037 0226 0042 0000	3220604	Orson	0000
3220354	Grandin	0072 0037 0020 0000 0278	3220605	Osaki	0000 0037 0072
3220355	Grundig	0195 0081 0347 0226 0320 0348	3220610	Otto Versand	0081
3221108	Hanimex	0352	3220616	Palladium	0072 0315 0037 0041 0004 0240
3220362	Hanseatic	0037 0278 0081	3221129	Palsonic	0072 0000
3220364	Hantor	0020	3220620	Panasonic	1162 0162 0226 0227 0459
3221084	Harwood	0072	3220628	Pathe Cinema	0004 0043
3220370	HCM	0072 0322	3220629	Pathe Marconi	0041
3220377	Hinari	0004 0072 0352 0041 0322 0278	3220632	Perdio	0000
3220380	Hisawa	0352	3220634	Philco	0038 0072
3220381	Hitachi	0042 0041 0000 0240 0081 0004 0104	3220636	Philips	0081
3221085	Hornophone	0081	3220640	Phonola	0081
3220391	Hypson	0072 0278 0352	3220642	Pioneer	0067 0081 0042
3220394	Impego	0020	3220648	Portland	0020 0278
3220395	Imperial	0000 0240	3220656	Prinz	0000
3220398	Ingersoll	0004 0240	3220658	Profex	0322
3220401	Inno Hit	0020 0240 0278 0322 0072	3220660	Profitronic	0081 0240
3220404	Interbuy	0037 0072	3220662	Proline	0000 0320 0321
3220405	Interfunk	0081 0104	3221194	Proscio	0278
3221113	Internal	0278	3220664	Prosonic	0278 0000
3221114	International	0278	3220665	Protech	0081
3220408	Intervision	0000 0278 0037 0348	3220669	Provision	0278
3220410	Irradio	0072 0037 0081	3220672	Pye	0081
3220415	ITT	0106 0041 0384 0104 0240	3220678	Quelle	0081
3220416	ITT Nokia	0048	3220682	Radialva	0037 0072 0081 0048
3220417	ITV	0278 0037 0020	3220684	Radiola	0081
			3220690	Rank	0041

3220699	Rex	0041 0384
3220700	RFT	0020 0072
3220701	Roadstar	0240 0072 0037 0278
3220710	Royal	0322 0072
3220715	Saba	0041 0206 0207 0320 0321 0384 0062 0580 0278
3220720	Saisho	0004 0348
3220722	Salora	0043 0106 0104
3220724	Samsung	0240 0432
3220725	Samurai	0020
3220727	Sansui	0041 0067 0106 0072 0322 0348
3220728	Sanwa	0004
3220729	Sanyo	0104 0047 0048 0067
3220742	Saville	0352 0278 0240
3220743	SBR	0081
3221200	Scan Sonic	0240
3220745	Schaub Lorenz	0041 0104 0000 0106 0315
3220746	Schneider	0072 0000 0037 0081 0278 0240
3222103	Seaway	0278
3220753	SEG	0072 0240 0322 0278 0075
3220755	Sei-Sinudyne	0004 0081
3220756	Seleco	0041 0008 0384 0020 0037
3221250	Semivox	0045
3220759	Sentra	0072 0020
3221910	Setron	0072
3220762	Sharp	0048 0062 0037
3220766	Shintom	0072 0104
3220768	Shivaki	0037
3220769	Shorai	0004
3220773	Siemens	0195 0037 0104 0081
3221916	Siera	0081
3220780	Silva	0037
3220781	Silver	0278
3220783	Sinudyne	0004 0081
3220797	Solavox	0020
3220801	Sonitron	0047
3221035	Sonneclair	0072
3220802	Sonoko	0278
3220803	Sonolor	0048
3220804	Sontec	0037
3220805	Sony	0033 0032 0106 1032
3220809	Soundwave	0037
3221143	Ssangyong	0072
3220813	Standard	0278
3220817	Starlite	0037 0104
3220823	Stern	0278
3220828	Sunkai	0348 0278
3220831	Sunstar	0000
3220832	Suntronic	0000
3220833	Sunwood	0072
3220839	Supra	0037 0240
3220843	Symphonic	0000 0072
3220847	Taisho	0004
3220849	Tandberg	0278
3220852	Tashiko	0000 0048 0240 0081 0037
3220853	Tatung	0000 0041 0081 0048 0043 0348 0352
3220854	Teac	0041 0000 0278 0037 0081 0307
3220855	TEC	0020 0278 0072
3220859	TechniSat	0348
3220866	Televia	0041
3220872	Telefunken	0041 0320 0321 0384 0493 0278
3220884	Teletch	0322 0072 0278 0000
3221334	Tempest	0020
3220890	Tenosal	0072
3220891	Tensai	0000 0322 0037 0072 0004
3221461	Tevion	0348
3220895	Thomson	0041 0384 0320 0206 0321 0493 0528
3220897	Thorn	0041 0104 0037
3220900	Tokai	0072 0037 0041 0104
3222002	Tokiwa	0072
3220904	Topline	0348
3220905	Toshiba	0045 0041 0384 0043 0081
3220906	Towada	0322 0072
3222110	Trakton	0020
3220918	TVA	0020
3220919	Uher	0037 0240

3220920	Ultravox	0278
3220924	Unitech	0240
3220926	United	
	Quick Star	0278
3220929	Universum	0000 0325 0081 0240 0037 0106 0348 0195 0322
3220939	Victor	0008 0067
3220959	Watson	0081 0352
3220963	Weltblick	0037
3220979	Yamishi	0072 0278
3220980	Yokan	0072
3220981	Yoko	0037 0072 0020 0240

Satellite Receivers

Satellitenempfänger

Récepteurs satellites

Receptores de satélite

Receptores de satélite

Ricevitori via Satellite

Satelliet-ontvangers

3230994	ABsat	0832 0668
3230013	Aegir	0520
3230016	AGS	0668
3230020	Akai	0515 0200
3231153	Akena	0668
3230024	Alba	0421 0515 0455 0613 0713 0734
3230027	Aldes	0288 0520 0734
3230030	Allsat	0200 0734
3230031	Allsonic	0288 0369
3230033	Alltech	0713
3230034	Alpha	0668 0200
3230036	Altai	0396
3230039	Amitronica	0713
3230040	Ampere	0396 0829 0132
3230042	Amstrad	0345 0847 0243 0713 0742 0396 0132 0882 0885 0863
3230044	Anglo	0713
3230046	Ankaro	0288 0369 0713
3230049	Anttron	0421 0613
3230050	Apollo	0421
3230056	Arcon	0692
3230058	Armstrong	0243 0200
3230060	ASA	0397
3230061	Asat	0200
3231154	ASLF	0713
3230064	AST	0351
3230065	Astacom	0668 0710
3230068	Astra	0108 0243 0607
3230069	Astro	0173 0358 0520 0613 0369 0501 0658
3230071	Athena	0668
3230081	Audioton	0613
3231155	Austar	0863 0642 0283 0497 0879
3231037	Avalon	0396
3230088	Axiel	0668
3230089	Axis	0369 0834
3230095	Barcom	0108
3230103	Beko	0455
3230106	Best	0369
3230113	Blaupunkt	0173
3230114	Blue Sky	0713 0885
3230117	Boca	0243 0794 0829 0132
3230122	Brain Wave	0692
3230130	Broco	0713
3231070	BskyB	0847
3231531	BT	0515 0668 0710
3231038	Bubu Sat	0713
3231039	BVV	0692
3230143	Cambridge	0515 0501
3230995	Canal Satellite	0853 0292
3231458	Chess	0157 0605

3230170	CityCom	0818 0115 0607	3230387	Huth	0607 0288 0243 0794 0132 1017
3231099	Clark	0613	3230391	Hypson	0417 0136
3230174	Clemens Kamphus	0834	3231175	Imex	0084 0136
3230176	CNT	0520	3231114	International	0132
3230177	Colombia	0668	3230407	Intertronic	0243
3230183	CommLink	0288	3230408	Intervision	0592 0628 0607
3230185	Comtec	0288	3231345	Invideo	0871
3230187	Condor	0369 0607	3230411	IRTE	0609
3230189	Connexions	0396 0369	3231302	Italtel	0871
3230190	Conrad	0607 0573 0115 0369 0501	3230416	ITT Nokia	0108 0573 0455 0397 0873 0723
3230193	Cosat	0592	3230424	JOK	0690 0710
3230197	Crown	0243	3230425	JVC	0515 0571
3230198	Cryptovision	0455	3231048	K-SAT	0713
3231092	D-box	0723 1127 1114 0873	3231176	Kamm	0880 0713
3230205	Daewoo	0713 0421	3230431	Kathrein	0331 0358 0173 0480 0200 0622 0658 0713 0613 0668 0818 0898 1057
3231040	Daumling	0794	3230436	Key West	0794
3231161	Delfa	0863	3232094	Kiton	0114
3231300	Discoverer	0605	3230440	Kolon	0421
3230227	Discovery	0668	3231454	Konig	0607
3231041	Diseqc	0710	3231439	Koscom	0834
3231352	Distratel	0084 0885	3230445	Kosmos	0331
3230230	Distrisat	0200 0592	3230446	KR	0613 0592
3230233	DNR	0692	3230447	Kreiselmeier	0173
3230234	DNT	0200 0396	3230450	Kyostar	0421 0613
3231042	DST	0421	3231304	L&S Electronic	0369 1043
3230244	Dune	0369	3230453	Lasat	0520 0369 0607 0243 0115 0132 0157
3230245	Dynasat	0679	3231049	Lemon	0692
3230248	Echostar	0396 0454 0312 0668 0713 0871 0853 0511	3230454	Lenco	0421 0713 0692 0115 0369 0607
3230250	EIF	0417	3230455	Lennox	0592
3230251	Einhell	0243 0421 0288 0713 0501 0794 0132	3230457	Lenson	0501
3230255	Elekta	0520	3230460	Lexus	0200
3230263	Elta	0421 0200 0369	3230461	Leyco	0515
3230264	Emanon	0421	3230462	Lifesat	0605 0369 1043
3230266	Emme Esse	0369 0679 0871	3230472	Loewe	0243
3231043	Engel	0713	3230475	Lorenzen	0692 0794 0607 0742 0132
3230268	EP Sat	0455	3230479	Lupus	0369
3230275	Eurieult	0417 0136 0084 0885	3230485	Luxor	0108 0345 0573 0873 0501
3231044	Eurocrypt	0455 0108	3230486	M&B1	0605
3230279	Europa	0501 0200 0863 0607	3231050	Manata	0710 0668 0136 0417 0713
3231045	European	0794	3230497	Manhattan	0455 0592 0520 0710 0668 0834 1017
3230282	Eurosat	0243	3230500	Marantz	0200
3230283	Eurosky	0243 0369 0607 0132 0115	3231051	Marave	0417
3230285	Eurostar	0607 0880 1026 0679 1025	3230506	Maspro	0750 0713 0173 0571 0692
3230289	Exator	0421 0515 0613	3230508	Matsui	0571 0710 0173
3231046	Fagor	0592	3230509	Max	0607
3230294	Fenner	0668	3230511	MB	0605
3230296	Ferguson	0455 0711	3231053	Mediabox	0292 0853
3230299	Fidelity	0501	3230515	Mediamarkt	0243
3230301	Finlandia	0455 0108	3230516	MediaSat	0501 0292 0853
3230302	Finlux	0455 0108 0573	3230518	Medion	0713 0369 1043
3231165	Flair Mate	0713	3231120	Medison	0713
3231301	Foxtel	0879 0720 0497	3230519	Mega	0200
3230315	Fracarro	0421 0668 0871	3230487	Meletronic	0818
3230317	Freecom	0421 0734	3230524	Metronic	0421 0417 0243 0613 0288 0520 0084 0136 0818 0885
3230320	FTE	0331 0369 0713	3230525	Metz	0173
3230321	Fuba	0369 0396 0421 0417 0173 0573 0108	3231123	Micro	0607 0613
3230327	Galaxis	0288 0592 0369 0692 0834 0863 0283 0853	3231054	Micro electronic	0713
3231449	Gardiner	0818	3230527	Micro Technology	0713
3230344	GMI	0243	3231185	Microtec	0713
3231168	Goldbox	0292 0853	3230531	Minerva	0571
3230349	Goodmans	0455	3230535	Mitsubishi	0455
3230353	Granada	0108	3230540	Morgan's	0243 0200 0794 0713 0829 0132
3230354	Grandin	0417 0084 0136	3231305	Multichoice	0642 0879
3230355	Grundig	0173 0847 0571 0750 0805 0345 0879 0885	3230546	Multistar	0331
3230362	Hanseatic	0605	3231452	Multitec	0157
3230364	Hantor	0421	3230552	Mysat	0713
3230365	Hanuri	0520	3230569	Neuhaus	0501 0692 0592 0713 0834 0607
3231047	Hase & Igel	0692	3230570	Neusat	0692 0713 0834
3230371	Helicom	0607	3230573	NextWave	0732
3230377	Hinari	0421	3230577	Nikko	0243 0713 0723 0734
3230379	Hirschmann	0397 0173 0573 0501 0396 0710	3230580	Nokia	1127 0108 0723 0573 0873 0455 0397 0751 1023 0853
3230381	Hitachi	0455			
3231171	HNE	0742			
3230385	Houston	0592 0668			
3231172	Humax	0863 0283			

3230582	Nordmende	0455 0520 0421	3231206	SkySat	0157 0605
3232230	Nova	0879	3230794	SL	0692 0132 0742 0243
3230589	Octagon	0421 0613	3231207	Smart	0132
3230590	Okano	0243 0331	3230805	Sony	0847 0455 0853
3231069	OnDigital	0133 0241 0751 0329 0137	3231443	Starland	0713
3230597	Optex	0592 0417	3230824	Strong	0421 0613 0369 0520 0879 0853
3231447	Optus	0879	3230826	STVI	0417 0136
3230599	Orbit	0351 1022	3230827	Sumida	0243
3230600	Orbitech	0501 0421 0548 0157	3230829	Sunny Sound	0369
3230601	Origo	0497	3230830	Sunsat	0713
3230606	OSAT	0345	3230831	Sunstar	0243 0369 0794 0132
3230611	Oxford	0515 0668	3231954	Super Sat	0679
3230612	Pace	0455 0847 0791 0795 0241 0720 0497 0887	3230851	Tantec	0455
3231441	Packsat	0710	3230853	Tatung	0455
3230616	Palladium	0243 0571 0421 0501	3230858	Techniland	0592
3230617	Palsat	0501	3230859	TechniSat	0501 0548 0200
3231130	Panasat	0879 0615	3230860	Technowelt	0607
3230620	Panasonic	0455 0847	3230862	Teco	0243
3230623	Panda	0455 0108 0607 0173 0834	3230863	Telesat	0605 0115 0607
3230627	Paristad	0417	3230868	Teleciel	0613 0734
3230630	Patriot	0515 0668	3230869	Telecom	0713
3230636	Phillips	0200 0292 0455 0750 0710 0613 0805 0668 0853 0571 0173 0133 0818 0898	3230872	Telefunken	0421 0710
3230641	Phonotrend	0288 0592 0863	3230875	Teleka	0243 0613 0396 0750 0692 0501 0607 0834
3230642	Pioneer	0329 0853 0292	3230876	Telemaster	0520
3231133	Planet	0871	3230880	Telesat	0605 0607
3230646	Polytron	0396	3230883	Telesat	0501
3231134	Praxis	0511	3230884	Teletech	0880 0114
3230652	Predki	0421	3230886	Televs	0455 0501
3230653	Preisner	0243 0132 0396 0794	3230888	Telewire	0592
3230654	Premier	0592	3230895	Thomson	0455 0713 0292 0853 0115 0607 0820 0668 0710 1046
3231056	Premiere	0292 0853 0873	3230897	Thorn	0455
3231853	Pro Visat	0734	3230898	Tioko	0243
3230661	Profile	0668	3230900	Tokai	0200
3230663	Prosat	0288 0628	3230903	Tonna	0455 0592 0668 0501 0713 0834
3230664	Prosonic	0742	3230905	Toshiba	0455 0137
3230669	Provision	0520	3230992	TPS	0820
3230672	Pye	0571	3230911	Triad	0351 0372
3231087	Pyxis	0834	3230912	Triasat	0501
3230676	Quadral	0288 0369 0628 0668 0710	3231061	Triax	0501 0115 0200 0396 0713 0853
3230678	Quelle	0607 0742 0115	3231147	Twiner	0417
3230684	Radiola	0200	3232019	UEC	0879
3230687	Radix	0396 0882	3230923	Unisat	0243 0200
3230689	Rainbow	0613	3230929	Universum	0173 0571 0397 0607 0115 0742
3230694	Red Star	0369	3230932	Variosat	0173
3230700	RFT	0288 0200	3230936	Ventana	0200
3230701	Roadstar	0713	3230937	Vestel	0742
3230708	Rover	0628 0713	3232036	Videocrypt	0711 1014
3230715	Saba	0520 0690 0734 0710 0692 0885 0115 0607	3230952	Visiosat	0351 0690 0713
3230716	Sabre	0455	3230956	Vortec	0421
3230718	Sagem	0820 1114	3230931	VTech	0351 0690 0818
3230722	Salora	0108	3230962	Wela	0713 0794 0132
3230724	Samsung	0421 0853	3231091	Wetekom	0829 0157 0605 0501
3230731	SAT	0351 0501	3230966	Wewa	0455
3230740	Sat Partner	0421 0520 0613 0734	3231217	Wibo	0243
3230732	Sat Team	0713	3231062	Wintergarten	0288
3230734	Satcom	0605 0607	3230969	Wisi	0638 0173 0372 0690 0396 0455 0351 0501 0834 0607
3230735	Satec	0713	3230971	Woorisat	0520
3231057	Satelco	0369	3232113	Worldsat	0668 0710
3230738	Satline	0628	3231151	XCOM	0832 0123
3231058	Schäcke	0613	3230976	Xrypton	0369
3230746	Schneider	0805 0898 0710	3230993	XSat	0832 0668 0713
3230747	Schwaiger	0605 0732 0157 0607 0885 0692	3232070	Zaunkonig	0692
3231442	SCS	0115	3230986	Zehnder	0331 0520 0369 0818 0742 0114 0115
3230751	Sedea		3230987	Zenith	0856
3230752	Electronique	0421	3231064	Zeta Technology	0200
3230752	Seemann	0396 0243 0515	3230989	Zodiac	0613
3230753	SEG	0421 0369 0605 0742 0114	3230990	Zwergnase	0794 0243
3230756	Seleco	0592 0871			
3231141	Servi Sat	0136 0417 0592			
3230773	Siemens	0173			
3230785	Skantin	0713			
3231205	Skinsat	0501			
3230787	SKR	0713			
3231298	Sky	0856 0887 0847 1014			
3230789	Skymaster	0288 0605 0628 0713 0880 0157			
3230790	Skymax	0200			

Cable Converters

Kabelsignalumwandler

Décodeurs de câble

Decodificadores

Conversores de Cabo

Convertitori di reti

Kabel Decoders

3230025	Alcatel	0896 0897
3231155	Austar	0276
3231544	Canal Plus	0443
3231564	Comcrypt	0443
3231583	Decsat	0423
3231641	Filmnet	0443
3230996	France Telecom	0451 0817 0896 0897
3231076	General Instruments	0276
3230421	Jerrold	0003 0276
3231341	Kabelvision	0003
3230489	Macab	0817
3231782	MNet	0443
3232151	Mr Zap	1112
3232098	Mr Zapp	0817
3232072	NLT Cabletell	0276
3231447	Optus	0276
3230612	Pace	1068 1060
3230636	Phillips	0451 0817
3230642	Pioneer	0144
3231065	PVP Stereo Visual	0003
3230718	Sagem	0817
3230724	Samsung	0144
3230748	Scientific Atlanta	0277
3230864	Tele+1	0443
3230879	Telepiu	0443
3230917	Tudi	0286
3230925	United Cable	0003
3232040	Videotron	0250
3230945	Videoway	0250
3232121	Visionetics	1064
3230951	Visiopass	0451 0817
3230987	Zenith	0000

DVD Player

DVD Spieler

Lecteur DVD

DVD

Leitor de DVD

Lettore DVD

DVD speler

3282085	3DLAB	0539
3282155	Afreedy	0698
3280139	Bush	0699 0690 0689
3282192	cineULTRA	0699
3280217	Denon	0490
3281233	Denver	0699
3282092	Denzel	0665
3280222	Diamond	0651
3280240	Dual	0665
3280263	Elta	0690
3282165	Encore	0698

3282136	Enzer	0665
3280347	GoldStar	0591
3280355	Grundig	0539 0695 0652
3280366	Harman/Kardon	0702
3280381	Hitachi	0665 0573
3282145	JMB	0695
3280434	Kenwood	0490
3281729	Kiss	0665
3282153	Lecson	0696
3280454	Lenco	0699
3281072	LG	0591
3280492	Magnavox	0503
3280500	Marantz	0539
3280508	Matsui	0651 0695
3281775	Micromedia	0503
3280528	Micromega	0539
3281783	Monyka	0665
3281012	Neufunk	0665
3280594	Onkyo	0503
3280598	Optimus	0525
3280602	Orion	0695
3280603	Oritron	0651
3280620	Panasonic	0490
3280636	Phillips	0539 0503
3280641	Phonotrend	0699
3280642	Pioneer	0525 0571
3280662	Proline	0652
3281865	Raite	0665
3281871	REC	0490 0689
3280701	Roadstar	0699 0690 0689
3281340	Sampo	0698
3280724	Samsung	0573
3280727	Sansui	0695
3280753	SEG	0665
3281922	SM Electronic	0690
3280805	Sony	0533
3280857	Technics	0490
3280891	Tensai	0690
3281461	Tevion	0651
3280895	Thomson	0551
3280900	Tokai	0665
3280905	Toshiba	0503
3280929	Universum	0591
3282156	Wesder	0699
3281245	Wharfedale	0696
3280977	Yamaha	0490
3282067	Yamakawa	0665
3280987	Zenith	0503 0591

Guarantee UK UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please notice that we need your purchase receipt so that we may establish your eligibility for service.

GARANTIE D UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantiert dem Kunden, dass dieses Produkt bei sachgemäßem und ordentlichem Gebrauch für die Dauer eines Jahres vollkommen frei von Defekten materieller oder technischer Art bleiben wird, gerechnet ab Kaufdatum. Falls erwiesen werden kann, dass innerhalb der Garantiezeit eines Jahres ein Defekt entstanden ist, wird dieses Produkt gebührenfrei ersetzt, falls besagtes Produkt innerhalb der Garantiezeit auf Kosten des Kunden zurückgeschickt wird. Diese Garantie erstreckt sich nicht auf Verpackungen, Transportbehältnisse, Batterien, zerbrochene oder beschädigte Gehäuse oder andere Objekte, die in Verbindung mit dem Produkt verwendet werden. Jegliche weitere Verpflichtung als die oben aufgeführte wird ausgeschlossen. Um unseren Garantieservice innerhalb der Garantiezeit in Anspruch nehmen zu können, wählen Sie bitte die Nummer die Sie auf der Kundendienstseite finden um weitere Instruktionen zu erhalten. Bitte beachten Sie, dass wir Ihren Kaufbeleg brauchen um fest zu stellen ob Sie Anspruch auf unseren Garantieservice erheben können.

GARANTIE F UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantit à l'acheteur d'origine que ce produit est certifié franc de défauts matériels et de main d'œuvre durant une période d'un (1) an à partir de la date d'achat original à la condition exclusive que ce produit ait été utilisé de manière normale et correcte. Ce produit sera remplacé gratuitement s'il s'est révélé défectueux pendant ladite période d'un (1) an, produit devant être retourné à la charge du client durant la période de garantie. Cette garantie ne saurait couvrir d'aucune manière que ce soit emballages en carton, coffrets portables quelconques, piles, corps d'appareil cassé ou endommagé ou tout autre article utilisé en combinaison avec ce produit. Nous nous réservons le droit de rejeter tout autre engagement que ceux cités plus haut. Pour pouvoir obtenir le service de garantie durant la période de garantie, veuillez nous contacter au numéro mentionné sur la page "Service Consommateurs" pour les instructions nécessaires. Veuillez noter que la preuve d'achat est obligatoire afin de pouvoir déterminer votre droit à ce service.

GARANTIA E UNIVERSAL ELECTRONICS/ONE FOR ALL garantiza al comprador que este producto estará libre de defectos materiales o de fabricación, al menos durante 1 año desde la fecha actual de su adquisición, y en caso de que se utilice de un modo normal y correcto. Este producto será sustituido de forma gratuita siempre y cuando se pueda demostrar que es defectuoso y que esto haya sucedido dentro del año de garantía, corriendo a cuenta del comprador los gastos de su devolución. Esta garantía no cubre embalajes, maletines, envoltorios, pilas, armarios u otros objetos utilizados en conexión con este producto. Se excluyen otras obligaciones, cualesquiera que sean, además de las mencionadas más arriba. Para obtener servicio de garantía dentro del periodo correspondiente a ésta, por favor, llámenos al número de teléfono que se menciona en la página de Servicio de Atención al Cliente. Por favor, asegúrese de tener su recibo o ticket de compra para que podamos establecer su legitimidad a este servicio.

GARANTIA P A UNIVERSAL ELECTRONICS INC./ONE FOR ALL garante ao cliente a protecção deste produto no que respeita a defeitos de fabrico de material, dentro de um período de uso correcto e normal de 1 ano a partir da data da compra do mesmo produto. Este produto será substituído sem qualquer encargo no caso de ter sido comprovada qualquer avaria dentro do período de 1 ano e após o seu retorno (custos de envio da responsabilidade do consumidor) dentro deste mesmo prazo. Esta garantia não cobre embalagens de cartão, caixas, pilhas, ou outros itens usados em conjunto com este produto. Qualquer outra obrigação para além daquela acima descrita não será tida em consideração. Para obter o serviço de garantia durante o período a este destinado, para mais informações contacte-nos no número mencionado na página do Serviço de Apoio ao Cliente. Por favor tome nota que se lhe é pedido o comprovativo de compra, de forma a que possamos confirmar a sua legitimidade para este serviço.

GARANZIA I La compagnia Universal Electronics inc./ ONE FOR ALL garantisce l'acquisto originale che questo prodotto sarà esente da difetti di mano d'opera dietro l'utilizzo proprio di 1 anno. Questo prodotto sarà sostituito gratuitamente se verrà provato che è difettoso entro l'anno di garanzia e ovviamente accompagnato dalla prova dello scontrino che assicura la data d'acquisto. La garanzia non copre la scatola, l'imballaggio, le pile o ogni altro articolo che abbia a che vedere con il prodotto. Non ci sono ulteriori obblighi di qui sopra elencati. Per accedere al nostro servizio al cliente durante l'anno di garanzia potete chiamare al seguente numero telefonico che trovate sulla pagina "Servizio Clienti". Vi chiediamo cortesemente di conservare lo scontrino affinché noi possiamo stabilire la vostra credibilità, per richiedere un nostro servizio.

GARANTIE NL UNIVERSAL ELECTRONICS INC./ONE FOR ALL garandeert de klant, dat dit produkt bij normaal en correct gebruik vrij van materiële of technische defecten zal blijven voor een periode van één jaar, gerekend vanaf de datum van aankoop. Als aangetoond kan worden dat binnen de periode van één jaar een defect is ontstaan, zal dit produkt gratis vervangen worden als het genoemde produkt op kosten van de klant binnen de garantieperiode teruggestuurd wordt. Deze garantie is niet van toepassing voor verpakkingen, dozen voor transport, batterijen, gebroken of beschadigde behuizing of enig ander object, dat in verbinding met dit produkt gebruikt wordt. Elke andere verplichting dan het bovengenoemde wordt uitgesloten. Om gebruik te maken van onze garantieservice tijdens de garantieperiode, belt u het nummer dat u vindt op de Klantenservice pagina. Wij maken u erop attent dat wij uw bewijs van aankoop nodig hebben om vast te stellen of u voor deze garantieservice in aanmerking komt.

URC-7040
701928



Printed on Recycled Paper

DD-1001