



English

Instruction manualP. 2

Deutsch

Français

Español

Português

Italiano

Nederlands



URC-7210

Universal remote

Universal Fernbedienung

Télécommande universelle

 
Mando a Distancia Universal

Telecomando Universal

Telecomando Universale

Universele Afstandsbediening

PIC
INS
THI



CO
QU
PRO

You

You
You
kee
You
You

PICTURE OF ONE FOR ALL TV REMOTE	3
INSTALLING THE BATTERIES	4
THE KEYPAD	4

SET UP

SETTING UP THE ONE FOR ALL	6
Direct code set up	6
Search Method	7
SET-UP CODES	
Televisions	9

COLOUR AND BRIGHTNESS	8
QUICK CODE REFERENCE	8
PROBLEM & SOLUTION	8

About Your ONE FOR ALL

Your ONE FOR ALL Package contains:

 
 
- Your ONE FOR ALL TV Remote
- Your ONE FOR ALL Manual

Your manual is divided into two parts: set-up instructions and device codes.

You may need this guide again in the future, so please be sure to keep it.

Your ONE FOR ALL needs 2 new "AA/LR6" alkaline batteries.

Your ONE FOR ALL can operate a Television.

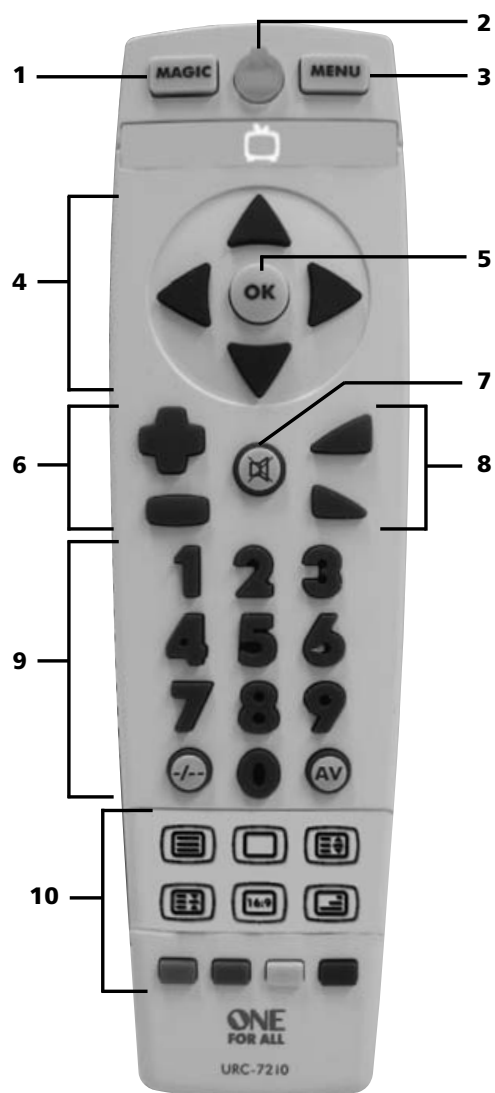

You

1

2

 
3



See

1

2



3

4

5

6

7

8

Installing the Batteries

Your ONE FOR ALL needs 2 new "AA/LR6" alkaline batteries.

- 1 Remove the battery cover from the back of your ONE FOR ALL by pressing down on the tab.
- 2 Match the batteries to the + and - marks inside the battery case, then insert the batteries.
- 3 Press the battery cover back into place.

Important notes:

- In order to avoid having to reprogram your ONE FOR ALL after you remove the batteries, you will need to insert new batteries within 5 minutes. Also it is best that you do not use rechargeable batteries.
- On the inside of the battery compartment door you will find a label on which to write your Set-Up code after your ONE FOR ALL is set up for your device. Please write down your code for easy, future reference.

The Keypad

See picture of ONE FOR ALL TV remote on page 3

- 1 **MAGIC Key**
The MAGIC key is used to set up your ONE FOR ALL 4.
- 2 **POWER**
The POWER key operates the same function it did on your original remote control. The red light (LED - Light Emitting Diode) underneath the POWER key will light up every time a key is pressed.
- 3 **MENU Key**
The MENU key controls the same function as it did on your original remote.
- 4 **DIRECTIONAL KEYS**
If available on your original remote, these keys will allow you to navigate through the menu mode of your device.
- 5 **OK**
The OK key will confirm your choice in menu operation.
- 6 **Programme (Channel) +/- Keys**
These keys operate in the same way as the keys on your original remote.
- 7 **MUTE Key**
The Mute key operates the same function it did on your original remote control.
- 8 **Volume +/- Keys**
These keys operate in the same way as the keys on your original remote.

9 Number Keys

The Number keys (0-9, -/--, AV) provide functions just like your original remote, such as direct access programme selection. If your original remote uses one/two digit input switching (-/-- symbol), this function can be obtained by pressing the -/-- key. If your original remote has an 10 key, this function can also be found under the -/-- key. If your original remote has an 20 key, this function can also be found under the AV key.

10 Teletext and Fastext Keys

The text keys are used to access the Teletext functions of your television. Of course, your television must have Teletext capability.



TEXT ON: Puts the television in the Teletext mode.



TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT ON key several times.



EXPAND: Shows the top half of the Teletext page in larger letters. By pressing again, you can see the bottom half of the Teletext page enlarged. To return to regular Teletext viewing, press the EXPAND key again, or press the TEXT ON key, depending on your television.



HOLD/STOP: Stops changing pages.



16:9: The 16:9 key allows you to have wide screen view (if available on your original remote).



MIX: Shows teletext and regular television simultaneously. You may also use this key for subtitling. On some televisions this function is accessed by pressing the text key twice.

Important note: For a more detailed explanation of Teletext and Fastext, please refer to the manual of your television. Remember, different televisions control Teletext and Fastext features in different ways. Not all of the Teletext functions may be available for your particular model.

After accessing the text mode, the bottom row of the keys marked **red**, **green**, **yellow** and **blue**, allow you to access the Fastext functions of your television. **If on your original remote control these keys are used for Menu navigation, the ONE FOR ALL Fastext keys may operate in the same way.**

Setting up the ONE FOR ALL

Before you start, please read these instructions carefully

Direct code set up

To set up the ONE FOR ALL for your television:

-  Find the code for your device in the Code list (page 9 - 17). Codes are listed by brand name. The most popular code is listed first. **Make sure your device is switched on (not on standby).**
-  **Press and hold the MAGIC key until the POWER key (LED) blinks twice** (the red light (LED) underneath the POWER key will blink once then twice).
-  Enter your **(four-digit device code)** using the number keys. The red light will blink twice.
-  Now, aim the ONE FOR ALL at your device and **press POWER. If your device switches off, the ONE FOR ALL is ready to operate your device.**
- Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-4 using another code listed under your brand.
- If your device does not respond, follow steps 1 to 4 with each code listed for your brand. If none of the codes listed for your brand operate your device, or if your brand is not listed at all, try the search method described on page 7.**
- Write your code in the four boxes provided in the battery compartment and on page 8 for easy future reference.**

Important notes:

- Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.

Se

If yc
all t
Met
the
Met
To s

1

2

3

4

5

6

In

One
SET
Exa

1

2

3

4

5

6

Search Method

If your device does not respond to the ONE FOR ALL after you have tried all the codes listed for your brand, try searching for your code. The Search Method allows you to find the code for your device by scanning through all the codes contained in the memory of the ONE FOR ALL. The Search Method may also work if your brand is not listed at all.

To search for your TV code:

- 60). 1 Switch your television on (not on standby).
- 2  **Press and hold the MAGIC key until the POWER key (LED) blinks twice** (the red light (LED) underneath the POWER key will blink once then twice).
- 3  Press **9 9 1**. The red light will blink twice.
- 4  Next, press **POWER**.
- 5  Aim the ONE FOR ALL at your Television. Now press **CH+** over and over, until your Television turns off (everytime you press the CH+ key the ONE FOR ALL will send out a POWER signal from the next code contained in the memory). You may have to press this key many times (up to 150 times) so please be patient. If you skip past a code, you can go to the previous code(s) by pressing the CH- key. Remember to keep pointing the ONE FOR ALL at your Television while pressing this key.
- 6  As soon as your television turns off, press **MAGIC** to store the code.

Important note:

- Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.

Once you have Set-Up your ONE FOR ALL, you can blink back your SET-UP CODE for future reference.

Example: To blink out your Television code:

- 1  **Press and hold the MAGIC key until the POWER key (LED) blinks twice** (the red light (LED) underneath the POWER key will blink once then twice).
- 2  Press **9 9 0**. The red light will blink twice.
- 3  For the first digit **of your four-digit code**, press **1** and count all the red blinks. If there are no blinks, the digit is "0".
- 4  For the second digit, press **2** and count all the red blinks. If there are no blinks, the digit is "0".
- 5  For the third digit, press **3** and count all the red blinks. If there are no blinks, the digit is "0".
- 6  For the fourth digit, press **4** and count all the red blinks. If there are no blinks, the digit is "0".
Now you have your four-digit code.

Colour and Brightness

Depending on the functions of your original remote control, the ONE FOR ALL may operate the colour and brightness settings of your television.

Colour (+) = Press and release MAGIC then hold Volume (+)

Colour (-) = Press and release MAGIC then hold Volume (-)

Brightness (+) = Press and release MAGIC then hold Channel (+)

Brightness (-) = Press and release MAGIC then hold Channel (-)

Note: You have 5 seconds to press the Volume or Channel keys for colour or brightness adjustment after pressing MAGIC.

Quick Code Reference

Write down the code for your device in the boxes below and in the battery compartment for quick and easy reference.

Brand

Code

1. _____

--	--	--	--

Problem & Solution

Problem:

Solution:

Your brand is not listed in the code section?	Try the search method on page 7.
The ONE FOR ALL does not operate your device ?	A) Try all the codes listed for your brand. B) Try the search method on page 7.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the one for all at your device.
The red light does not blink when you press a key?	Replace batteries with 2 fresh, new "AA" alkaline batteries.

If yo
univ
sect
assi

You

Our
- 24
- no
- pa
- inf

Bef
the

Whi
1

2
3

Dev

TV

Typ
own

4.

(*)

(**)

(***)

Televisions

Fernseher

Téléviseurs

Televisores

Televisões

Televisori

Televisies

A.R. Systems	0037	0556	0374	0455
Accent	0009	0037	0556	
Accuphase	0556	1909		
Adcom	0625			
ADL	1217			
Admiral	0093	0363	0418	0087
	0163	0264		
Adyson	0217	0216		
AEA	0037	0556		
AEG	0606			
Agashi	0216	0264	0217	
AGB	0516			
Agef	0087			
Aiko	0009	0037	0556	0216
	0371	0035	0433	0072
	0361	0191	0264	0217
Aim	0037	0072	0412	0556
	0753	0208	0706	0805
Aiwa	0705	0701	1916	
Akai	0361	0208	0371	1537
	0037	0433	0745	0191
	0035	0009	0696	0072
	0753	0218	0729	0714
	0163	0516	0715	0602
	0556	0548	0480	0217
	0631	0216	0264	0178
	0377	0606	1037	0473
Akashi	0860	0009		
Akiba	0218	0282	0455	0037
	0556	0294		
Akito	0037	0556		
Akura	0037	0556	0668	0412
	0009	0218	0282	0264
	0714			
Alaron	0216			
Alba	0009	0418	0370	0371
	0668	0037	0556	1037
	0355	0218	0216	0247
	0163	0487	0036	0714
	0443			
Alkos	0035			
All-Tel	0865			
Allorgan	0206	0294	0217	
Allstar	0037	0556		
Ambassador	0177			
Amplivision	0217	0370	0320	
Amstrad	0177	0009	0516	0264
	0371	0218	0037	0556
	0433	0412	1037	
Anam	0037	0556	0009	
Anam National	0037	0556	0650	
Andersson	1163			
Anglo	0009	0264		
Anitech	0009	0264	0037	0556
	0282	0102		

Ansonic	0370	0037	0556	0009
	0668	0374	0163	0292
	0102	0411	0259	0247
	0104			
Apollo	0473			
Arc en Ciel	0109			
Arcam	0216	0217		
Ardem	0486	0714	0037	0633
	0556			
Aristona	0556	0037		
Arthur Martin	0163			
ASA	0105	0346	0070	0104
	0087			
Asberg	0037	0556	0102	
Asora	0009			
Astra	0037	0556		
Asuka	0218	0217	0216	0264
	0282			
ATD	0698			
Atlantic	0037	0556	0216	0206
	0320	0259		
Atori	0009			
Auchan	0163			
Audiosonic	0009	0037	0374	0820
	0556	0109	0714	0715
	0217	0370	0337	0264
	0218	0486		
Audioton	0217	0486	0370	0264
Audioworld	0698			
Aumark	0060			
Autovox	0087	0206	0217	0247
AWA	0011	0036	0009	0157
	0374	0412	0037	0556
	0216	0606	0217	0108
	0264			
Axxent	0009			
Axxon	0714			
B&D	1217			
Baird	0109	0193	0072	0073
	0217	0208		
Bang & Olufsen	0565	0087		
Barco	0163			
Basic Line	0374	0037	0163	0668
	0556	0009	0218	0282
	0217	0455	0339	1037
	0217			
Bastide	0805			
Bauer	0009	0303	0535	0195
Baur	0512	0037	0556	0191
	0361	1505		
Bazin	0217			
Beaumark	0178			
Beko	0714	0035	0486	0370
	0037	0418	1037	0556
	0606	0715		
Belson	1191			
Bennett	0556	0037		
Beon	0037	0556	0418	
Berthen	0668			
Best	0337	0370		
Bestar	0037	0556	0370	0374
Bestar-Daewoo	0374			
Binatone	0217			
Black Diamond	0614	0820	1037	0556
	0821			
Black Panther	0102			
Black Star	0247			
Black Strip	0035			
Blacktron	0282			
Blackway	0282	0218		
Blaupunkt	0191	0535	0195	0200
	0455	0170	0036	

Blue

Blue

Bonc

Boot

Boscl

BPL

Bran

Bran

Elec

Brink

Brior

Brita

Brotl

Brun

BSR

BTC

Bush

Cant

Caps

Carai

Carel

Carre

Carvi

Casca

Casic

Cath

CGE

Celes

Cent

Cent

Cent

Cent

CGE

Cimli

Citizi

City

Clariv

Clatr

Clayt

CMS

CMS

Conc

Conc

Coni

Conr

Cont

Cont

Edis


Cosrr

Crosl

9	Blue Sky	0037 0714 1037 0487	Crown	0009 0712 0370 0486
2		0668 0715 1909 0556		0037 0556 0487 0714
7		0218 0282 0455 1191		0606 0715 0418 0208
	Blue Star	0282		0339 1037
	Bondstec	0247	CS Electronics	0216 0218 0247
	Boots	0217 0009	CTC	0247
	Bosch	0320	Curtis Mathes	0060 0093 0166
3	BPL	0037 0556 0282	Cybertron	0218
	Brandt	0625 0109 0335 0560	D-Vision	0037 0556
	Brandt		Daas	0297
	Electronique	0335	Daewoo	0634 0374 1909 0499
4	Brinkmann	0037 0556 0668 0418		0661 0037 0556 0009
		0486		0216 0218 0217 1137
	Brionvega	0037 0556 0087		0880
	Britannia	0216 0217	Dainichi	0218 0216
	Brother	0264	Dansai	0037 0556 0264 0035
4	Bruns	0087 0297		0216 0009 0036 0217
	BSR	0163 0294 0361		0208
	BTC	0218	Dansette	0412
5	Bush	0668 0218 0163 0009	Dantax	0370 0486 0714 0606
		0036 0037 0371 0282		0715
		0355 0363 0374 0264	Datsura	0208
		0361 1037 0487 0208	Dawa	0009 0037 0556
0		0217 0614 0617 0698	Daytek	0698 0706
5		0294 0556 0714 1900	Daytron	0009 0374 0037 0556
4		1916	de Graaf	0208 0163 0548 0363
	Canton	0218	DEC	0795 0860
4	Capsonic	0264	Decca	0072 0516 0037 0556
	Carad	0610 0037 0556 0668		0217 1137
		1037	Deitron	0037 0556 0374 0218
7	Carena	0455 0037 0556	Denko	0264
7	Carrefour	0036 0070 0037 0556	Denver	0037 0556 0606 1189
5	Carver	0170		0587
3	Cascade	0009 0037 0556	DER	0193
	Casio	0037 0556 0163	Derwent	0201
	Cathay	0037 0556	Desmet	0320 0037 0556 0009
	CCE	0037 0556 0217		0087
	Celestial	0820 0821	Diamant	0037 0556
3	Centrex	0780	Diamond	0264 0698 0696 0009
	Centrum	1037		0825 0216 0371 0860
	Centurion	0037 0556	Digatron	0037 0556
	Century	0087 0247 0238	Digiline	0037 0556 0105 0668
3	CGE	0074 0084 0418 0247	Digitex	0820
2		0370 0163	Digitor	0037 0556 0861 1724
7	Cimline	0009 0218	Digivision	0361
	Citizen	0060	DigiX	0880
	City	0009	DiK	0037 0556
5	Clarivox	0418 0037 0556 0070	Dixi	0009 0037 0556 0297
1		0102 0297		0247 0217 0087
	Clatronic	0037 0370 0371 0714	DL	0891 0780 0037 0587
		0218 0264 0556 0217	Domeos	0668
		0247 0009 0102 0320	Domland	0394
		0606	Doric	0201
0	Clayton	1037	Dream Vision	1704
5	CMS	0216	DSE	0861
	CMS hightec	0217	DTS	0009
	Concorde	0009	Dual	0217 0037 0556 0259
	Condor	0320 0037 0556 0370		0394 0303 0163 1137
		0216 0009 0282 0102		0631
		0247 0418 0411 0163	Dumont	0087 0104 0102 0217
4		0264		0070 0072
	Conia	0754 0821	Dunai	0163
	Conrad	0037 0556	Dux	0037 0556
5	Contec	0216 0009 0157 0011	DVX	0891
		0036 0264 0037 0556	Dynatron	0037 0556
	Continental		E-Elite	0218
	Edison	0109 0487	Ecco	0773 0706
	Cosmel	0009 0337 0037 0556	Edison-Minerva	0487
	Crosley	0087 0247 0074 0084	Elbe	0435 0238 0259 0292
		0163		0370 0163 0037 0556
0				0218 0191 0411 0610
				0217 0516 0361

Elbe-Sharp Elcit	0516				Fraba	0037	0556	0370		Haaz
	0087	0247	0516	0102	Friac	0009	0037	0556	0102	Haiei
	0163					0370	0499	0655	0610	Halif
Elekta	0009	0037	0556	0264	Frontech	0247	0264	0363	0217	Ham
	0282					0009	0163			Ham
ELG	0037	0556			Fujimaro	0865				Hani
Elin	0216	0037	0556	0105	Fujitsu	0206	0072	0102	0217	Hans
	0104	0548	0361	0163		0163	0009	0037	0556	
	0009					0361	0259	0853		
Elite	0218	0037	0556	0320	Fujitsu General	0009	0217	0206	0163	
Elman	0102				Funai	0668	0264	0294	0303	
Elta	0009	0264	0216			0412				Hant
Emco	0247				Furichi	0860				
Emerson	0177	0714	0178	0087	Futronic	0264	0795	0860		Hant
	0247	0037	0556	0371	Future	0037	0556			Harsj
	0070	0282	0320	0361	Galaxi	0102	0037	0556	0361	Harv
	1909	0486	0370	0163		0163				Harv
	0321				Galaxis	0370	0418	0037	0102	
Emperor	0282					0556				Hauç
Enzer	0696	0753			Galeria	0009				HCM
Erres	0037	0556			GBC	0163	0009	0374	0218	
ESC	0037	0556	0217			0363				
Estèle	0163				GE	0178	0282	0560	0109	Hedz
Etron	0001	0037	0556	0009		0335	0625			Hem
	0163				Geant Casino	0163				Hifiv
Eurofeel	0264	0217			GEC	0163	0361	0037	0516	Higa
EuroLine	0037					0556	0072	0217		High
Euroman	0216	0264	0037	0556	Geloso	0247	0009	0363	0163	Hiko
	0217	0370				0374				Hina
Europa	0037	0556			General	0590	0109			
Europhon	0037	0516	0102	0163	General Technic	0009				
	0217	0556	0247	0216	Genesis	0009	0037	0556		Hisav
Excel	0037	0556			Genexxa	0218	0037	0556	0412	
Expert	0206	0259	0163			0163	0009			HiSei
Exquisit	0037	0556	0247		Gericom	0865	1217	0880		Hit
Fagor	0037	0556			Giant	0217				Hitac
Family Life	0037	0556			Goldfunk	0668				
Fenner	0374	0009			Goldhand	0216				
Ferguson	0073	0625	0335	0238	Goldline	0337				
	0193	0109	0560	0037	GoldStar	0037	0009	0370	0001	
	0556	0035	0104	0108		0377	0217	0178	0247	
	0361	0548	0443	1037		0216	0556	0163	0361	
Fidelity	0163	0512	0363	0037		0109	0363	0606	0714	
	0556	0371	0412	0193		0715				Hitac
	0216	0264	0361		Gooding	0487				Hitsu
Filsai	0217				Goodmans	0634	0374	0037	0499	HMV
Finlandia	0208	0346	0548	0361		0556	1037	0668	1909	Höhe
	0163	0363	0072	0045		0036	0264	0072	0516	Hom
Finlux	0105	0104	0037	0556		0009	0487	0371	0035	Horn
	0714	0346	0217	0072		0480	0560	0217	0335	Hosh
	0163	0516	0715	0070		0218	0661	1900	0880	Huar
	0087	0102	0411	0631	Gorenje	0370				Hugc
	0492	0480	0629	0473	GPM	0218				Hyga
	0418	0606			Gradiente	0170	0037	0556		Hype
Firstline	0037	0556	0374	0668	Graetz	0714	0361	0371	0163	Hype
	0714	0163	0009	0294		0037	0339	0556		Hyps
	0321	0216	0247	1909	Granada	0037	0556	0226	0356	
	0102	0217	0411	0238		0045	0072	0108	0208	
	0072	0208	0361	1037		0217	0036	0339	0516	Hyr
	1191	0808	1163			0201	0473	0335	0560	
Fisher	0104	0217	0036	0208		0163	0363	0548		Iberi
	0370	0555	0297	0045	Grandin	0037	0556	0009	0163	ICE
	0087	0157	0361	0163		0610	0714	0715	0668	
	0303	0072				0374	0320	0282	0218	Ices
Flint	0037	0556	0610	0072		0455	1037	0865	1191	Ict
	0218	0455	0264		Gronic	0102	0217	0163		Iiyarr
FNR	0102				Grundig	0195	0508	0535	0191	Impe
Forgestone	0193					0070	0487	0037	0443	
Formenti	0163	0037	0556	0486		0706	0556	0587	0009	
	0216	0087	0320			0036	0370	1916	0178	India
Formenti-Phoenix	0216	0320			Grunkel	1163				Ingel
Fortress	0093	0087			H&B	0808				

	Haaz	0706	Ingersoll	0009
2	Haier	0698 0264	Inno Hit	0009 0072 0037 0556
3	Halifax	0264 0216 0217		0218 0217 0516 0247
7	Hammerstein	0264 0060		0102 0282 1163
	Hampton	0216 0217	Innovation	0037 0556
	Hanimex	0218 0294	Innowert	0865
7	Hanseatic	0037 0556 0499 0163	Interactive	0037 0556 0087 0512
5		0361 0292 0282 0394		0163 0361 0370 0109
		0320 0634 0370 0661		0411
3		0009 0294 0217 0087	Interbuy	0009 0037 0264 0247
3		0377 0714 0808		0512 0556
	Hantarex	0009 0037 0556 0102	Interfunk	0037 0556 0087 0512
		0516 0238		0163 0361 0370 0109
	Hantor	0037 0556		0247 0200
	Harsper	0865	Internal	0037 0556 0499 0374
1	Harwa	0773 1269		1909
	Harwood	0009 0412 0037 0556	International	0216
2		0487	Intervision	0282 0217 0455 0037
	Hauppauge	0037 0556		0371 0377 0486 0370
	HCM	0009 0412 0037 0556		0394 0487 0218 0102
3		0217 0218 0418 0282		0163 0264 0247 0009
		0264		0556
3	Hedzon	0556 0037	Irradio	0009 0037 0556 0218
	Hema	0217 0009		0247 0371
	Hifivox	0109	Isukai	0218 0037 0556 0282
5	Higashi	0216		0455
	Highline	0264 0037 0556	ITC	0217 0320
3	Hikona	0218	ITS	0037 0371 0218 0282
	Hinari	0208 0037 0556 0009		0264 0216 0009 0556
		0218 0036 0163 0355	ITT	0163 0480 0361 0473
		0443 0487 0294 0264		0548 0193 0346 0339
	Hisawa	0282 0218 0455 0610		0208 0610
2		0714	ITT Nokia	0361 0548 0163 0473
	HiSense	0208		0480 0346 0208 0339
	Hit	0087		0606 0610 0631 0363
	Hitachi	1225 0578 0036 0356	ITV	0264 0037 0556 0247
		0108 0473 0163 0217		0374
		0516 0072 0499 0037	Jean	0036
1		0556 0109 0363 0548	JEC	0035
7		0634 0744 0178 1137	JMB	0037 0499 0634 0374
1		0105 0492 0361 0512		0556 0443
4		0480 1045 0629 1037	Jocel	0712
		1576	Jubilee	0556
	Hitachi Fujian	0108	JVC	0653 0036 0193 0371
	Hitsu	0009 0455 0218 0610		0218 0606 0418 0731
3	HMV	0087 0193		0093
3	Höher	0714 0865	Kaisui	0218 0282 0037 0556
5	Home Electronics	0606		0216 0455 0217 0009
5	Hornyphon	0037 0556	Kambrook	0377
5	Hoshai	0218 0455 0282	Kamp	0216
3	Huanyu	0374 0216	Kapsch	0163 0361 0206 0259
	Hugoson	1217		0104
	Hygashi	0217 0216	Karcher	0037 0556 0370 0610
	Hyper	0009 0216 0217 0247		0163 0282 0102 0264
3	Hypersonic	0361		0714 0606
	Hypson	0037 0556 0714 0715	Kathrein	0556 0037
5		0264 0217 0282 0455	Kawa	0371
3		0238 0668	Kawasho	0216
5	Hyundai	0037 0865 0556 0706	KB Aristocrat	0163
3		0860 0753	Kendo	0610 0037 0556 0163
	Iberia	0037 0556		0512 0370 0377 0363
3	ICE	0264 0037 0371 0009		0411 0102 0247
3		0556 0218 0217 0216	Kennedy	0163 0206 0435
3	Ices	0218 0216	Kenex	1037
1	Ict	0037 1137 0556	Kenwood	0105
	Iiyama	1217	KIC	0217
1	Imperial	0037 0163 0370 0074	Kingsley	0216
3		0084 0556 0411 0361	Kiota	0001
3		0418 0247	Kiton	0556 0037 0668
3	Indiana	0037 0556	Kneissel	0037 0370 0610 0411
	Ingelen	0487 0610 0714 0163		0374 0499 0556 0435
		0361		0259 0292 0238

 


Kolster 0037 0556 0102 0247
Konichi 0009
Konka 0037 0556 0371 0714
0418 0218 0641 0587
0754
Kontakt 0487
Korpel 0037 0556
Korting 0087 0370 0320
Kosmos 0037 0556
Kotron 0412 0264
Koyoda 0009
Kranking 0238
KTV 0217
Kuba 0163
Kuba Electronic 0303 0163
Kyoshu 0412 0418 0264
Kyoto 0163 0216 0217
L&S Electronic 0865 0714
LaSAT 0486 0370
Leader 0009
Lecson 0037 0556
Legend 0009 0337
Lemair 0411
Lenco 0037 0009 0163 0374
0556 0104
Lenoir 0009
Lesa 0247
Levis Austria 0037 0556
Leyco 0264 0072 0037 0556
0294
LG 0037 0178 0370 0009
0377 0001 0217 0556
0714 0216 0163 0606
0109 0698 0715 1637
1191
Liesenk & Tter 0037 0556
Liesenkotter 0037 0556
Lifetec 0037 0009 0374 0668
0512 0655 1037 1137
0556 0218 0264
Lloyd's 0001 0009
Lodos 1037
Loewe 0512 0633 0037 0556
0655 0370 0087 0292
0790 0516
Logik 0011 0060 0698 0773
0009 0193 0264 0371
0001 0880 1217
Logix 0668
Luma 0037 0363 0206 0163
0411 0556 0374 0009
0259
Lumatron 0363 0206 0037 0556
0163 0259 0361 0217
0264 0073
Lux May 0037 0009 0556
Luxor 1163 0363 0480 0492
0361 0208 0356 0548
0163 0346 0473 1037
0217 0631
LXI 0178
Madison 0037 0556
Magnadyne 0087 0247 0516 0102
0163
Magnaфон 0516 0102 0216 0073
Magnavox 0037 0556 0036 0780
Magnum 0714 0037 0556 0715
Mandor 0264
Manesth 0037 0556 0217 0264
0320 0035 0294 0163
0363

Manhattan 0037 0556 0668 1037
0163
Marantz 0037 0556 0412
Marelli 0087
Mark 0037 0556 0217 0216
0374 0009 0714 0715
0499
Master's
Masuda 0218 0371 0009 0264
0037 0217 0556
Matsui 0037 0556 0487 0009
0177 0011 0355 0072
0036 0217 0294 0371
0433 0443 0363 0455
0163 0516 0035 0208
0045 0195 0191 0335
0714 1037 0629
Matsushita 0650
Matsuviana 0587
Maxam 0264
Maxdorf 0773
MCE 0009
Mediator 0037 0556
Medion 0037 0668 0512 0556
1137 0698 0808 1037
1900 1248 0880
0610
Megas
Megatron 0178
MEI 1037 0037 0556
Meletronic 0346 0037 0512 0109
0247 0105 0104 0374
0009 0217 0480 0492
0216 0411 0163 0556
0634 0361 0191 0195
0661
Memorex 0009 0178 0060
Memphis 0337 0072 0009
Mercury 0001 0037 0009 0556
Merritt 0548 0361 0163
Metz 0447 0746 0388 0367
0087 0195 0535 0191
0037 0556 0587 0668
1037
MGA 0178 0037 0556 0218
0104
Micromaxx 0037 0556 0668 1037
0808
Microstar 0808
Minato 0037 0556
Minerva 0487 0535 0195 0070
0191 0516 0108
Minoka 0412 0037 0556
Mirror 1900
Mistral
Electronics 0193
Mitsubishi 0108 0093 0512 0037
0178 0087 0036 0201
0193 0535 0556 0208
1037
Mitsuri General 0163
Mivar 0292 0370 0216 0609
0516 0217
Monaco 0009
Morgan's 0037 0556
Motorola 0093
MTC 0060 0370 0512 0163
0216 0361
MTlogic 0714
Multibroadcast 0193
Multistandard 0102
Multitec 0037 0556 0486 0668
1037

Mult
Mur
Mus
Myry
NAD
Naik
Naki
Naor
NAT
Natic
NEC
Neck
NEI
Neov
Nesc
Nets
Netw
Neuf
New
New
Nica
Nikk
Nobl
Noga
Noki
Nord
Nord
Norf
Norn
Nova
Nova
NU-T
Nurn
Ocea
Odec
Okar
Ome
Omn
Onw
Oper
Opti
Optc
Orbit
Oriol
Orlin
Orme
Orso

7	Multitech	0009 0363 0486 0037	Osaki	0072 0218 0217 0264
		0370 0556 0217 0216		0037 0412 0374 0355
		0247 0102 0264		0556
	Murphy	0104 0216 0072 0163	Osio	0037 0556
5		0201	Oso	0218
5	Musikland	0037 0218 0247 0556	Osume	0157 0072 0036 0218
	Myryad	0556 0037		0037 0556
4	NAD	0166 0178 0361 0163	Otto Versand	1505 0036 0093 0512
	Naiko	0037 0606 0556		0037 0556 0535 0195
3	Nakimura	0374 0037 0556		0191 0361 0109 0294
2	Naonis	0363 0163		0226 0247 0303 0320
1	NAT	0226		0217 0009 0282 0516
5	National	0226	Pacific	0037 0556 1137 0714
3	NEC	0170 0587 1170 0036		1037 0443
5		0320 0455 0009 0374	Pael	0216
		0217 0037 0556 0011	Palladium	0370 0037 0191 1505
		0499 1704 0661		0200 0418 0556 0247
	Neckermann	0037 0191 0370 1505		0087 0163 0217 0411
		0200 0556 0163 0418		0655 0363 0714 1137
		0087 0247 0217 0411	Palsonic	0264 0412 0037 0217
		0320 0363 0512		0377 0218 0698 0556
	NEI	0037 0556 0337 0371		0773 0001 0418
5		0163	Panama	0009 0217 0264 0216
7	Neovia	0865		0037 0556 0247
	Nesco	0247	Panashiba	0001
	Netsat	0037 0556	Panasonic	0650 1650 0108 0226
	Network	0337		0361 0367 0516 0037
	Neufunk	0037 0009 0556 0610		0556 0163 0548 0001
3		0218 0282 0714		0853
4	New Tech	0037 0009 0556 0217	Panavision	0037 0411 0556
2	New World	0218	Papouw	0037 0556
5	Nicamagic	0216	Pathe Cinema	0163 0238 0216 0320
5	Nikkai	0072 0218 0037 0556		0292 0370
		0217 0264 0035 0337	Pathe Marconi	0109
		0216 0009 0036	Pausa	0009
	Nikko	0178	Perdio	0072 0320 0163 0037
5	Nobliko	0102 0070 0216		0216 0282 0556
	Nogamatic	0109	Perfekt	0037 0556
7	Nokia	0361 0163 0480 0548	Philco	0087 0084 0074 0418
1		0492 0473 0339 0208		0247 0163 0370 0037
3		0374 0631 0606 0346		0556
		0320 0610 0109	Philex	0193 0201 0163
3	Nordic	0217	Philharmonic	0217
	Nordmende	0109 0714 0560 0195	Philips	0556 0037 0238 0191
7		0037 0556 0335 0163		0087 0193 0374 0009
	Norfolk	0163		0200
	Normerel	0037 0556	Phoenix	0037 0556 0370 0486
	Novak	0037 0556		0163 0087 0072 0216
0	Novatronic	0037 0105 0374 0556		0320
	NU-TEC	0455 0698	Phonola	0037 0556 0087 0193
	Nurnberg	0163 0361		0216
	Oceanic	0163 0361 0294 0208	Pilot	0556 0037 0712 0706
		0473 0548 0480	Pioneer	0760 0011 0166 0037
	Odeon	0264		0170 0556 0370 0361
7	Okano	0370 0037 0556 0264		0109 0163 0486 0512
1		0072 0009	Pionier	0370 0486
3	Omega	0264	Plantron	0037 0556 0264 0009
	Omni	0780 0891 0698	Playsonic	0714 0037 0217 0339
	Onwa	0371 0602 0218 0433		0715
3		0102	Policom	0102 0109 0206 0238
	Opera	0037 0556		0361 0163 0070 0074
	Optimus	0650 0166		0084 0087 0535
	Optonica	0093	Polytron	0282
	Orbit	0037 0556	Poppy	0009
3	Orion	0037 0355 0556 0655	Portland	0374 1909
		0714 0443 0294 0177	Powerpoint	0487 0037 0556 0698
		0320 0011 0009 0321	Prandoni-Prince	0247 0516 0361 0363
		0102 0264 0412 0516	Precision	0217
		1916 0880	Premier	0009 0264
3	Orline	0037 0218 0556	Prima	0009 0264 0303 0412
	Ormond	0668 1037 0037 0556	Princess	0698
	Orsowe	0516	Prinston	1037

 

Prinz	0072 0361	Saba	0625 0109 0560 0087	Siem
Profex	0009 0163 0361 0363		0163 0516 0361 0498	
Profi	0009		0335 0548 0714	Siera
Profitronic	0037 0556 0102	Saccs	0238	Siest
Proline	0037 0556 0625 0634	Sagem	0610 0455 0282 0830	Silva
	0411 0321 0072	Saisho	0516 0177 0009 0011	Silver
Prosonic	0037 0556 0370 0374		0217 0163 0264	
	0371 0668 0714 0216	Saivod	0037 0556 0668 0712	Silver
	0217		1037	Singe
Protech	0037 0556 0217 0009	Sakai	0163	
	0247 0102 0264 0418	Sakyno	0455	
	0337 0668 0282 0163	Salora	0163 0356 0361 0516	Sinot
	0486 1037		0363 0548 0339 0208	Sinuc
Proton	0178		0480	
Provision	0499 0037 0556 1037	Salsa	0335	
	0714	Sambers	0516 0102	Skan
Pye	0037 0556 0087 0374	Samsung	0618 0587 0037 0178	Sky
	0412		0556 0009 0093 0217	Skynr
Pymi	0009		0370 0264 0216 0644	Skysc
Quadral	0218		0060 0072 0208 0163	Slidir
Quasar	0247 0650 0865 0009		0625	SLX
Quelle	0037 1505 0011 0109	Sandra	0216 0217	Smar
	0512 0535 0191 0361	Sanela	0238	Soern
	0036 0217 0247 0074	Sansui	0037 0729 0556 0706	Soge
	0084 0070 0104 0105		0371 0655 0727 0602	Solav
	0668 0556 0157 0195		0455 0861	
	0200 0264 1037 0294	Santon	0009	Sona
	0346 0009	Sanyo	0208 0157 0292 0036	Sonil
Questa	0036		0011 0370 0339 0072	Sonit
R-Line	0037 0556 0163		0216 0217 0104 0045	Sonn
Radialva	0109 0218 0163 0037		0555 0009 0163 0037	Sono
	0556 0337		0108 0297 0556 0486	
Radiola	0037 0556 0217		0170	Sono
Radiomarelli	0087 0201 0516 0247	Save	0037 0556	Sontu
	0037 0556	SBR	0037 0556 0193	
RadioShack	0037 0556 0178	Schaub Lorenz	0548 0714 0606 0361	Sony
Radiotone	0009 0037 0556 0370		0486 0374 1191	
	0418 0412 0668 0264	Schneider	1137 0037 0556 0303	
	1037		0394 0259 0217 0247	
Rafena	0297		0371 0361 0218 0668	Soun
Rank	0070		1037 0163 0714 1909	
Rank Arena	0036 0157 0602 0753	Scotland	0163	Soun
RBM	0070	Scott	0178	Soun
RCA	0625 0093 0560 0335	Sears	0178	
	0753	Seaway	0634	Spec
Realistic	0178	Seelver	0556 1037 0037	Ssanq
Recor	0037 0418 0556	SEG	0037 0556 1037 0668	Staks
Rectiligne	0037 0556		0217 0487 0009 0163	Stanc
Rediffusion	0201 0361 0548 0036		0264 0297 0634 0036	
	0346		0102 0247 0216 0218	Starli
Redstar	0037 0556		1909 1163	
Reflex	0037 0556 1037 0668	SEI	0087 0102 1505 0163	Sten
Relisys	0865		0516 0294 0206 0037	Sterr
Reoc	0714 0634 1909		0556 0177	
Revox	0037 0556 0370	Sei-Sinudyne	0102 0206 0294 0516	Strat
Rex	0206 0363 0411 0247		1505 0037 0556 0087	Stror
	0163 0259 0264	Seleco	0206 0363 0259 0163	Styla
RFT	0297 0087 0292 0370		0411 0371 0036 0264	Sunik
	0072 0264 0037 0556		0346 0435	Sunk
Rhapsody	0216	Sencora	0009	
Ricoh	0037 0556	Sentra	0035 0218 0009	
Rinex	0773 0418	Serino	0610 0455 0216 0093	Suns
Roadstar	1037 0009 0418 0037	Sharp	0093 1193 0157 0036	
	0556 0668 0218 0264		0294 0653 0193 0516	Sunw
	0282 1916 1189		0200 0760 1163	Supe
Robotron	0087	Shintoshi	0037 0556	Supe
Rodex	0037 0556	Shivaki	0037 0556 0443 0374	
Rover	0036		0178	Supe
Rowa	0264 0698 0217 0712	Shorai	0294	
	0009 0216 0587	Show	0418 0009 0072	Supr
Royal Lux	0370 0412 0335	Siarem	0163 0087 0102 0516	Susu
Rukopir	0556 0037			Sutrc

7	Siemens	0191 0535 0200 0195	Swissline	0247
3		0157 0037 0556 0361	Sydney	0216 0217
	Siera	0037 0556 0587	Sysline	0037 0556
	Siesta	0370	Sytong	0216
0	Silva	0037 0556 0216 0361	T+A	0447
1	Silver	0036 0037 0455 0361	Tandberg	0367 0411 0109 0337
		0556 0715 0163		0361 0163
2	SilverCrest	1037 0037 0556	Tandy	0218 0072 0217 0247
	Singer	0009 1537 0087 0037		0093 0163
		0556 0102 0247 0435	Tashiko	0036 0217 0170 0216
		0335 0163		0163 0363
5	Sinotec	0773	Tatung	0037 0556 0072 0516
3	Sinudyne	0177 0087 0102 0294		0217 0011 0629
		0163 0361 0516 1505	TCM	0714
		0206 0037 0556	Teac	0698 0512 0037 1037
	Skantic	0356		0556 0712 0668 0455
3	Sky	0037 0282 0880 0556		0217 0706 0264 1909
7	Skymaster	0105		0178 0009 0412 0282
4	Skysonic	0696 0753		0418 0170 0714 1724
3	Sliding	0865	TEC	0217 0009 0247 0335
	SLX	0668		0337 0259 0037 0556
	Smaragd	0487		0361 0163
	Soemtron	0865	Tech Line	0037 0556 0668
5	Sogera	0320	Techica	0218
2	Solavox	0361 0072 0163 0548	Technema	0320
		0037 0556	TechniSat	0655 0297 0037 0556
	Sonawa	0218		0163
5	Soniko	0037 0556	Technisson	0714
2	Sonitron	0208 0370 0339 0217	Technosonic	0037 0556
5	Sonneclair	0037 0556	Techwood	1163
7	Sonoko	0037 0556 0009 0264	Tecnimagen	0556
5		0282 0217	Tedex	0217 0418 0606 1537
	Sonolor	0208 0163 1505 0548		0009 0706 0208 0698
		0361 0282		0587 0891 0037 0556
	Sontec	0037 0556 0370 0294	Teiron	0009
1		0009	Teknika	0060
	Sony	1505 1651 0011 0834	Teleavia	0109
3		0036 0102 0037 0556	Telecor	0037 0556 0163 0218
7		0157		0217 0259 0394
3	Sound & Vision	0102 0218 0374 0037	Telefunken	0625 0560 0109 0587
3		0556		0698 0712 0498 0820
	Soundesign	0178		0896 0074 0084 0335
	Soundwave	0037 0556 0320 0418		0073 0037 0556 0486
		0715		0714
	Spectra	0009	Telefusion	0037 0556
	Ssangyong	0009	Telegazi	0037 0163 0259 0218
3	Staksonic	0009		0264 0556
3	Standard	0037 0556 1037 0218	Telemeister	0320 0037 0556
5		0009 0217 0320 0374	Telesonic	0037 0556
3	Starlite	0009 0163 0037 0556	Telestar	0009 0037 0556 0412
		0264 0412	Teletech	0037 0556 0668 0009
3	Stenway	0282 0218		0247 0337 1037
7	Stern	0206 0259 0163 0363	Teleton	0217 0206 0163 0259
		0264 0411 0435		0036 0363
5	Strato	0037 0556 0264 0009	Televideon	0320 0163 0216
7	Strong	1163 1037 0037 0556	Televiow	0037 0556
3	Stylandia	0217	Telexa	0102
4	Sunic Line	0037 0556	Temco	0294
	Sunkai	0294 0355 0321 0455	Tempest	0009 0037 0556 0264
		0218 0610 0037 0556	Tennessee	0037 0556
		0487 0865	Tensai	0104 0218 0037 0556
3	Sunstar	0371 0037 0556 0009		0217 0294 0320 0009
5		0264		0105 0374 0371 0377
5	Sunwood	0037 0556 0009		0247 0715 0163 1037
	Superla	0516 0216 0217	Tenson	0320 0009
	Supersonic	0208 0556 0698 0264	Tesla	0037
4		0805	Tevion	0037 0556 0668 1137
	SuperTech	0009 0037 0556 0216		0714 1037 1248
		0218	Texet	0217 0374 0009 0216
	Supra	0178 0374 0009		0218
5	Susumu	0335 0218	Thomson	0625 0560 0109 0335
	Sutron	0009		0037 0556

Thorn	0108 0193 0109 0073	Videoton	0356 0163
	0361 0238 1505 0074	Vidikron	0102
	0084 0499 0535 0037	Vidtech	0036 0178
	0072 0556 0011 0104	Viper	0337
	0335 0512 0036 0045	Visiola	0216
	0374 0035 0070 0356	Vision	0037 0264 0556 0320
Thorn-Ferguson	0104 0108 0109 0238		0217
	0193 0361 0335 0499	Vistar	0206 0361
	0073 0035	Vortec	0037 0556
Tiny	1269	Voxson	0087 0037 0556 0363
TMK	0178 0177		0418 0163 0178
Tobishi	0218	Waltham	0217 0356 0418 0037
Tokai	0072 0037 0556 0337		0556 0668 0109 1037
	0668 0163 0217 0374	Watson	0037 0556 0320 0163
	0009 1037		0218 0394 0009 0668
Tokaido	1037		1037
Tokyo	0216 0035 0303	Watt Radio	0102 0163 0216
Tomashi	0282 0218	Wega	0037 0556 0036 0087
Tongtel	0780 0587	Wegavox	0009 0037 0556
Toshiba	0508 0060 1508 0035	Welltech	0714
	0036 0070 0102 0714	Weltblick	0037 0556 0320 0217
	0217 0109 0195 0191	Weston	0037 0556
	0618 1916 0009 0698	Wharfedale	0037 0861 0896 0556
	0037 1163	White Westinghouse	0320 0216 0037
Towada	0102 0217		0556 0337 1909
Toyoda	0009 0371 0264	Windsor	0668 1037
Trakton	0009 0264 0217	Windstar	0282 0337
Trans Continens	0668 0217 1037 0037	Windy Sam	0556
	0556 0486	Wintel	0714
Transonic	0037 0556 0455 0587	World-of-Vision	0880 0865
	0512 0264 0698 0712	Worldview	0455 0045
	0418 0009	X-View	1191
Transtec	0216	Xenius	0634
Triad	0037 0556 0218	XLogic	0698 0860
Trical	0157	Xoro	1217
Trident	0516 0217	Xrypton	0037 0556
Tristar	0264 0218 0193	Yamaha	0650
Triumph	0177 0516 0346 0556	Yamishi	0282 0455 0218 0037
	0037		0556 0217
Tsoschi	0282	Yokan	0037 0556
TVTEXT 95	0556	Yoko	0217 0037 0556 0218
Uher	0037 0556 0206 0320		0264 0009 0370 0339
	0303 0374 0418 0486		0216 0247
	0370 0259 0480	Yorx	0218
Ultravox	0087 0102 0374 0247	Zanela	0238
	0216 0163 0037 0556	Zanussi	0206 0363 0217
Unic Line	0037 0556 0473 0455	Zenith	1909
United	0037 0556 0714 0715	Zenor	0339
	1916		
Universal	0037 0556		
Universum	0346 0105 0535 0195		
	0473 0361 0247 0492		
	0480 0370 0200 0418		
	0011 0512 0294 0036		
	0157 0070 0163 0264		
	0104 0037 0556 0411		
	0074 1505 0668 0217		
	0109 0337 0177 0631		
	0009 0084 1037 0170		
	1163		
Univox	0037 0556 0337 0087		
	0163 0238		
Utax	0163		
V7Videoseven	0178 0880		
Vestel	0037 0163 0217 0556		
	0668 1037 1163		
Vexa	0009 0037 0556		
Videologic	0218 0216		
Videologique	0216 0218 0217		
Videosat	0247		
VideoSystem	0037 0556		
Videotechnic	0216 0320 0217 0374		