



URC-7530

ONE FOR ALL 3

Universal Remote

USER GUIDE & CODE BOOK



Retain For Future Reference

Table of Contents	
QUICK SET-UP	2
QUICK SEARCH	3
INSTALLING THE BATTERIES	4
THE KEYPAD	5
INSTALLATION	
Direct Set-Up	7
The Search Method	8
SET-UP CODES	
Quick Code Reference	10
Televisions	11
Video Recorders	16
ADVANCED FEATURES	
Controlling Colour and Brightness	19
Punch-Through	19
Teletext and Fasttext	20
Sleeptimer	21
Scan	23
The AUX Key	24
Changing the Device Keys	25
TROUBLE-SHOOTING	
Helpful Hints	26
Consumer Help-Line	27

About Your ONE FOR ALL 3

Your ONE FOR ALL 3 Package contains:

Your ONE FOR ALL 3 Remote
Your ONE FOR ALL 3 Manual

Your manual is divided into two parts: set-up instructions and device codes. **You may need this guide again in the future, so please be sure to keep it.**

Your ONE FOR ALL 3 needs 2 new "AA/LR6" batteries.

Your ONE FOR ALL 3 can operate three devices: a Television, a Video Recorder and a second Television or Video.

 


Quick Set-Up

The instructions below and on the next page can be used to quickly install your new ONE FOR ALL.

You can use the Quick Set-Up below with the codes listed on pages 11-18. If this doesn't work, try the Quick Search on the next page. The Quick Search can also be used even if your brand is not listed at all.

1. Press device key:



2. Press and hold until the red light blinks twice. Then release.

3. Enter (4-digit code). See pages 11-18. The red light will blink twice.

4. Aim remote at your device and press (or PLAY).

NOTES:

- Make sure your device is switched on.
- The instructions above are a "Quick" set-up guide. For further explanation, please refer to the pages within.
- Make sure you write your Set-Up codes in the boxes provided inside the battery compartment for easy future reference.

Quick Search

1. Aim your ONE FOR ALL at your device and press device key:



2. Press and hold  until the red light blinks twice.

3. Press   

4. Alternate between the device key (ie: ) and  until your device turns off.

5. When device turns off, press . The red light will blink twice. Your device is Set Up.

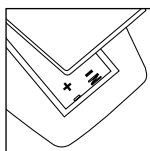
NOTES:

- Make sure your device is switched on.
- Make sure you aim your ONE FOR ALL at your device during "Quick Search".
- During step 4, you may have to press these keys many times, so please be patient.
- If your Video's original remote control does not have a power key, press PLAY instead of POWER during step 4.

Installing the Batteries

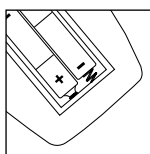
Your ONE FOR ALL 3 needs 2 new "AA/LR6" alkaline batteries.

1



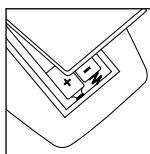
Remove the battery cover from the back of your ONE FOR ALL 3 by pressing down on the tab.

2



Match the batteries to the + and - marks inside the battery case, then insert the batteries.

3

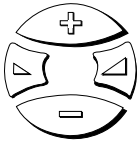


Press the battery cover back into place.

 
Important notes:

- In order to avoid having to reprogram your ONE FOR ALL 3 after you remove the batteries, you will need to insert new batteries within 5 minutes. Also it is best that you do not use rechargeable batteries.
- On the inside of the battery compartment door you will find a label on which to write your Set-Up codes after your ONE FOR ALL 3 is set up for your device. Please write down your codes for easy, future reference.

The Keypad

Key	Function
LED	LED The LED (Light Emitting Diode) flashes red to show the remote is working.
	MAGIC Key The MAGIC key is used to set up your ONE FOR ALL 3 and to access special functions.
	Power The Power key controls the same function as it did on your original remote.
  	Device Keys The TV, VCR and AUX keys select the home entertainment device to be controlled. For example pressing the TV key allows the remote to control the functions of your Television, after pressing VCR you can operate your Video Cassette Recorder and the AUX key operates a second television or video recorder.
	Volume, Programme The Volume and Programme keys control the two most frequently used functions of your Television. They operate just as those on your original remote.
	Mute The Mute key operates the same function it did on your original remote control. It is also used to activate the Scan feature (see page 23).

The Keypad

 
Key	Function
  	Number Keys The Number keys (0-9, 10, 20) provide functions just like your original remote, such as direct access programme selection. If your original remote uses one/two digit input switching (-/-- symbol), this function can be obtained by pressing the -/-- key, which is the same as the 10 key. If your original remote has an AV, key this function can also be found under the 20 key.
       	Video Recorder Keys After pressing the VCR key, the Video Recorder keys operate the functions of your Video Recorder. To prevent accidental recording, the Record key must be pressed twice to start recording.
 (on)  (off)  (expand)  (hold)	Teletext Keys After pressing the TV key, the top row of the VCR keys are used to operate the main teletext functions. The symbols below the keys are for teletext. The text keys are used to access the teletext functions of your Television. Of course, your Television must be teletext capable. For an explanation of the teletext symbols, please refer to page 20 of this manual. For a detailed explanation on how teletext works, please refer to the manual of your Television set.
 (red)  (green)  (yellow)  (blue)	After pressing the TV key, the bottom row of the Video Recorder keys marked red, green, yellow and blue, allow you to access the fasttext functions of your television. Again, your television must be fasttext capable to operate these functions. For a more detailed explanation of teletext and fasttext, please refer to the manual of your television set.

Installation

Direct Set-Up Setting Up Your Devices

To set up the ONE FOR ALL 3 for your TV or Video Recorder, follow the instructions below.

To set up your TV:

- 1**  Find your Television code in the Set-Up Code section (starting on page 11). Codes are listed by brand name. The most popular code is listed first. **Make sure your Television is switched on.**
- 2**  Press and release your ONE FOR ALL 3's **TV** key, **then press and hold down the MAGIC key** until the red light blinks twice (the light will blink once then twice).
- 3**  Enter your **four-digit TV code** using the number keys. The red light will blink twice.
- 4**  Now, aim the ONE FOR ALL 3 at your Television and press **POWER**. If your Television switches off, your ONE FOR ALL 3 should be ready to run your Television.
- 5** Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-5 using another code listed under your brand.

Write your code in the four boxes provided in the battery compartment and on page 10 for easy future reference.

Important notes:

- To set up your Video Recorder, follow the same instructions above, only press the VCR key during step 2.
- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- If your Television or Video does not respond, follow steps 1 through 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, try the search method described on page 8, even if your brand is not listed at all.
- If you change programmes on your Television through your Video Recorder, press VCR and not TV, before you use the programme keys.
- Remember, to control your device after the ONE FOR ALL is set up, you must press the device key first (TV, VCR, AUX).
- Write the codes for your devices in the boxes provided on page 10 and in the battery compartment for easy future reference.

Installation

The Search Method

If your Television or Video Recorder, does not respond to the ONE FOR ALL 3 after you have tried all the codes listed for your brand, try searching for your code. The Search Method may also work if your brand is not listed at all.

Let's say you cannot get your ONE FOR ALL 3 to control your Television.

To search for your TV code:

- 1** Switch your Television on.
- 2**  Press the **TV** key on your ONE FOR ALL 3.
- 3**  Aim the ONE FOR ALL 3 at your Television. **Press and hold down MAGIC** until the ONE FOR ALL 3's red light blinks twice. Then, press **9 9 1**. The red light will blink twice.

- 4**   Now, alternate between **TV** and **POWER**, over and over, until your Television turns off. You may have to press these keys many times, so please be patient. Remember to keep pointing the ONE FOR ALL 3 at your Television when you press the POWER and TV keys.
- 5**  When your Television turns off, press **MAGIC**. Don't forget, press MAGIC as soon as your Television turns off.
- 6** The ONE FOR ALL remote should now be ready to operate your device. Turn your device back on and try all the remote's functions to ensure they are working properly. If some of the ONE FOR ALL's commands are not operating correctly, try the search method again. You may be using the wrong code.

Important notes:

- To search for the code for your Video follow the instructions above only press VCR during steps 2 and 4.
- If your Video's original remote control does not have a power key, press PLAY instead of POWER when searching for your code.
- During step 4, you may have to press these keys many times (up to 150!) so be patient. Remember you must aim the ONE FOR ALL at your device the entire time you are searching for your code.



Installation

After you have used the Search Method, you can find out which code the ONE FOR ALL responded to by blinking back the code. It is handy to know your Television or Video code for future reference. **Remember, you can only blink back your code after the ONE FOR ALL is operating your device.**

To blink out your Television code:

- 1**  Press **TV**. Press and hold **MAGIC** until the ONE FOR ALL 3's red light blinks twice.
- 2**  Press **9 9 0**. The red light will blink twice.
- 3**  For the first digit of your four-digit code, press **1** and count the red blinks. If there are no blinks, the digit is "0".
- 4**  For the second digit, press **2** and count the red blinks.
- 5**  For the third digit, press **3** and count the red blinks.
- 6**  For the fourth digit, press **4** and count the red blinks. Now you have your four-digit code.

Make sure you write your Television code in the boxes provided in the battery compartment and on page 10 for easy future reference.

Important note: To blink back the code for your Video, follow the instructions above only press VCR during step 1.

Set-Up Codes

Quick Code Reference

The following pages list the codes for your equipment.
The most popular codes for each brand are listed first.

If your device does not respond to the ONE FOR ALL 3 after
you have tried all the codes for your brand, try the search
method (page 8).

**Write down the codes for your devices in the boxes
below and in the battery compartment, for quick and
easy reference.**

<u>Device Type</u>	<u>Code</u>
1. _____	
2. _____	
3. _____	

Set-Up Codes - TV (4 digits)

Televisions

A.R. Systems	0037	0352
Acura	0009	
Admiral	0087 0093 0363	0418
	0305 0213	0264
Adyson	0217	0216
Agazi	0264	
AGB	0516	
Agef	0087	
Aiko	0216 0009 0037	0371
	0035 0072 0361	0191
	0264 0217	
Aim	0037	0274
Akai	0361 0208 0371	0037
	0191 0035 0009	0072
	0218 0163 0546	0516
Akiba	0218	0282 0455 0037
Akito	0272	
Akura	0218 0282 0276	0009
	0412 0264 0037	0493
Alba	0218 0235 0009	0418
	0370 0355 0371	0037
	0216 0247 0431	0581
	0487 0036	
Alcyon	0076	
Allorgan	0206	0294 0217
Allstar	0037	
Amplivision	0217	0400 0320 0370
Amstrad	0177 0009 0516	0264
	0354 0218 0371	0354
	0362 0412	0037
Anglo	0009	0264
Anitech	0009 0068	0076 0264
	0037	
Ansonic	0370 0292 0102	0009
	0037 0374 0163	0323
	0411 0259 0247	0012
	0428	
Arc en Ciel	0399 0501 0196	0109
	0568 0333	0198
Arcam	0216 0399	0217
Aristona	0037	0556 0012
Arthur Martin	0400	
ASA	0105 0346	0070 0104
	0087	
Asberg	0037	0076
Asora	0009	
Asuka	0218 0264	0216 0282
	0217	
Atlantic	0037	0216 0206 0320
Atori	0009	
Auchan	0400	
Audiosonic	0037 0109 0217	0370
	0337 0264 0218	0486
	0428	
Audioton	0217	0486 0264
Ausind	0076	
Autovox	0087 0206 0237	0076
	0217 0247	0336
Ayomi.	0238	
Ayr	0535	
Baird	0109 0193 0343	0190
	0192 0072 0073	0217
	0208	
Bang & Olufsen*	0087	0565 0620
Barco	0380	
Basic Line	0218 0009 0374	0037
	0282	

Bastide	0217
Baur	0146 0303 0535 0512
	0554 0361 0505 0010
	0037
Bazin	0217
Beko	0370 0486 0037
Beon	0037 0418 0032
Best	0337 0370 0421
Bestar	0037 0370 0374
Binatone	0217
Black Star	0247
Blacktron	0282
Blackway	0282
Blaupunkt	0554 0535 0191 0195
	0200 0213 0327 0328
	0318 0448
Blue Sky	0218 0282 0455 0037
Blue Star	0282
Bondstec	0247
Boots	0272 0217
BPL	0282 0373 0037
Brandt	0501 0399 0237 0333
	0196 0198 0287 0335
	0568
Braun	0366
Brinkmann	0418 0037
Brionvega	0037 0087 0362
Britannia	0216 0217
Bruns	0087
BSR	0294
BTC	0218
Bush	0218 0235 0009 0036
	0282 0037 0272 0355
	0371 0363 0374 0519
Capsonic	0264
Carena	0455 0037
Carrefour	0036 0070
Cascade	0009 0037
Cathay	0037
Centurion	0037
Century	0087 0213 0247
CGE	0074 0084 0306 0076
	0247 0252 0306 0276
	0418 0370
Cimline	0009 0235 0218
City	0009
Clatronic	0218 0264 0370 0371
	0217 0076 0037 0009
	0102
Clayton	0385
Concorde	0009
Condor	0216 0247 0282 0320
	0037 0370 0009 0102
	0411
Conic	0032
Contec	0216 0009 0157 0011
	0036
Continental	
Edison	0501 0237 0196 0198
	0399 0333 0287 0487
	0568
Cosmel	0009 0337
Crezar	0213
Crosley	0087 0247 0074 0084
	0252 0076 0213
Crown	0373 0009 0370 0486
	0076 0421 0037 0359
	0579 0039 0418 0208
Crystal	0431
CS	
Electronics	0247 0216 0218
CTC	0247

Set-Up Codes - TV

Cybertron	0218	Formenti	0087 0213 0216 0320
Daewoo	0009 0037 0216 0374		0076
	0218 0217	Fortress	0093 0087
Dainichi	0218 0216	Fraba	0370 0037
Dansai	0037 0264 0032 0035	Friac	0009
	0216	Frontech	0247 0264 0363 0431
Dantax	0486		0448 0217 0009
Datsura	0373	Fujitsu	0206 0072 0102 0217
Dawa	0037	Funai	0264 0294 0179
Daytron	0009 0374	Galaxi	0102 0037
Decca	0072 0516 0037 0244	Galaxis	0370 0418 0037 0102
	0249 0272 0217 0037	GBC	0213 0009 0374 0218
DeGraaf	0208 0044 0227	Geant Casino	0400
Denko	0264	GEC	0043 0072 0361 0516
DER	0193 0190		0037 0217 0072 0349
Derwent	0201	Geloso	0213 0009 0363 0374
Desmet	0320 0037	General	
Diamant	0037	Technic	0009
Dixi	0009 0037	Genexxa	0218 0037 0412 0493
Domland	0394	Germanvox	0213
Doric	0201	Goldline	0337
DTS	0009	Goldstar	0037 0370 0290 0032
Dual	0217 0343 0259 0336		0009 0377 0217 0247
	0519 0352 0394 0399		0216 0431 0361
	0303 0037	Goodmans	0036 0072 0037 0009
Dual-Tec	0217 0259		0264 0516 0290 0179
Dumont	0087 0104 0102 0213		0374 0487 0371 0343
	0217 0070		0235 0035
Dynatron	0037	Gorenje	0370 0421
Elbe	0435 0238 0259 0362	GPM	0218
	0292 0370 0163 0037	Granada	0037 0400 0226 0356
	0218 0191 0411		0359 0012 0072 0146
Elcit	0087 0247 0516 0102		0108 0208 0217 0076
Elekta	0264 0282		0306 0339 0516 0201
Elin	0216 0037 0105 0104	Grandin	0282 0218 0400 0037
	0548 0448 0305 0349		0009 0320 0455 0579
	0009		0610
Elite	0218 0037	Grundig	0535 0195 0191 0554
Elman	0102		0487 0070 0076 0237
Elta	0009 0068		0037
Emerson	0177 0213 0087 0247	Halifax	0264 0216 0217
	0037 0371 0070	Hampton	0216 0217
Emperor	0282	Hanimex	0294
Erres	0037 0012	Hanseatic	0037 0292 0282 0361
Etron	0037 0009		0394 0213 0320 0428
Euro-Feel	0264		0009 0294 0217 0373
Euromann	0216 0264 0037 0217	Hantarex	0009 0213 0037 0296
	0421 0370	Hantor	0037
Europhon	0037 0516 0102 0213	Harwod	0009 0412 0032 0037
	0217 0247	HCM	0264 0009 0282 0412
Expert	0206 0400 0305		0217 0218 0037
Exquisit	0037	Hema	0217 0009
Fenner	0374 0009	Hifivox	0501 0196 0399 0568
Ferguson	0073 0287 0192 0190	Hikona	0218
	0335 0238 0193 0109	HiLine	0264 0037
Fidelity	0193 0216 0371 0363	Hinari	0208 0179 0036 0037
	0264		0218 0009 0163 0039
Filsai	0217		0355 0443 0487 0235
Finlandia	0208 0346 0359 0548	Hisawa	0282 0218 0400 0455
Finlux	0105 0104 0037 0346	Hit	0087
	0217 0072 0076 0516	Hitachi	0225 0036 0349 0356
	0070 0087 0179 0102		0044 0043 0473 0343
Firstline	0294 0321 0216 0037		0578 0196 0198 0217
	0374 0385 0247 0009		0306 0227 0032
	0217 0411 0238 0072		0194
Fisher	0104 0087 0217 0036	Hoshai	0218
	0208 0370 0555 0087	Huanyu	0374 0216
	0157 0361 0303 0072	Hygashi	0217 0216
Flint	0037 0455 0072	Hornophon	0037
FNR	0102	Hyper	0009 0216 0217 0247
Forgestone	0193	Hypersonic	0361

Set-Up Codes - TV

Hypson	0037 0264 0217 0282 0455 0400	Lloyds	0009
Iberia	0037	Lloytron	0032
ICE	0264 0217 0037 0371 0218 0216 0009	Loewe	0512 0087 0292
Ices	0218 0216	Logik	0011 0193
Imperial	0037 0247 0370 0418 0074 0084 0252 0076 0349	Luma	0363 0206 0305 0037 0362 0259
Indesit	0237 0213	Lumatron	0363 0206 0305 0037 0362 0259 0361 0217
Indiana	0037	Lux May	0037
Ingersol	0009	Luxor	0194 0237 0290 0357 0361 0208 0356 0548 0363
Inno Hit	0009 0072 0037 0218 0290 0217 0516 0247	M Electronic	0346 0037 0512 0109 0343 0247 0105 0104 0374 0009 0217 0068 0480 0492 0216 0411
Interbuy	0009 0264 0247 0068	M Tec	0272 0032
Interfunk	0037 0012 0087 0512 0275 0327 0163 0546 0361 0370 0501 0568	Magnadyne	0087 0247 0516 0102
Internal	0037	Magnafon	0516 0213 0076 0102 0216
Intervision	0282 0217 0455 0037 0068 0371 0377 0519 0448 0486 0394 0487 0218 0102 0431 0264	Mandor	0264
Irradio	0009 0037 0218 0247 0290 0076	Manesth	0037 0235 0217 0264 0320 0276 0035 0294
Isukai	0218 0037 0282	Marantz	0037
ITC	0217	Marelli	0087
ITS	0037 0371 0218 0282 0264 0216	Mark	0037 0217
ITT	0163 0480 0349 0546 0361 0473 0361 0548 0346 0339 0208	Matsui	0235 0177 0009 0355 0011 0072 0036 0037 0487 0217 0354 0294 0371 0443 0363
ITV	0264 0037 0247	McMichael	0043
JEC	0035	Mediator	0037 0556 0012
JVC	0053 0094 0190 0036 0192 0193 0371 0218 0606 0653	Medion	0037
Kaisui	0218 0282 0037 0216 0455 0217 0009	Megas	0610
Kamp	0216	Melvox	0400
Kapsch	0206 0163 0361 0104	Memorex	0009
Karcher	0037 0421 0282 0102 0610	Memphis	0337 0072 0009 0385
KB Aristocrat	0163	Mercury	0037
Kendo	0362 0363 0235 0247 0102 0037 0428 0411 0610	Metz	0087 0195 0535 0447 0239 0213 0554 0275 0367 0388
Kennedy	0206 0213 0435	Minerva	0487 0535 0070 0076 0554 0237
Kingsley	0216	Minoka	0412 0037 0359
Kneissel	0435 0259 0292 0238 0037 0411	Mitsubishi	0108 0150 0512 0354 0087 0036 0201 0237 0193
Kolster	0037	Mivar	0292 0290 0291 0370 0216 0609
Konka	0218 0371	Monaco	0009
Korpel	0037	Motion	0076
Korting	0087 0421 0320	MTC	0370 0349
Kosmos	0037	Multi	
Kuro	0373	Broadcast	0193
Kyoshu	0264 0412 0032	Multistandard	0102
Kyoto	0385 0032 0163	Multitech	0217 0009 0216 0247 0102 0363 0486
LG	0037 0370 0290 0032 0009 0377 0217 0247 0216 0431 0361	Murphy	0104 0216 0039 0072 0163
Lenco	0009 0104 0163	Nakimura	0374 0037
Lenoir	0009	Naonis	0363
Lesa	0247	National	0237 0214 0240
Leyco	0264 0072 0037 0294 0579	NEC	0170 0036 0320
Liesenkotter	0037 0327 0328	Neckermann	0037 0191 0370 0505 0200 0554 0556 0327 0418 0349 0087 0213 0247 0217 0411
Lifetec	0009 0264 0519 0037 0374 0218	NEI	0037 0337 0431 0371
		Nesco	0247 0179
		Network	0032 0337

Set-Up Codes - TV

Neufunk	0037	0556			
New Tech	0037	0009	0556	0343	
	0217				
New World	0218				
Nicamagic	0216				
Nikkai	0072	0218	0037	0217	
	0264	0032	0035	0337	
	0216	0009	0036		
Noblisko	0102	0076	0070	0216	
Nogamatic	0399	0501	0196	0568	
Nokia	0163	0361	0480	0349	
	0359	0473	0546	0548	
	0339	0208	0374		
Nordmende	0109	0501	0287	0399	
	0196	0343	0198	0213	
	0568	0195			
Novatronic	0037	0105			
Oceanic	0163	0400	0361	0294	
	0208	0563			
Okano	0370	0037	0264	0072	
Omega	0264				
Onwa	0371	0218	0581		
Opera	0037				
Orbit	0037				
Orion	0235	0294	0177	0320	
	0355	0011	0037	0009	
	0321	0296	0477	0443	
Ormond	0385				
Online	0037	0218			
Osaki	0072	0218	0032	0217	
	0264	0493	0276	0037	
	0412	0032	0272	0374	
Osio	0037				
Oso	0218				
Osume	0157	0072	0036	0032	
	0218				
Otto Versand	0010	0505	0036	0093	
	0512	0037	0556	0535	
	0195	0349	0554	0191	
	0361	0235	0109		
	0213	0294			
Pael	0216				
Palladium	0370	0037	0191	0505	
	0200	0418	0554	0556	
	0247	0327	0349	0087	
	0213				
Panama	0009	0217	0264	0216	
	0037	0247			
Panasonic	0226	0250	0126	0240	
	0274	0214	0213	0361	
	0237	0367	0340	0516	
	0037				
Panavision	0037	0411			
Pathe Cinema	0163	0238	0216	0400	
	0320	0292	0349		
Pathe					
Marconi	0213	0501	0196	0198	
	0333	0399	0237	0568	
Pausa	0009				
Perdio	0072	0320	0163	0037	
Perfekt	0037				
Phase	0032				
Philco	0087	0084	0074	0418	
	0076	0213	0247	0252	
	0370	0037			
Philharmonic	0217				
Philips	0037	0556	0012	0323	
	0554	0191	0043	0087	
	0193	0343			
Phoenix	0037	0087	0320	0486	
	0385	0216			
Phonola	0037	0556	0012	0087	
	0193	0216			
Pioneer	0166	0037	0428	0343	
	0361	0109			
Pionier	0486				
Plantron	0037	0264	0009		
Playsonic	0217				
Policom	0568				
Poppy	0009				
Prandoni-					
Prince	0247	0516	0361	0213	
	0363	0076			
Precision	0217				
Prima	0032	0009	0264		
Prinz	0072	0194			
Profex	0009	0163	0431		
Profi-Tronic	0037	0102			
Proline	0321	0072	0037	0012	
Prosonic	0037	0214	0216	0370	
	0374	0579			
Protech	0037	0217	0009	0247	
	0349	0102	0264	0431	
	0418	0337			
Provision	0037				
Pye	0037	0556	0012	0087	
Pymi	0009				
Quadra Vision	0400				
Quasar	0247				
Quelle	0037	0010	0011	0501	
	0512	0535	0554	0361	
	0032	0036	0217	0247	
	0074	0084			
Questa	0036	0032			
Radialva	0109	0218	0431	0037	
R-Line	0037				
Radiola	0037	0556	0012	0323	
Radiomarelli	0087	0201	0516	0247	
	0037				
Radiotone	0009	0037	0428	0579	
	0264				
Rank	0070				
Recor	0037				
Rediffusion	0201	0361	0548		
Redstar	0037				
Reflex	0037				
Revox	0037	0370			
Rex	0305	0206	0363	0411	
	0259				
RFT	0087	0292	0428	0072	
Roadstar	0009	0264	0218	0418	
Robotron	0087				
Royal Lux	0421	0412			
Roxy	0448				
RTF	0087				
Saba	0287	0213	0087	0399	
	0163	0109	0501	0516	
	0343	0361	0498	0196	
	0198	0335			
Sagem	0455	0610			
Saisho	0235	0516	0177	0009	
	0011	0217	0431	0264	
	0354				
Salora	0290	0194	0546	0349	
	0356	0359	0361	0516	
	0363	0373	0548		
Sambers	0213	0516	0102		
Samsung	0037	0556	0009	0217	
	0448	0370	0264	0090	
	0216	0290	0032	0072	
	0208				
Sandra	0216	0217			

Set-Up Codes - TV

Sanela	0238	Tandy	0218	0072	0217	0247
Sansui	0037		0276	0093		
Sanyo	0208 0157 0292 0036	Tashiko	0036	0043	0217	0146
	0011 0370 0339 0072		0170	0032	0216	0359
	0216 0217 0104 0213		0163			
	0146	Tatung	0072	0516	0217	0272
SBR	0037 0556 0012		0249	0037	0011	0244
Schaub Lorenz	0349	TEC	0217	0276	0009	0247
Schneider	0037 0012 0303 0519		0471	0335	0337	
	0394 0352 0336 0259	Technema	0320			
	0323 0343 0217 0247	Teleavia	0109	0501	0287	0196
	0371 0218 0361		0399	0333	0240	0490
SEG	0217 0264 0009 0036		0568			
	0102 0362 0037 0216	Telecor	0037	0163	0218	0217
SEI	0087 0102 0010 0516		0259			
	0213 0294 0296 0206	Telefunken	0109	0501	0498	0471
	0037		0399	0287	0074	0084
Seleco	0305 0206 0363 0259		0101	0335	0252	0262
	0362 0411		0306	0073	0343	
Sencora	0009		0196	0037	0477	
Sentra	0276 0035 0218 0009	Telegazi	0037	0163	0259	0218
Serino	0455		0264			
Sharp	0093 0157 0036 0294	Telemeister	0320	0037		
Shorai	0294 0179	Telesonic	0037			
Siarem	0087 0102 0213	Telestar	0037			
Siemens	0191 0535 0554 0200	Teletech	0009	0247	0337	0037
	0195 0213 0327 0328	Teleton	0217	0275	0206	0349
	0157 0032 0146 0037		0259			
Sierra	0037 0556 0012	Televideon	0320	0216		
Siesta	0370	Televiso	0400			
Silva	0216	Temco	0294			
Silver	0036 0361 0179	Tensai	0104	0218	0037	0217
Singer	0087 0102 0400		0294	0320	0009	0105
Sinudyne	0177 0087 0235 0102		0374	0371	0377	0247
	0213 0294 0296 0361	Tenson	0320			
	0516 0010 0206 0037	Textet	0217	0374	0009	
Skantic	0357 0356	Thomson	0287	0399	0109	0501
Sogera	0320		0333	0471	0335	0196
Solavox	0032 0361 0072 0163		0198	0237	0343	0037
	0548		0490	0568	0625	
Sonitron	0208 0370 0339	Thorn	0193	0073	0190	0238
Sonoko	0037 0009 0264 0282		0192	0074	0084	0104
	0217		0335	0512	0359	0272
Sonolor	0208 0163 0400 0505		0374			
Sontec	0037 0370 0294 0037	Tokai	0072	0037	0448	0337
Sony	0010 0505 0011 0036		0163	0217	0374	
	0102	Tokyo	0216	0035	0448	0035
Sound &		Tomashi	0282			
Vision	0102 0218 0374	Toshiba	0035	0553	0508	0243
Soundwave	0037 0320 0418		0036	0070	0102	
Ssangyong	0032 0009	Towada	0349	0102		
Stag	0032	Trans				
Standard	0218 0009 0217 0320	Continens	0217			
	0037 0374 0037	Trident	0516	0217		
Star Lite	0037	Tristar	0218	0193		
Stenway	0282 0218	Triumph	0177	0516	0346	0556
Stern	0305 0206 0259 0363		0243			
Strato	0037 0264	Uher	0076	0037	0206	0320
Sunkai	0294 0355 0321 0455		0303	0374	0418	0486
	0218 0235		0259			
Sunstar	0371 0037 0009	Ultra	0192			
Sunwood	0037 0009	Ultravox	0087	0102	0374	0216
Superla	0516 0216		0213	0037		
Supertech	0009 0037 0216	Unic Line	0037	0473		
Supra	0374 0009 0039	United	0037			
Susumu	0335	Universum	0346	0105	0535	0473
Sutron	0009		0361	0247	0492	0480
Sydney	0216 0217		0370	0200	0418	0011
Sytong	0216		0146	0512	0294	
Tactus	0272		0036	0157	0032	0070
Tandberg	0367	Univox	0337	0087	0037	0163

Set-Up Codes - VCR

Vestel	0037	0217		
Vexa	0009	0037		
Videologique	0216	0218	0217	
VideoSystem	0037			
Videotechnic	0216	0320	0217	
Videoton	0356	0431		
Visiola	0216			
Vision	0037	0320		
Vistar	0276	0206		
Vortec	0037			
Voxson	0087	0076	0037	0363
	0418			
Waltham	0217	0276	0356	0418
	0287	0385	0037	
Watson	0037	0320	0218	0305
	0213	0579	0519	0394
Watt Radio	0213	0102	0216	
Wega	0213	0036	0087	0037
Wegavox	0009			
Weltblick	0037	0320		
White				
Westing-				
house	0320	0216	0037	0337
Windstar	0282			
Xrypton	0037			
Yamashi	0282	0455	0218	0037
	0217			
Yokan	0037			
Yoko	0217	0037	0218	0264
	0009	0431	0421	0305
	0339			
Yorx	0218			
Zanussi	0206	0305	0363	0217
Zenor	0339			

VCRs

Adelsound	0004			
Adyson	0072			
Aiwa	0307	0000	0041	0209
	0348	0352	0037	
Akai	0106	0315	0053	0041
	0020			
Akiba	0072			
Akitan	0295			
Akura	0072	0041		
Alba	0278	0072	0333	0334
	0209	0352	0192	0020
	0295	0000	0315	0352
	0348			
Allorgan	0240			
Allstar	0322	0081		
Ambassador	0020			
Amstrad	0000	0325	0332	0278
	0072			
Anitech	0072	0322		
Ansonic	0004			
Aristona	0081			
ASA	0037	0081		
Asuka	0072	0037	0081	0000
AudioSonic	0278			
Audioton	0020			
Baird	0106	0278	0104	0107
	0041	0000		
Bang & Olufsen	0499			
Basic Line	0278	0209	0020	0072
Bestar	0278	0020		
Black Panther				
Line	0278			

Blaupunkt	0226	0081	0154	0227
	0162	0006	0195	0403
	0034			
Bondstec	0020	0072		
Bosch	0154			
Brandt	0041	0187	0206	0320
	0321	0493		
Brionvega	0344			
Bush	0072	0278	0315	0333
	0334	0209	0352	0293
Canon	0167			
Carena	0209	0081		
Carrefour	0045			
Cathay	0278			
Catron	0020			
CGE	0041	0000		
Cimline	0072	0209		
Clatronic	0020			
Combitech	0352			
Condor	0020	0278		
Crown	0278	0072	0020	0322
Daewoo	0278	0020	0045	
Dansai	0072	0278		
Daytron	0278			
Decca	0000	0041	0081	0008
	0067			
DeGraaf	0042	0166	0081	0104
	0048	0046		
Diamant	0037			
Domland	0209			
Dual	0041	0081	0278	
Dumont	0000	0081	0104	0105
ESC	0278	0240		
Elbe	0278	0038		
Elcatech	0072			
Elin	0240			
Elsay	0072			
Elta	0072	0278		
Emerson	0072	0045		
ESC	0278	0020	0240	
Etzuko	0072			
Europhon	0020			
Ferguson	0107	0041	0320	0321
	0053	0493	0000	
Fidelity	0000	0072		
Finlandia	0104	0081	0042	0166
	0000	0048		
Finlux	0000	0081	0104	0042
	0105			
Firstline	0072	0209	0348	0043
	0037	0045	0042	0088
Fisher	0047	0104	0054	0046
	0038	0020		
Flint	0209			
Frontech	0020	0322		
Fujitsu	0000			
Funai	0000			
Galaxis	0278			
Galaxy	0000			
GBC	0020			
GEC	0081			
General	0020			
General				
Technic	0348			
Genexxa	0104			
Goldhand	0072			
Goldstar	0037	0000		
Goodmans	0000	0072	0240	0278
	0062	0037	0020	0343
	0081	0348	0209	0403
	0293			

Set-Up Codes - VCR

Graetz	0041	0104	0240	0344	Migros	0227	0226	0454	0006
Granada	0104	0046	0048	0081	Minerva	0195			
	0285	0410	0006	0240	Mitsubishi	0043	0067	0075	0081
Grandin	0037	0226	0042	0000		0173			
	0072	0037	0020	0000	Multitech	0000	0072	0020	0104
Grundig	0278					0322			
	0007	0195	0081	0347	Murphy	0000			
	0349	0226	0006	0403	National	0226	0162		
	0320				NEC	0041	0038	0067	0040
Hanimex	0295	0352			Neckermann	0041	0208	0006	0081
Hanseatic	0037	0209	0278			0344			
Hantor	0020				Nesco	0072			
Harwood	0072				Nikkai	0020	0072	0278	
HCM	0072	0322			Nokia	0104	0106	0041	0278
Hinari	0004	0072	0293	0208		0046	0344	0240	0048
	0209	0352	0041	0322		0042	0081		
	0088	0343	0278		Nordmende	0041	0384	0320	0321
Hisawa	0209	0352				0187	0494	0528	
Hitachi	0042	0166	0105	0041	Oceanic	0000	0048	0106	0081
	0285	0410	0000	0240		0104	0041	0046	
	0081	0004	0104		Okano	0315	0209	0348	0072
Hornophone	0081					0322			
Hypson	0072	0209	0278		Orion	0209	0004	0088	0208
Impego	0020					0352	0295	0343	0348
Imperial	0000	0240				0333	0334		
Ingersol	0004	0209			Orson	0000			
Inno Hit	0020	0240	0278	0322	Osaki	0000	0037	0072	
	0072				Osume	0293			
Interbuy	0037	0072			Otake	0333	0334		
Interfunk	0081	0104			Otto Versand	0081			
Intervision	0000	0278	0037	0209	Palladium	0072	0315	0037	0041
	0348					0006	0209	0004	0240
Irradio	0072	0037	0081		Panasonic	0226	0227	0162	0454
ITT	0106	0041	0046	0344	Pathe Cinema	0004	0043		
	0384	0104	0240		Pathe Marconi	0041			
ITV	0278	0037	0020		Perdio	0000	0209		
JVC	0041	0067	0008	0206	Philco	0038	0072		
	0384				Philips	0081	0006	0146	0403
Kaisui	0072				Phonola	0081			
Kendo	0106	0209	0315	0053	Pioneer	0067	0081	0042	
	0348	0072			Portland	0020	0278		
Kenwood	0041				Prinz	0000	0088		
Kimari	0047				Profex	0322			
Kneissel	0352	0209	0348		Profi-Tronic	0081	0240		
Korpel	0072				Proline	0000	0293		
Kuba	0047				Prosonic	0209	0278		
Kyoto	0072				Provision	0278			
LG	0037	0000			Pye	0081			
Leyco	0072	0088			Quelle	0006	0208	0081	0344
Loewe Opta	0081	0006	0037	0105	Radialva	0037	0072	0081	0048
	0004	0454	0162		Radiola	0081			
Logik	0004	0240	0072	0106	Rex	0041	0384		
	0209				RFT	0020	0403	0072	
Luxor	0106	0046	0043	0072	Roadstar	0240	0072	0037	0278
	0062	0104	0047		Royal	0322	0072		
M Electronic	0000	0037			Saba	0041	0187	0206	0320
Magnavox	0081	0403				0321	0384	0494	
Manesth	0072	0045	0081	0209	Saisho	0004	0209	0208	0192
Marantz	0081	0038	0006	0062		0088	0348		
	0295	0209			Salora	0046	0043	0106	0104
Marquant	0322				Samsung	0240	0432		
Matsui	0209	0004	0192	0295	Samurai	0020			
	0348	0037	0208	0088	Sansui	0041	0067	0106	
	0240	0352	0332	0000	Sanwa	0004			
Mediator	0081				Sanyo	0104	0046	0047	0048
Medion	0209	0348			Saville	0352	0278	0240	
M-Electronic	0037	0000			SBR	0081			
Memorex	0104	0000	0046	0037	Schaub				
	0048	0047			Lorenz	0041	0344	0106	0000
Memphis	0072					0104			
Metz	0195	0347	0081	0162					

Set-Up Codes - VCR

Schneider	0072 0000 0037 0081	White Wes-	
	0042 0278 0240	tinghouse	0344
SEG	0072 0240 0322 0278	Yamashi	0072 0278
	0075	Yokan	0072
SEI-Sinudyne	0004 0081	Yoko	0037 0072 0020 0240
Seleco	0041 0008 0384 0020		
	0037		
Sentra	0072 0020 0293		
Sentron	0072		
Sharp	0048 0062		
Shintom	0072 0104		
Shivaki	0037		
Shorai	0088 0004		
Siemens	0195 0006 0037 0104		
	0007 0081 0146 0054		
Sierra	0081		
Silva	0037		
Sinudyne	0004 0081		
Solovox	0020		
Sonitron	0047		
Sonneclair	0072		
Sonoko	0278		
Sonolor	0048		
Sontec	0037		
Sony	0033 0034 0032 0011		
	0106		
Soundwave	0037		
Ssangyong	0072		
Standard	0278		
Starlite	0037 0104		
Stern	0278		
Sunkai	0209 0295 0348		
Sunstar	0000		
Suntronic	0000		
Sunwood	0072		
Supra	0037 0240		
Symphonic	0000 0072		
Taisho	0004 0209 0088		
Tashiko	0000 0048 0240 0081		
	0037		
Tatung	0000 0041 0081 0053		
	0048 0043 0209		
TEC	0020 0278 0072		
Teleavia	0041 0187		
Telefunken	0187 0041 0320 0321		
	0384 0493 0494		
Teletech	0322 0072		
Tenosai	0072		
Tensai	0000 0322 0037 0072		
	0004		
Thomson	0041 0384 0320 0206		
	0321 0493 0494 0528		
Thorn	0041 0104 0037		
Tokai	0072 0037 0041 0104		
Toshiba	0045 0041 0384 0043		
	0081 0403		
Towada	0322 0072		
Towika	0072		
Triumph	0208		
TVA	0020		
Uher	0037 0240 0344		
Ultravox	0344 0278		
Unitech	0240		
United Quick			
Star	0278		
Universum	0000 0325 0081 0240		
	0037 0106 0348 0195		
	0006 0209 0348 0322		
Victor	0008 0067		
Watson	0081		
Weltblick	0037		

* Excludes a few models in the LX and LS series.

Advanced Features

Controlling Colour & Brightness

Depending on the functions of your original remote control, the ONE FOR ALL 3 may operate the colour and brightness settings of your Television.

By pressing MAGIC followed by a Volume or Channel key, you can access these functions. To adjust the colour and brightness settings:

Colour up =	Press		then hold	
Colour down =	Press		then hold	
Brightness up =	Press		then hold	
Brightness down =	Press		then hold	

Punch Through

You may be able to use some features of your Television and Video Recorder at the same time. If you're watching a programme on your Video, you can adjust the volume (a TV function) without first pressing the TV key. The chart below lists some of the possibilities:

Last Key Pressed:	You Can Control:
VCR	TV volume up and down, mute
AUX	TV volume up and down, mute

Advanced Features

Teletext and Fasttext

The ONE FOR ALL 3 is designed to operate the basic functions of teletext (text on, text off, expand and hold).

Symbol	Title	Description
	TEXT	Puts the Television in the teletext mode.
	TV	Switches the Television back to regular viewing mode. On some Televisions, this may be done by pressing the TEXT key several times.
	EXPAND	Shows the top half of the teletext page in larger letters. By pressing again, you can see the bottom half of the teletext page enlarged. To return to regular teletext viewing, press the EXPAND key again, or press the TEXT key, depending on your television.
	HOLD/STOP	Stops changing pages.

The keys marked red, green, yellow and blue are used to access the fasttext functions of your TV.

Important note: For a more detailed explanation of teletext and fasttext, please refer to the manual of your Television. Remember, different Televisions control teletext and fasttext features in different ways. Not all of the teletext functions may be available for your particular model.

Advanced Features

Sleeptimer

Sleeptimer is a feature which comes built into many TVs. It allows you to set your device to turn off within a certain amount of time. This feature comes in handy if, for example, you enjoy falling asleep with your television on.

With the ONE FOR ALL, there are two ways to use the sleeptimer. If your TV came with this feature built in, follow the instructions "Device Sleeptimer" below. If your device did not come with this feature, follow the instructions "ONE FOR ALL Sleeptimer"

Device Sleeptimer

If your TV has a "Sleeptimer" function built in, you can access this function with your ONE FOR ALL remote. To do so:

- 1** Make sure your TV is switched on.
- 2**  Press the device key (**TV**).
- 3** 
 Point the ONE FOR ALL at your TV and press and release **MAGIC** then press **POWER**. You should see the Sleeptimer activate on your TV screen.
To increase the timer, simply press **POWER** again (within 5 seconds) until the timer gets to the desired time.

To deactivate the Sleeptimer, repeat steps 1-3 above. During step 3, continue pressing Power until the timer indicates zero minutes.

Important note: Remember, your device must have its own Sleeptimer function in order for the above instructions to operate. If your device does not have its own Sleeptimer, follow the instructions outlined on the next page.

Advanced Features

The ONE FOR ALL Sleptimer

Your ONE FOR ALL remote comes with an internal Sleptimer function for those devices (TV) which did not come standard with this function. To use the ONE FOR ALL Sleptimer:

Making your ONE FOR ALL ready for Sleptimer:

- 1  Press the device key (TV).
- 2  Then, **press and hold MAGIC** until the red light blinks twice. Press **970**. The red light will blink twice again. It is only necessary to perform steps 1 and 2 once. Now to set the timer, continue with the steps below.

Setting the ONE FOR ALL Sleptimer:

It is possible to set the timer for 15, 30, 45 or 60 minutes. To do this, first make sure your TV is switched on. **Press the Device key (TV).**

Then, press and release **MAGIC** then press **POWER**.

-  (:15) The red light will blink *once* which indicates the timer is set for 15 minutes. To increase the timer, simply press **POWER** again (this must be done within 5 seconds). The light will blink *twice* indicating the timer is set for 30 minutes (2x 15). You can press POWER to a maximum of four times which will set the timer to 60 minutes.
-  (:30)
-  (:45)
-  (:60)

Once you have set the timer to the desired time, set your ONE FOR ALL remote down, pointing it at your device. When the programmed amount of time has elapsed, the ONE FOR ALL will send the command for Power, hence turning off your device.

Important notes:

- The red light on the ONE FOR ALL will blink every 15 seconds indicating that the remote is in Sleptimer mode.
- To deactivate the Sleptimer, simply press any key on the ONE FOR ALL remote.
- Also, it is only necessary to follow steps 1 and 2 above one time. For subsequent use of the Sleptimer, simply begin with "Setting the ONE FOR ALL Sleptimer".
- To switch the ONE FOR ALL back to Device Sleptimer (page 21), repeat steps 1-2 above. The red light will blink 4 times.
- Remember, when using the ONE FOR ALL Sleptimer, you must set the remote so it is pointing to your device.

Programme Scan

Scan

Your ONE FOR ALL 3 comes with a special Scan function which lets you "scan" through every programme available on your TV or VCR.

For example, to scan the programmes on your TV:

1



Aim the ONE FOR ALL 3 at your TV. Press the **TV** key. Press and release **MAGIC** then press the **MUTE** key.

The ONE FOR ALL 3 will send the command to advance through all the programmes available on your Television stopping at each programme for about three seconds. Remember, you must aim the ONE FOR ALL at your device the entire time you are using Scan.

2



When you find a programme you would like to watch, simply press the device key you are using (TV, VCR). In this case press the **TV** key.

Important notes:

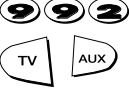
 
- To use Scan with your VCR, follow the same instructions above, only press the VCR key during step 1 and 2.
- Scan may not function with devices that did not have a programme +/- key on the original remote control.

Advanced Features

Using the AUX Key

The AUX key on your ONE FOR ALL 3 can be used to control a second Television or Video Recorder.

To set up the AUX key to control a second TV:

- 1**  **Press and hold down the MAGIC key** until the red light blinks twice (the light will blink once, then twice).
- 2**  **Press 9 9 2 TV AUX.** The LED will blink twice.
- 3**  Find your Television code in the Set-Up Code section (starting on page 11). Codes are listed by brand name. The most popular code is listed first. Make sure your Television is switched on.
- 4**  Press and release your ONE FOR ALL 3's **AUX** key, **then press and hold down the MAGIC** key until the ONE FOR ALL 3's red light blinks twice.
- 5**  Enter your **four-digit TV code** using the number keys. The red light will blink twice.
- 6**  Now, aim your ONE FOR ALL 3 at your Television and press **POWER**. If your Television switches off, your ONE FOR ALL 3 is ready to run your Television. When you want to control your second TV, press AUX first.

Make sure you write down your code in the boxes provided inside the battery compartment and on page 10 for easy future reference.

Important note: To set up a second Video Recorder, follow the same instructions above, only press the VCR key instead of the TV key during step 2.

Advanced Features

Changing the Device Keys

If you want, you can change any of the device keys (TV, VCR or AUX) to operate another type of device. The chart below lists how to change the keys and to set up that device:

To programme a:	Press:
TV on the AUX key	MAGIC* 992 TV AUX, then AUX MAGIC* TV Code
VCR on the AUX key	MAGIC* 992 VCR AUX, then AUX MAGIC* VCR Code
VCR on the TV key	MAGIC* 992 VCR TV, then TV MAGIC* VCR Code
TV on the VCR key	MAGIC* 992 TV VCR, then VCR MAGIC* TV Code

*** Hold down the MAGIC key until the red light blinks twice.**
(the light will blink once then twice)

To reset a device key to its original function, press:

TV key	MAGIC* 992 TV TV
VCR key	MAGIC* 992 VCR VCR
AUX key	MAGIC* 992 AUX AUX

*** Hold down the MAGIC key until the red light blinks twice.**
(the light will blink once then twice)

Trouble-Shooting

Helpful Hints

Problem:

Solution:

Red light does not blink when you press a key?	Replace batteries with 2 fresh, new "AA/LR6" alkaline batteries.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the at your device.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 8.
Your brand is not listed in the code section?	Try the search method on page 8.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Press a key but get the wrong result?	Hold MAGIC until the red light blinks twice, then press 992 and the device key twice. You will need to set-up your device again. Try the codes for brand or the search method on page 8.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
You cannot control the volume feature of your TV/Video Combination unit.	Hold MAGIC until the red light blinks twice. Then press 993 then Vol+. To set the Volume back to TV (Punch-Through), hold the MAGIC until the red light blinks twice, then press 993 TV.
Video not recording?	As a safety feature on your ONE FOR ALL, you must press the Record key twice.
You're having problems operating all the functions of your device	The ONE FOR ALL may just need customising for your model type. Just call our consumer help-line and we'll get you on the right track.

Trouble-Shooting

Consumer Help-Line

If you have any questions about the operation of your new ONE FOR ALL 3 Universal Remote Control, you may call our consumer help-line for assistance. Before calling, please read this manual carefully to find an answer to your question. If you cannot find a solution in this manual, we ask that you complete the information below on all your equipment before calling. **Please ensure you have this information ready upon speaking to our customer service department also if done via fax or e-mail.**

In the UK: phone: 0800 966 194
 fax: +31 53 432 9816
 e-mail: ofahelp@ueic.com
 hours: 9 am-7 pm Mon-Fri / 9 am-3 pm Sat

In Ireland: phone: 1-800 553 118
 fax: +31 53 432 9816
 e-mail: ofahelp@ueic.com
 hours: 9 am-7 pm Mon-Fri / 9 am-3 pm Sat

In Australia: phone: 1-800 064 472
 e-mail: ofahelp@ueic.com

We need to know:

- **Your remote model: URC-7530**

- **Date of purchase:** / /
 day/month/year

- **Your devices:**
(The first row is an example of how to complete this table)

TYPE	BRAND	MODEL NR.	REMOTE MODEL NR.	ONE FOR ALL CODE
TV	Sony	KVX-2950B	RMT-V131B	0011

Type numbers can be found in your equipment's owner's manual or on the factory plate behind the device.

Guarantee

UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal use for a period of ninety (90) days from the date of the original purchase. Product will be replaced free of charge if it has been proven to be defective within the 90-day period when said product is returned at customer expense within the warranty period. THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not cover damage or failures caused by products or services not supplied by ONE FOR ALL, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, fire, water, lightning or other acts of God. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets, or any other items used in connection with the product.

There are no express warranties except as listed above. ONE FOR ALL SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid and adequately insured to the address below, together with your purchase receipt or other proof of the date of original purchase.

In the UK:

ONE FOR ALL
PO Box 197
Yateley Hampshire
GU46 6ZR

In Ireland:

Sherlane Agencies Ltd./OFA
Rockford Works
Deansgrange Rd.
Blackrock, County Dublin

In Australia

Kenmark Industrial (A)/OFA
CO.PTY.LTD.
106 Mitchell Street
Maidstone vic 3012

IMPORTANT:

IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD, YOU MUST INCLUDE YOUR PURCHASE RECEIPT so that we may establish your eligibility for service and can replace your unit without cost. It would be helpful if you included a note detailing the problem. IF THE UNIT IS RETURNED FOR SERVICE OUTSIDE THE WARRANTY PERIOD, please include a cheque to cover the cost of replacement, handling and return postage. (Prices may differ per model. Please contact ONE FOR ALL customer service in your country for exact amount.)

NOTHING IN THIS GUARANTEE AFFECTS YOUR STATUTORY RIGHTS.

ONE FOR ALL, and "ONE FOR ALL 3" are trademarks of Universal Electronics Inc.

Copyright 1998 by Universal Electronics Inc. All rights are reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

URC-7530
700933



Printed on Recycled Paper

DD-0798